

Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

WARNING! Violation of the instructions may cause serious injury or death.



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.

3. Never store your phone in temperatures less than -4°F or greater than 122°F .

4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



6. Do not use a hand-held phone while driving.
7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

Important Safety Precautions



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.



4. Do not use your phone in high explosive areas as the phone may generate sparks.



5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.

7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.

8. Do not disassemble the phone.



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
2. Do not hold or let the antenna come in contact with your body during a call.



3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.
4. Store the battery out of reach of children.



5. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.



8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



9. Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Contents

Important Safety Precautions . 1

Contents 4

Welcome 9

Technical Details 10

Important Information 10

Technical Details 10

Bodily Contact During Operation . 11

Vehicle-Mounted External

Antenna 11

FCC Notice and Cautions 12

Part 15.105 statement 13

Phone Overview 14

Getting Started with Your Phone 16

The Battery 16

Installing the Battery 16

Removing the Battery 16

Turning the Phone On and Off 17

Turning the Phone Off 17

Charging the Battery 17

Charging with USB 18

How to Install Your microSD™

Card 18

How to Remove Your microSD™

Card 19

Battery Temperature Protection 19

Battery Charge Level 19

Signal Strength 20

Screen Icons 20

Making Calls 20

Correcting Dialing Mistakes 21

Redialing Calls 21

Receiving Calls 21

Menu Tree on the Screen 22

A Quick Glance at the Touch Screen and How to Use It 24

Touch-Sensitive Soft Keys 24

How to Unlock 25

How to Scroll Using the Touch

Screen 25

Shortcut Menu 26

Touch Screen Menu Tree 27

Touchpad Shortcut Menu 28

Standby Mode Idle Screens 28

Changing Standby Mode

Idle Screens 29

Shortcuts Item List	30	Camera Features.....	41
Quick Access to Features	31	Video Camcorder Feature	43
Vibrate Mode	31	Picture Editing.....	44
Mute Function	31	Video Editing.....	46
Quick Volume Adjustment.....	31	Call	47
Call Waiting	31	1. Contact	47
Ignoring a Waiting Call	32	2. Call History	47
Answering a Waiting Call	32	3. Voicemail	48
Voice Commands	32	4. New Number	48
Entering and Editing		5. Favourites	49
Information.....	33	Send	49
Text Input.....	33	1. Message	49
Changing Input Method.....	34	2. Name Card.....	51
Contacts in Your Phone's		3. My Pictures.....	52
Memory.....	36	4. My Videos	54
Storing Basics.....	36	5. My Sounds.....	55
Editing Individual Entries	37	6. Calendar	57
Speed Dialing.....	37	7. Drawing.....	58
Adding a Speed Dial.....	38	Create	58
Deleting a Speed Dial	38	1. Contact	58
Storing a Number with Pauses	39	2. Message	59
Camera Features.....	40	3. Alarm	59
3-D Rotation (Three-axis		4. My Pictures.....	60
accelerometer) Rotation	40	5. My Videos	61
		6. My Sounds.....	62

7. Calendar	62	5. Apps.....	89
8. Drawing.....	63	Contact List.....	89
9. Note	64	Message List.....	90
Play	64	Alarm.....	93
1. mobile music.....	64	Camera	93
2. My Pictures.....	65	mobile music.....	93
3. My Videos	65	My Media.....	93
4. My Sounds.....	66	Wireless Web.....	94
5. My Ringtones	67	Settings	94
6. Games	67	1. Sounds Settings.....	94
7. mobile TV.....	68	1.1 Master Volume.....	94
8. mobile radio	68	1.2 Call Sounds.....	95
Connect.....	68	1.3 Alert Sounds	96
1. Wireless Web.....	68	1.4 Keypad Volume	97
2. Bluetooth	77	1.5 Service Alerts.....	97
3. My Email 2.0.....	84	1.6 Power On/Off.....	98
4. Messenger 2.0	85	2. Display Settings.....	98
5. Go to Site	86	2.1 Banner.....	98
6. Bookmarks.....	86	2.2 Backlight.....	99
7. Navigator	86	2.3 Wallpaper.....	100
Download.....	87	2.4 Screensaver	100
1. Pictures	87	2.5 Menu Fonts	101
2. Videos.....	87	2.6 Dial Fonts	101
3. Ringtones.....	88	2.7 Menu Style.....	102
4. Games	88	2.8 Time Format.....	102

2.9 Home Screen Order.....	102	7.2 Phone Memory.....	120
3. Games & Apps.....	103	7.3 Card Memory.....	120
4. Phone Settings.....	104	7.4 USB Mass Storage.....	121
4.1 Airplane Mode.....	104	8. Phone Info.....	121
4.2 Media Mode.....	104	8.1 My Number.....	121
4.3 Set Qwerty Shortcut.....	105	8.2 SW/HW Version.....	121
4.4 Keyguard Setting.....	105	8.3 Icon Glossary.....	121
4.5 Voice Commands.....	106	Games & Apps.....	122
4.6 Language.....	106	Tools.....	123
4.7 Location.....	107	1. Bluetooth Menu.....	123
4.8 Security.....	107	2. Voice Recorder.....	123
4.9 System Select.....	111	3. Voice Commands.....	123
4.10 NAM Select.....	112	3.1 Call <Name or Number>.....	123
4.11 Serving System.....	112	3.2 Send Msg to <Name or Number>.....	124
5. Call Settings.....	113	3.3 Go to <Menu>.....	124
5.1 Answer Options.....	113	3.4 Check <Item>.....	124
5.2 Auto Retry.....	113	3.5 Lookup <Name>.....	124
5.3 TTY Mode.....	114	3.6 Help.....	124
7.4 One Touch Dial.....	115	4. Calculator.....	125
5.5 Auto Prepend.....	116	5. Ez Tip Calculator.....	125
5.6 DTMF Tones.....	116	6. Calendar.....	126
5.7 Do Not Disturb.....	117	7. Alarm Clock.....	126
5.8 International Dialing.....	117	8. Stopwatch.....	126
6. Touch Settings.....	118	9. World Clock.....	127
7. Memory.....	119	10. Notepad.....	127
7.1 Save Options.....	119		

11. Drawing Pad.....	127
12. USB Mass Storage.....	128
Call History	129
Keypad	129
Bluetooth.....	129
E-mail	129
IM.....	129
TV & Radio	129
Voicemail	129
Safety	130
TIA Safety Information.....	130
Safety Information	133
Caution: Avoid potential hearing loss.....	140
FDA Consumer Update	142
10 Driver Safety Tips.....	151
Consumer Information on SAR.....	154
FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices.....	157
Accessories	160
LIMITED WARRANTY STATEMENT	161

Thank you for choosing the LG9600 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this compact phone offers:

- TELUS Mobile Music
- TV & Radio
- Get New Pictures
- Get New Videos
- Mobile IM
- Navigator
- Mobile Email
- Touch Screen and auto Touch Screen lock
- Customizable display themes and screensavers
- Built-in 2.0 Megapixel digital camera
- 3-D Rotation (Three-axis accelerometer)
- Large, easy-to-read, 8-line backlit

LCD with status icons

- Paging, messaging, Voicemail, and caller ID
- Quick Access to the HTML Browser
- Music & Media
- Long battery standby and talk time
- Easy Touch Screen operation for choosing menus and responding to prompts
- Handwriting screens for writing text or drawing pictures
- Any key answer, auto with hands-free, auto retry, one-touch and speed dialing, with 999 memory locations
- Bilingual (English and French)
- Bluetooth® wireless technology

Note

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc, and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

Technical Details

Important Information

This user's guide provides important information on the use and operation of your phone. Please read this guide carefully prior to using the phone to be able to use your phone to its greatest advantage and to prevent any accidental damage or misuse. Any unapproved changes or modifications will void your warranty.

Technical Details

The LG9600 is an all digital phone that operates on both Code Division Multiple Access (CDMA) frequencies: cellular services at 800 MHz and Personal Communication Services (PCS) at 1.9 GHz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple

users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft/ softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station).

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible. EV-DO system is optimized for data service and is much faster than 1xRTT system in applicable area.

The table on the following page lists some major CDMA standards.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.79 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum

separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.79 inches (2.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted external antenna. For more information about RF exposure, visit the FCC website at www.fcc.gov.

Technical Details

FCC Notice and Cautions

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device

and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000	CDMA Dual-Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band CDMA2000 1xRTT Air Interface
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short Message Service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
1x EV-DO Related interface	TIA/EIA/IS-856 TIA/EIA/IS-878 TIA/EIA/IS-866 TIA/EIA/IS-890	CDMA2000 High Rate Packet Data Air Interface 1xEV-DO Inter-Operability Specification for CDMA2000 Access Network Interfaces Recommended Minimum Performance Standards for CDMA2000 High Rate Packet Data Access Terminal Test Application Specification (TAS) for High Rate Packet Data Air Interface

undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.


Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment

generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
Phone Overview

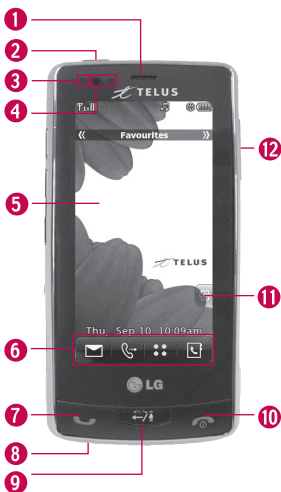

Note

Standby mode is when the phone is waiting for input from you. No menu is displayed and the phone isn't performing any action. This is the starting point for all actions.

 - 1. Earpiece** Lets you hear the caller.
- 2. Unlock/Lock Key** Unlocks or locks the Touch Screen and keys in standby mode.
- 3. Light Sensor** Detects the amount of light and adjusts the brightness of the LCD screen. This conserves power and extends LCD screen life.
- 4. Proximity Sensor** When you are close (within 2 to 3 cm) to the sensor during a call, the LCD screen turns off and only allows you to adjust the volume or end the call, preventing you from inadvertently activating a feature. When blocked with a phone case or other items, the LCD backlight turns off as well.
- 5. Touch Screen** Displays incoming calls, messages, and indicator icons as well as a wide variety of content you personally select.
- 6. Touch Soft Keys** The Touch Keys on the Touchpad include Messaging, Call, Menu, and Contacts. Tap with your fingertip for easy operation.
- 7. SEND Key** Makes and answers calls.
- 8. Microphone** Captures your voice for calls, recordings, voice commands, and so on.
- 9. Clear/Voice Command/Voice Recorder Key** Deletes single characters (quick press) or entire words (press and hold) while entering text. Back out of menus, one level at a time. In standby mode, activate **VOICE COMMAND** (quick press) or **VOICE RECORDER** (press and hold).
- 10. Power/END Key** Turns the power on/off and ends calls. Also returns the phone to standby mode.
- 11. Shortcut Menu Touch Key** Allows access to customized cubic menus (**Favourites/Shortcuts/Media**).
- 12. microSD™ Slot** Accommodates optional microSD Cards.



- 1. 2.5-mm Headset jack** Allows you to plug in an optional headset for convenient, hands-free conversations.
- 2. Camera Key** Use for quick access to the camera feature. Press once to activate the camera. Press and hold the Camera Key to record video.
- 3. Side Volume Keys** Use to adjust the **MASTER VOLUME** in standby mode* and the **EARPIECE VOLUME** during calls.
- 4. Cover Lock Latch** Use to detach the battery cover from the phone.
- 5. Accessory Charger Port** Connects the phone to the battery charger, USB cable, or other compatible accessory.
- 6. Camera Lens** Keep it clean for optimum photo quality.

Note

Press the Unlock Key or any other side key to illuminate the Touch Screen. Press the Unlock Key again, or tap the padlock icon to unlock the Touch Screen.

Getting Started with Your Phone

The Battery

 
Note

It is important to fully charge the battery before using the phone for the first time.

The phone comes with a rechargeable battery. Keep the battery charged while not in use to maximize talk and standby time. The battery charge level is displayed at the upper right corner of the LCD screen.

Installing the Battery

1. Insert the bottom of the battery into the opening on the back of the phone.
2. Push the top of the battery down until it clicks into place.

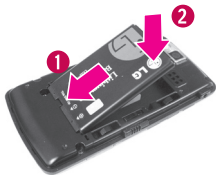

Removing the Battery

1. Turn the power off. Slide the cover lock latch down in the direction of the arrow.
2. Carefully separate the battery cover from the phone.




3. Place a fingertip into the notch to lift the edge of the battery for removal.






Turning the Phone On and Off

Install a charged battery, or connect the phone to an external power source.

1. Press the Power/End Key  for a few seconds until the Touch Screen lights up.

Turning the Phone Off

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Press the Power/End Key  for a few seconds until the display turns off.

 
Charging the Battery

Your LG9600 device comes with a travel adapter and USB data cable; they connect together to charge your phone. To charge your phone:

Note

Please use only an approved charging accessory to charge your LG phone. Improper handling of the charging port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.

1. Connect the USB data cable to the travel adapter. When connected as shown below, the LG logo on the USB cable should face toward you.

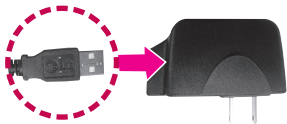

2. Gently uncover the accessory charging port, and then plug the end of the AC adapter into the phone's charger port and the other end into an electrical outlet.

Getting Started with Your Phone



3. The charge time varies depending on the battery level.

Charging with USB

You can use your computer to charge your phone. To charge with the USB cable, you must have the necessary USB drivers installed on your PC. Connect one end of the USB cable to the charging accessory port on your phone and the other end to a high-power USB port on your PC.

Note

The LG USB Driver is downloadable from the following site: <http://mobilephones.us.lge.com> > Click Mobile Support > Select a Carrier (Telus) > Select a Model > Click USB Cable Driver to download.

How to Install Your microSD™ Card

1. Locate the microSD™ Card slot on the right side of the phone, and gently uncover the slot opening (the microSD™ Card slot cover stays attached to the phone so you don't lose it).
2. Insert the microSD™ Card in the correct direction until it clicks into the slot. If you insert the card in the wrong direction, it may damage your phone or card.

How to Remove Your microSD™ Card

1. Gently press and release the exposed edge of the microSD™ Card to eject it.
2. Remove the microSD™ Card from the slot and replace the cover.

Note

Do not remove the microSD™ Card while reading or writing to the card.

Note

If you want to transfer music to a microSD™ Card inserted into this phone (either through MTP Sync or Over the Air), you must first format the microSD™ Card on this phone. Warning: Formatting the microSD™ Card will delete everything from the card. In the event the microSD™ Card is used on this phone without first formatting it, the phone will display a "MOD license acquisition error." Song files downloaded or otherwise purchased from third-party providers and stored on a microSD™ Card inserted into this phone may be protected or encrypted by the provider and therefore unable to play on this phone.

Battery Temperature Protection

If the battery overheats, the phone will automatically turn off. When you turn the phone back on, a pop-up message will let you know that the phone was turned off for your safety.

Battery Charge Level

The battery charge level appears at the upper right of the LCD screen. When the charge level becomes low, the battery sensor sounds a warning tone, blinks the battery icon, and displays a warning message. As the charge level approaches empty, the phone automatically turns off without saving any data.





Getting Started with Your Phone

Signal Strength

Call quality depends on the signal strength in your area. You can tell how much signal strength you have by the number of bars next to the signal strength icon: the more bars, the stronger the signal. If you're having problems with signal quality, move to an open area, or, when inside a building, try moving near a window.




Screen Icons

When the phone is powered on, the top line of the LCD screen displays phone status icons.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu key  to access the menu.
3. Tap **Settings** in the **Smart Menu** or the **Settings** icon  in the **Grid Menu**.



4. Tap **Phone Info**.
5. Tap **Icon Glossary**.

Making Calls

 

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Call key  on the home screen to display a numeric keypad, and then enter the phone number you want to call.

Note


You can also make a call to numbers in your phone's memory. Tap **RECENT** to make a call to a Recent call entry, or tap **CONTACTS** to make a call to numbers in the **Contact List**.

3. Press the Send Key , or tap .


Correcting Dialing Mistakes

If you make a mistake while dialing a number, press the Clear/Voice Commands/Voice Recorder Key  once to delete the last digit entered, or hold down the Clear/Voice Commands/Voice Recorder Key  for at least two seconds to delete all digits.


Note

To activate the speakerphone during a call, simply tap .




Redialing Calls

Press and hold the Send Key  to redial the last number you dialed, received, or missed in the **Call History**. The last 270 numbers are stored in the **Call History** list. You can select one of them to redial.



Note

To redial the last call in the recent call list, tap  to the right of the top entry in your call list.

Receiving Calls

1. When the phone rings or vibrates, simply press the Send Key  on the phone or tap **Answer**  on the screen.
2. Press the Power/End Key , or tap the End soft key on the screen to end the call.

Note

When using the device without the Qwerty Keypad and the Touch Screen is locked, tap the Unlock Touch Key , or press the Unlock Key  at the top edge of the phone. You can then tap **Answer** to answer the call.

Note

If you tap **Quiet** while the phone is ringing and unlocked, the ringing or vibration mutes for that call. If you tap **Ignore** while the phone is ringing and unlocked, the call will end.

Menu Tree on the Screen

Left Menu

Call

- Contact
- Call History
- Voicemail
- New Number
- Favourites

Send

- Message
- Name Card
- My Pictures
- My Videos
- My Sounds
- Calendar
- Drawing

Create

- Contact
- Message
- Alarm
- My Pictures
- My Videos
- My Sounds

- Calendar
- Drawing
- Note

Play

- mobile music
- My Pictures
- My Videos
- My Sounds
- My Ringtones
- Games
- mobile TV
- mobile radio

Connect

- Wireless Web
- Bluetooth
- My Email 2.0
- Messenger 2.0
- Go to Site
- Bookmarks
- Navigator

Download

- Pictures

- Videos
- Ringtones
- Games
- Apps

Quick Menu

Contact List

Message List

Alarm

Camera

mobile music

My Media

Wireless Web

Settings

- Sound Settings
 - Master Volume
 - Call Sounds
 - Alert Sounds
 - Keypad Volume
 - Service Alerts
 - Power On/Off
- Display Settings
 - Banner

- Backlight
- Wallpaper
- Screensaver
- Menu Fonts
- Dial Font
- Menu Style
- Time Format
- Home Screen Order

Games & Apps

- Backlight Settings
- Volume
- Notifications
- Others
- Plug-Ins

Phone Settings

- Airplane Mode
- Media Mode
- Set Qwerty Shortcut
- Keyguard Setting
- Voice Commands
- Language
- Location
- Security
- System Select
- NAM Select
- Serving System

Call Settings

- Answer Options
- Auto Retry
- TTY Mode
- One-Touch Dial
- Auto Prepend
- DTMF Tones
- Do Not Disturb
- International Dialing

Touch Settings

- Auto Lock
- Vibrate Type
- Vibrate Level
- Sound
- Calibration

Memory

- Save Options
- Phone Memory
- Card Memory
- USB Mass Storage

Phone Info

- My Number
- SW/HW Version
- Icon Glossary

Games & Apps

- Maps & Navigation
- Games

Apps

Tools

- Bluetooth Menu
- Voice Recorder
- Voice Commands
- Calculator
- Ez Tip Calculator
- Calendar
- Alarm Clock
- Stopwatch
- World Clock
- Notepad
- Drawing Pad
- USB Mass Storage

Call History

Keypad

Bluetooth

E-mail

IM

TV & Radio



Voicemail

A Quick Glance at the Touch Screen and How to Use It

Touch-Sensitive Soft Keys



1. Make sure your hands are clean and dry. Remove moisture from your hands. Do not use the touch keys in humid environments.
2. It is unnecessary to press the touch key sensors forcefully. Protect your phone from strong as they may damage the touch key sensors.
3. Use the tip of your finger to tap the center of a touch key. If you tap off-center, you may activate a nearby function instead.

4. You can only use touch keys when the Touch Screen is unlocked. Tap , or press the Unlock Key  at the top edge of the phone to turn on the Touch Screen.
5. Keep metal and other conductive materials away from the surface of touch keys because contact may cause electronic interference.

Warnings


- Do not place heavy objects on the Touch Screen.
- Do not sit on your phone; this may damage the Touch Screen.
- Do not drag your phone or scratch your phone with sharp materials.
- Do not store your phone under extreme conditions (places that are too humid, hot, or cold).
- Keep chemicals away from your phone; contact with chemicals may change the appearance or functional features of your phone.

How to Unlock



Touch the padlock image to unlock.

OR

Press the Unlock Key  at the top edge of the phone.







How to Scroll Using the Touch Screen

Touch the screen, and then drag (or flick) up and down to scroll the screen up or down.

Shortcut Menu

Touch Screen Features and Access

It's quick and easy to access menus and features using the LG9600 Touch Screen. With the Touch Screen, you have instant access to Messaging, Calling, Main Menus, Contact List, and Idle Screen Settings by just tapping with your fingertip. It only takes a few more taps to access anything else.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap a Touch Key.
 - Touch Soft Keys (at the bottom of the screen)
 - Shortcut Menu Key (at the right side of the screen)
3. To return to the Idle Screen, press the Clear/Voice Commands/Voice Recorder Key  or Power/End Key .



Message

Displays the Message Inbox List.

Call

Displays Dial touch keys. Dial manually or automatically (Recent Calls or Contacts).

Shortcut Menu

Adds Touch Key icons to the Idle Screen(s).

Contacts




Displays your Contact List.


Menu

Displays list of Main Menus.

 
 
Touch Screen Menu Tree


Main Menu Access

To access the Main Menu in standby mode, first unlock the Touch Screen (the Touch Screen is locked by default). Tap , or press the Unlock Key  at the top edge of the phone. Then tap the Menu Key  to access the Main Menu.

Tap the Menu Key  at the bottom of the screen to open the Main Menu.

The main menus are displayed as shown. Tap any of the menu icons to go to that menu.

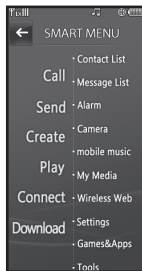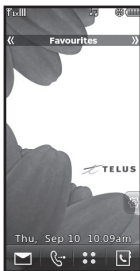

Press the Clear/Voice Commands/Voice Recorder Key  to go back to standby mode.

Some content in this user guide may differ from your phone depending on your phone's software. Features and specifications are subject to change without prior notice.

Touchpad Shortcut Menu

Standby Mode Idle Screens

Customize your Touch Screen to have instant access to features you want as close as a single tap.

The LG9600 has three Standby Mode Idle Screens for quick, direct access to several frequently used device features.

Favourites: Displays the favourite Contacts you want to instantly display, call, message, or view for contact history.

Shortcuts: Display favourite device features, such as **Calendar** and **My Pictures**, for instant access.

Media: Displays your favourite photos, videos, and music so you can show them off at a moment's notice without having to search.

Set the features and items you want on each Idle screen, and even display different backgrounds for each one.

Favourites



Shortcuts




Media



Changing Standby Mode Idle Screens

Standby mode idle screens are listed near the top of the Touch Screen. Just swipe your finger to access. With the Touch Screen unlocked, lightly flick your fingertip horizontally in either direction across the Touch Screen to instantly display the next Idle Screen.

Adding and Removing Idle Screen Touch Key Icons

Adding and removing Idle Screen icons is a snap. Simply tap the Shortcut Menu Key  on the right side of the screen, and then make your changes.

- **To Add:** Tap **ADD FAVOURITES**, **More**, or **ADD MEDIA** to view the items you can add. Choose the one(s) you want (checkmark appears). After adding the items, tap **Done**.
- **To Remove Favourites and Media icons:** Drag the icon you want to remove to the trash can icon to the bottom left of the screen, tap **Yes** to confirm, and then tap **Done**.
- **To Remove Shortcuts icons:** Tap an item to remove from the screen. For the **Clock**, **Schedule**, and **Memo** menus whose icons are on the bottom bar, simply drag the icon to the bottom bar. For the **More** menu added to the screen, the trash can icon will appear when you tap the shortcut icon. Drag it to the trash can icon, tap **Yes**, and then tap **Done**.


Touchpad Shortcut Menu

Shortcuts Item List





Alarm	My Email 2.0	TELUS Mobile Radio
Bluetooth	My Pictures	
Bookmarks	My Videos	TELUS Mobile TV
Calculator	New Multimedia	TELUS Navigator
Calendar	Message	Touch Settings
Camera	New Text Message	Wireless Web
Ez Tip Calc	Notepad	
Messenger 2.0	TELUS mobile Message	


Note

Allows you to set the **Shortcuts** menu, including **clock**, **calendar**, and **memo** by tapping the Shortcut Menu  Touch Key on the right side of the screen.

 
Quick Access to Features

Vibrate Mode


Sets the phone to vibrate instead of ring ( is displayed at the top of the phone). To set vibrate mode, press the Side Volume Keys , and then change to **Vibrate Only**.

To return to normal mode, press the Side Volume Keys , and then readjust.


OR

Using the dial pad, tap and hold  to activate/deactivate vibrate mode.

Mute Function

The Mute Function prevents the transmission of your voice. To quickly activate Mute, tap  - This option will appear during active phone calls.

Quick Volume Adjustment

Quickly adjust the ringer and earpiece volumes by pressing the Side Volume Keys ; the upper side key increases volumes, and lower decreases volume.

Note

The **EARPIECE VOLUME** can only be adjusted during a call. The **Keypad Volume** can only be adjusted through the Menu.

To turn off sounds, press and hold the lower side volume key for three seconds; likewise, to turn sounds back on, hold the upper side volume key for three seconds.

Call Waiting



 
During a call, a beep will sound to indicate you have an incoming call.

Quick Access to Features

Ignoring a Waiting Call


If you don't want to answer the incoming call, tap on the Touch Screen. The Call Waiting beep stops, and the call goes to your **Voice mail**, if available.

Answering a Waiting Call

1. Tap **Answer** or press the Send Key  to automatically put the first call on hold and answer the new call.
2. Press the Send Key  again or tap **Swap Calls**  to put the second call on hold and return to the first caller.

Voice Commands

Voice Commands allow you to do things by verbal command (e.g., make calls and confirm Voice mail). For more information, see page 78.

1. Unlock the Touch Screen, and then press the Clear/Voice Commands/Voice Recorder Key .

Note

Voice Commands can also be activated using the designated key on your Bluetooth® device. Please check the user manual of the Bluetooth® device for instructions.

Entering and Editing Information

Text Input

Each time you tap a data entry field, the Touch Screen automatically displays Touch Keys, allowing you to change the input. For example, in a name field, alphabetic Touch Keys appear, but you can tap **ABC** to select **123** and enter numbers instead.



Tap **Text Message**



Tap **Favourites, Contacts, or New #** to add a recipient.

Text
Message
Options
**Save As
Draft/
Priority
Level/
Callback#/
Cancel
Message**



Add a contact by tapping **Contacts** and then the desired contact entry. Or, enter the phone number by tapping **New #** and entering a new number using

the dial pad. Tap **DONE** when done.



Enter Text Options
**Insert Quick Text/Save Quick Text/
Insert Smiley/Priority Level/Callback
#/Cancel Message**



Tap to exit text input mode.

Tap to change the text input mode.

Handwriting/Keypad Transfer Key.

Entering and Editing Information

To enter text, you can either "type" with the Touch Keys or "write" with your fingertip. When writing with your fingertip, the Touch Screen translates your movements into characters.

1. Tap a text field, and then tap the manual writing icon  on the right side of the display.
2. Use your fingertip to write each character you want. You must write in the black box that appears in the lower half of the screen. If the Touch Screen does not display the character you intended, press the Clear/Voice Commands Key/Voice Recorder Key , and then try again.

Note

 
When you "write" on the Touch Screen, the interpreted movements will display. Gaps in lines may indicate that you need to press slightly harder for more constant contact with the Touch Screen.



- The handwriting screen is only available for entering text or the subject.




Changing Input Method

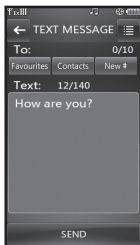- **To Change:** Tap  on the right side of the display to change from "writing" to "typing" mode.






Contacts in Your Phone's Memory





Storing Basics

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Contacts Key .
3. Tap **NEW**.
4. Tap a field, use the pop-up touch keys to enter information, and then tap **DONE**. Do this for each field.
5. When you have filled in all the fields, tap **SAVE**.

OR

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Call Key .
3. Use the number Touch Keys to enter the phone number, and then tap **SAVE**.
4. Tap **Add New Contact** to add a new phone number or **Update Existing** to update information on the existing list; then continue tapping fields and entering information as you like.

Editing Individual Entries




1. Tap , or press the Unlock Key  at the top edge of the phone.
 2. Tap the Menu Key  to access the menu, and then tap **Contact List**.
- OR
- Tap the Contacts Key .
3. Tap the Contact you want to edit.
 4. Tap **EDIT**, and then tap and edit the fields you want to change.
 5. Tap **SAVE** when you have finished making your changes.

Speed Dialing

Allows you to make phone calls quickly and easily to numbers stored in Contact List. You must set Speed Dials in your Contact List before using this feature.

Note






Speed Dial 1 is for **Voicemail**.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Call Key .
3. Tap and hold the Speed Dial digit (for a 2-digit Speed Dial, tap the first digit, and then tap and hold the second digit).






Contacts in Your Phone's Memory

Adding a Speed Dial

Allows you to set up your Speed Dials.




1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu, and then tap **Contact List**.
OR
Tap the Contacts Key .
3. Tap the Contact you want to assign to a Speed Dial.
4. Tap **EDIT**.
5. Tap the phone number, and then tap the Options icon  while on the Edit Contact screen.
8. Tap **Set Speed Dial**, and then tap an unassigned Speed Dial number.
9. When the prompt **Add Contact to Speed Dial?** appears, tap **Yes**.
10. Tap **SAVE**.

Deleting a Speed Dial

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu, and then tap **Contact List**.
OR
Tap the Contacts Key .
3. Tap the contact you want to delete from a Speed Dial.
4. Tap **EDIT**.
5. Tap the number with the speed dial you want to delete, and then tap the Options icon .
6. Tap **Remove Speed Dial**.
7. When the prompt **Remove Speed Dial?** appears, tap **Yes**, and then tap **DONE**.
8. Tap **SAVE** to exit the contact.


Storing a Number with Pauses

Pauses allow you to enter additional series of numbers to access automated systems, such as **Voicemail**. Pause types are: **Wait** (W) - The phone stops dialing until you tap the Touch Soft Key **Release** to advance to the next number. **Pause** (P) - The phone waits two seconds before sending the next string of digits.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu, and then tap **Contact List**.

OR

Tap the Contacts Key .

3. Tap the Contact you want to edit.
4. Tap **EDIT** to edit.
5. Tap the phone number, tap the Options icon , and then tap **Pause** or **Wait**.
6. Tap additional numbers, as necessary, and then tap **DONE**.
7. Tap **SAVE**.

 
Camera Features

3-D Rotation (Three-axis accelerometer) Rotation

3-D Rotation is a feature that gives you flexibility in how you view content on your screen. Simply turn your LG9600 device from vertical to horizontal (or horizontal to vertical) and get a whole new perspective. The LG9600 senses the change in orientation and automatically adjusts content to fit the screen. View an image in wide screen orientation. This feature is helpful when you're looking at photos, browsing your music by album artwork, viewing Browser websites, or even entering text.



Current image.

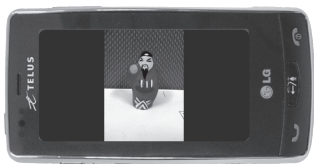

Do this:
Rotate the LG9600 sideways.
Drag or flick left or right.

Note

LG9600 rotation must be at least 90 degrees to activate 3-D Rotation.

Camera Features

The built-in 2.0-megapixel camera is complete with optics for superior photo results, including various options, effects, and controls. Refer to the next page for the icons of the features.

Resolution

Set the **Resolution (1600x1200, 1280x960, 800x400, 640x480, and 320x240)** keeping in mind that the higher the resolution, the more memory you use.

LED Flash

You can set the powerful LED flash to **On** or **Off**.

Camera Effects

Choose various effects to take just the picture you want. To catch a certain mood, use the **Color Effects** option to set the photo to **Normal, Negative, Aqua, Sepia, or Black&White**. Choose your **Shot Type** as **Normal** or **Panorama**.

Light Exposure Control

Control exposure by setting the **Photometry** to **Average** or **Spot**.

SmartPic Technology

When **SmartPic** is turned on, the picture taken is automatically enhanced with the following features:

Smart Light Light Compensation: Automatically adapts to low or unevenly distributed light for better-quality pictures.

Noise Reduction Automatically removes noise from digital images.

Face Detection

 
For better portrait quality, you can set the camera to automatically detect faces when taking pictures. You'll look polished and pretty with this feature on.

Smart Beauty Face color compensation: Automatically adapts conditions to enhance portrait images (brightness, color).

Camera Features


Camera Settings

Touch Screen to access the menu settings shown below.

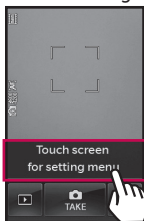

Touch Screen for setting menu.

 Camera Touch Keys

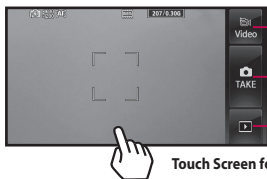


Record Video

Take Picture

My Pictures

 Touch Screen for setting menu.

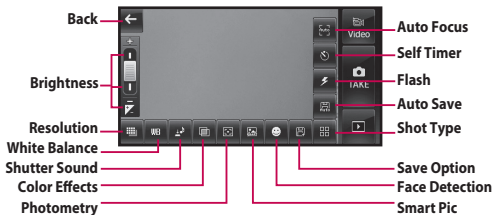

Back

Brightness

Resolution

White Balance

Shutter Sound

Color Effects

Photometry

Auto Focus

Self Timer

Flash

Auto Save

Shot Type

Save Option

Face Detection

Smart Pic

Video Camcorder Feature

Resolution

You can set the recording **Resolution** to **640x480, 320x240,** and **176x144.**

Note

If you record in VGA format, you can only store it on the device or a PC. Video Message is not supported.

 
Color Effects

To catch a certain mood, use the **Color Effects** option to set video to **Normal, Negative, Aqua, Sepia,** or **Black&White.**

Saving and Sending


After recording, you can send it in a video message (max. size is about 470 KB) or save it to your phone or external memory. After saving, you can transfer it to a PC.

Video Camera Touch Keys

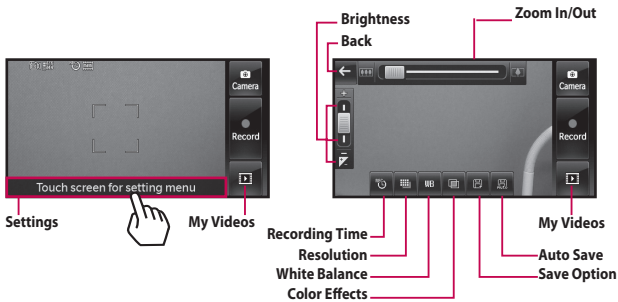


Camera Features

Picture Editing




With the LG9600's many picture editing features, you have endless possibilities for creating fun pictures. While viewing a picture, tap the Options icon , and then tap **Edit**.

 Editing Touch Keys

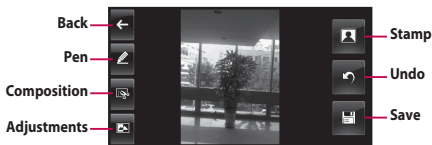

Pen Drawing

   Be creative. Draw on a photo. Choose from **Multiple Colors, Pen,** and **Eraser**. Tap , and then tap:




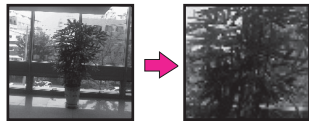 
Tap  to save.

Composition

Change your photo's composition.

Rotate, zoom, and crop to get the

look you want. Tap , and then tap:





Tap  to save.


Adjustments



Improve your photos by adjusting **CONTRAST**, **BRIGHTNESS**, **BLUR**, or **SHARPNESS**. Tap , and then tap the scroll bar of each adjustment to increase (right side) or to decrease (left side).

Frames and Stamps

To enhance your pictures, the LG9600 has multiple frames and stamps to choose from. Tap , and then tap:

 to add a Stamp.

 to add a Frame.

 or  to scroll through different screens.

Tap  to save it.

Saved Picture Edits

Don't worry about losing the original photo. When you save a photo with edits, it's saved as a copy; the original is still in **My Pictures**.





Camera Features

Video Editing

When you select a video to edit, a video editing player screen is displayed.


Editing a video to send

You can edit a video then send it as a video message to friends and family.




1. Access **My Videos**, and then tap the video clip you want to edit.
2. Tap the Options icon , and then tap **Edit For Video Msg**.
3. Tap , and then tap  at the point in the video where you want the video to start (indicated by a red triangle). Then tap  where you want it to end (indicated by a green triangle).
4. Tap **Save** to save the edited video, or tap **Save and Send** to save and send the currently edited video message.

Editing using video effects





You can edit a video using video effects.

1. Access **My Videos**, and then tap the video clip you want to edit.
2. Tap the Options icon , and then tap:

- **Multi-Trim**

Tap play  and use  to edit videos up to 3 times. You can add a fade effect between the clipped video pieces by touching  and then **Save with Fade Effect**.

- **Multi-Capture**

Tap play  and you can capture still images from video footage and save it to your device's video gallery. You can save up to five still shots. Tap  to capture. The player will pause at that position. Tap  to continue capture. After editing the video, tap  to save.







- **Add Fade Effect**

You can add a Fade Effect to the start and end of the selected video.

Call

1. Contact

Allows you to view your Contact List.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu, and then tap **Contact List**.
OR
Tap the Call Key , and then tap **Contact List**.
OR
Tap the Contacts Key .
3. Tap the Contact you want to edit.
 - Tap **EDIT**.
 - Tap **ERASE**.
 - Tap the Options icon  to select one of the following:




Send Name Card/Set As Favourite

- Tap **Message** to select one of the following:

New Text Message/New Multimedia Message

2. Call History

Allows you to view the list of all calls; up to 270 entries.





1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Call**.
4. Tap **Call History**.

Note


Touch the Options icon  to **Mark All**, **Unmark All**, **Erase All**, or **View Call Timers**.

5. Tap a Call entry to view the entry. Options from here:

Call

- Tap  to place a call to the number.
- Tap **Message** to send a **Text Message/Multimedia Message**
- For the numbers which are not saved in your Contact list, tap  to Add New Contact or Update Existing. The numbers saved in your contact list, tap  to check details.
- Tap the Options icon 
Dial 1 + Number/Erase/ Lock(Unlock)/View Call Timers






Shortcut

To view a quick list of all your Call History, press the Send Key  in standby mode.

3. Voicemail



Allows you to view the number of new voice messages recorded in the **Voicemail** box. Once you


have exceed the storage limit, old messages are overwritten. When you have a new voice message, your phone will alert you.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Call**.
4. Tap **Voicemail**. You will access the voicemail system.
5. Options:
 - Press the Send Key , or tap  to listen to the message(s).

4. New Number




Allows you to make a new call number.

1. Tap , or press the Unlock Key  at the top edge of the phone.

2. Tap the Menu Key  to access the menu.
3. Tap **Call**.
4. Tap **New Number**.

5. Favourites

Allows you to create your **Favourites** Contact List.




1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Call**.
4. Tap **Favourites**.
5. Tap **ADD**, then tap the contact entry you want to add.
6. Tap **DONE**.

Send


1. Message

Each message (**Text** or **Multimedia**) has a destination address and text based on the type of message you want to send.

Sending a new Text Message to a wireless device with Touch Screen.

 

1. Unlock the Touch Screen, and then tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Send**.
4. Tap **Message**.
5. Tap **Text Message**.
6. Enter the destination address(es) by tapping **Contacts** to copy the address from your Contact



Send

List, **Favourites** to copy the address from a **Favourites** entry, or **New #** to manually enter the address. If **New #** is selected, tap the Options icon  to choose:


From Contacts/From Recent Calls/Groups/To Contacts

Note

 When manually entering the address, tap  or  depending on your preference.


7. Tap **DONE**.
8. Tap the text field to enter your message. Use the pop-up keypad, or tap  or .

Note

Tap the Options icon  to **Insert Quick Text**, **Save Quick Text**, **Copy Text**, **Insert Smiley**, and so on.

9. Tap **DONE**.
10. Tap **SEND**.

Using Options

When entering your message text, tap the Options icon , and then tap the option you want:

Insert Quick Text Allows you to insert customized quick text.

Save Quick Text Allows you to save the message as quick text.

Copy Text Allows you to copy the text you highlight to paste into another message.

Paste Allows you to paste the text you last copied into a text field.

Insert Smiley Inserts a smiley into a text field.

Priority Level Assigns priority to the message.

High/Normal

Callback # Inserts a preprogrammed callback number into your message.

On/Off/Edit

Cancel Message Allows you to cancel the message.




 

Before entering the text field, the following options are available.

Save As Draft/Priority Level/Callback#/Cancel Message

Copy Text and **Paste** menus appear on the list only when texts are entered.

2. Name Card




Allows you to view all your own Contact information, including name, phone numbers, and email address.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Send**.
4. Tap **Name Card**.
5. Tap the desired contact list, and then tap **DONE**.
6. Tap **Via Multimedia M...** or **Via Bluetooth**.
7. Enter the destination address(es) by tapping **Contacts** to copy the address from your Contact List, **Favourites** to copy the address from a **Favourites** entry, **New #** to manually enter the address.
8. Tap **Done**.
9. Tap **Text, Sound, Name Card**, or **Subject** to enter your message. Use the pop-up keypad, or tap  or .
10. Tap **DONE**.
11. Tap **SEND**.

Send

3. My Pictures

Send a Picture Message using the Touch Screen

1. Unlock the Touch Screen, and then tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Send**.
4. Tap **My Pictures**.
5. Tap **By Multimedia Msg**.
6. Tap a picture you want to send, and then tap **SEND**.
7. Enter the destination address(es) by tapping **Contacts** to copy the address from your Contact List, **Favourites** to copy the address from a **Favourites** entry, **New #** to manually enter the address.

8. Tap **Done**.

9. Tap **Text, Sound, Name Card**, or **Subject** to enter your message.


Use the pop-up keypad, or tap

 or .

10. Tap **DONE**.

11. Tap **SEND**.

• Using Options

When entering the text or subject of your message, tap the Options icon .

Preview Displays the picture message as the recipient would see it.

Save As Draft Saves the message to the Drafts folder.

Copy Text Allows you to copy the text you highlight to paste into another message.

Paste Allows you to paste the text you last copied into a text field.

Insert Quick Text Allows you to insert customized quick text.

Add Slide Inserts multiple pictures into a picture message.

Priority Level Gives priority to the message.

High/Normal/Low

Delivery Report **On/Off**


Read Report **On/Off**

Slide Timer By default is 12. Allows you to customize the slide timer.

Cancel Message Allows you to cancel the message

Insert Smiley Inserts a smiley into a text field.



● **Editing Pictures, Sounds, and Name Cards**

1. In editing mode, tap the Options icon , and then tap an option: **Preview/Save As Draft/Add Slide*/Priority Level**
2. Tap **SEND**.

3. Tap **SEND**.

* **Adding Slides to Your Picture Message**




When you want to send multiple pictures, use the **Add Slide** option. This allows you to create one picture message with multiple pictures attached to it.

1. Create a picture message.
2. Add a picture to your message.
3. Tap .
4. Add another picture file, and then tap.
5. Tap  to scroll through the slides attached to your picture message.
6. Tap **DONE**.
7. Tap **SEND**.

 

Send



4. My Videos

Sending a Video Message using the Touch Screen


1. Unlock the Touch Screen, and then tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Send**.
4. Tap **My Videos**.
5. Tap **By Multimedia Msg**.
6. Tap a video you want to send, and then tap **SELECT**.
7. Enter the destination address(es) by tapping **Contacts** to copy the address from your Contact List, **Favourites** to copy the address from a **Favourites** entry, **New #** to manually enter the address.

Note

 When manually entering the address, tap  or  depending on your preference.


8. Tap **Done**.
9. Tap **Text, Name Card**, or **Subject** to enter your message. Use the pop-up keypad, or tap  or .

 Note

Tap the Options icon  to choose from: **Preview, Save As Draft, Copy Text, Insert Quick Text**, and so on.

10. Tap **DONE**.
11. Tap **SEND**.

Using Options

Tap the Options icons , and then tap an option:

Preview Displays the video message as the recipient would see it.

Save As Draft Saves the message to the Drafts folder.

Copy Text Allows you to copy the text you highlight to paste into another message.

Paste Allows you to paste the text you last copied into a text field.

Insert Quick Text Allows you to insert customized quick text.

Add Slide Inserts multiple videos into a video message.

Priority Level Gives priority to the message.

High/Normal/Low

Delivery Report On/Off

Read Report On/Off

Slide Timer By default is 12. Allows you to customize the slide timer.

Cancel Message Allows you to cancel the message.




Insert Smiley Inserts a smiley into a text field.

Removing or Changing Attachments


 
 
 
 
To remove files attached to your message, tap the attachment type (**Picture**, **Video**, **Sound**, or **Name Card**). Tap **Remove** or **Change**.

5. My Sounds

 

Sending a Voice Message using the Touch Screen


 



1. Unlock the Touch Screen, and then tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Send**.
4. Tap **My Sounds**.

Send

5. Tap **By Multimedia Msg.**
6. Tap the **RECORD NEW** icon to record new sound, or tap a recorded sound file in the list.
7. If you tapped the **RECORD NEW** icon, tap  and then say your voice message into the phone.
8. Tap  to end recording.
9. Tap the file you just created in the list, and then tap **Send**.
10. Enter the destination address(es) by tapping  to copy the address from your Contact List,  to copy the address from a **Favourites** entry,  to manually enter the address.

Note


When manually entering the address, tap  or  depending on your preference.

11. Tap .
12. Tap **Text, Name Card,** or **Subject** to enter your message. Use the pop-up keypad, or tap  or .
13. Tap .
14. Tap .

Note

Tap the Options icon  to choose from: **Preview, Save As Draft, Copy Text, Insert Quick Text,** and so on.

Using Options

Tap the Options icon  and then tap an option:

Preview Displays the Sound message as the recipient would see it.

Save As Draft Saves the message to the Drafts folder.

Copy Text Allows you to copy the text you highlight to paste into another message.

Paste Allows you to paste the text you last copied into a text field.

Insert Quick Text Allows you to insert customized quick text.

Add Slide Inserts multiple sounds into a sound message.

Priority Level Gives priority to the message.

High/Normal/Low

Delivery Report On/Off




Read Report On/Off

Slide Timer By default is 12. Allows you to customize the slide timer.

Cancel Message Allows you to cancel the message




Insert Smiley Inserts a smiley into a text field.

6. Calendar

1. Unlock the Touch Screen, and then tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Send**.
4. Tap **Calendar**.

Create

7. Drawing

1. Unlock the Touch Screen, and then tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Send**.
4. Tap **Drawing**.




Create

1. Contact

Allows you to add a new number to your Contact List.

Note




Using this submenu, the number is saved as a new Contact. To save the number to an existing Contact, edit the Contact entry.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Create**.
4. Tap **Contact**.
5. Enter the name and other contact information for each field.

- Tap a field, enter information, and then tap **DONE**.
6. Tap **SAVE** to save.

2. Message

Refer to page 39 for more information.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Create**.
4. Tap **Message**.

3. Alarm

Allows you to set up to ten alarms. At the time set, an alarm notification will display on the screen and the alarm will sound.




Adding an Alarm Clock Shortcut

With the screen unlocked, spin the idle screen to display **Shortcuts**. Tap the Shortcut Menu Touch Key , tap , tap **Alarm** (checkmark appears), and then tap **DONE**.

Shortcut

With the screen unlocked, spin the idle screen to display **Shortcuts**, and then tap

Alarm .

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Create**.
4. Tap **Alarm**.

Create

5. Tap **ADD** (You can add up to 10.).
6. Tap each Alarm setting field, and set as desired:
 - **Set Time**
 - **Repeat**
 - **Ringtone**
7. Tap **SAVE** after setting all the Alarm fields.


4. My Pictures






Allows you to take pictures straight from your phone.

Tips

- To take a clear picture, set the brightness level and zoom before taking the picture.
- Avoid jolting the camera.
- Wipe the camera lens with a soft cloth.
- Zoom is not available at the maximum resolution (1600 x 1200).





SHORTCUT

- The Side Camera Key () is a shortcut key to Take Picture in standby mode. Press the key once to launch Camera mode. Press and hold the key to launch Record Video mode. On the Camera/Video preview screens, press the side camera key to take the picture/video.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Create**.
4. Tap **My Pictures**.
5. Tap the Touch Screen to access the photo settings. Tap the setting icons to verify and/or change what you want.
6. Take a picture by pressing the Side Camera Key , or tap  on the Touch Screen.

5. My Videos

Lets you record video messages with sound.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Create**.
4. Tap **My Videos**.
5. Tap the Touch Screen to access the video settings. Tap the setting icons to verify and/or change what you want.
6. Record a video by pressing the Side Camera Key , and then press again to stop recording.





OR

Tap the **Record icon**, and then tap the **Stop icon** to stop recording.

Create

6. My Sounds


Allows you to select a sound or record a new sound.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Create**.
4. Tap **My Sounds**.
5. Tap .

Options:

- Customize the selected sound.

**Erase/Send/Rename/Move/
Copy/Lock/ Erase All/File
Info/Send via Bluetooth**

- Press the Clear/Voice Commands/Voice Recorder Key  to go back one level.


7. Calendar




Allows you to keep your calendar convenient and easy to access. Simply save your appointments, and your phone will alert you with a customized reminder.

Adding a Calendar Shortcut

With the screen unlocked, spin the idle screen to display **Shortcuts**. Tap the Shortcut Menu Touch Key , tap , tap **Calendar** (checkmark appears), and then tap **DONE**.

Shortcut




With the screen unlocked, spin the idle screen to display **Shortcuts**, and then tap Calendar .





1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.

3. Tap **Create**.
4. Tap **Calendar**.
5. Tap the **Subject** field, fill it in, and then tap **SAVE**.
6. Tap each Calendar setting field, set as desired, and then tap . For each Calendar event, you can set:
 - **Subject**
 - **Start Time**
 - **End Time**
 - **Repeat**
 - **Until**
 - **Alerts**
 - **Tones**
 - **Vibrate**
7. Tap **SAVE** after setting all the Calendar fields, as desired.

8. Drawing

Allows you to draw freely so you can simply save the image, send it in a message, or set it as **Wallpaper**.





1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Create**.
4. Tap **Drawing**.
5. Place your finger on the Touch Screen and apply gentle upward pressure to scroll up the list, and then tap **Drawing Pad**.
6. Tap **ADD**.

Tap the **Palette** icon to set color,  to draw,  to erase,  to undo, and  to save.

Play

9. Note




Allows you to add, read, edit, and delete notes.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Create**.
4. Tap **Note**.
5. Write a new note.
5. After filling in the note, tap  **SAVE** to save it.

Play

1. mobile music

TELUS mobile music lets you browse, preview, and download music directly to your phone so you can listen to your favorite tunes while on the go. Select the TELUS mobile music shortcut key on the home screen to access mobile music. For more information on TELUS mobile music, please visit: www.telusmobility.com/mobilemusic.





1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Play**.
4. Tap **mobile music**.
5. Launches the TELUS mobile music player.

2. My Pictures

Allows you to view and manage photos stored in the phone.

Shortcut


With the screen unlocked, spin the idle screen to display **Shortcuts**, and then tap **My Pictures** (if it is set as a Shortcuts menu).

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Play**.
4. Tap **My Pictures**.
5. Gallery lists of your pictures display. Select a picture file by tapping it, or you can tap the Options icon  and then select one of the following options:
Send/Take Picture/Manage My Pics/Erase All


Options in standard view:

Set As/Take Picture/Get New Pictures/Play/Edit/Manage My Pics/Rename/Print/File Info

or

Tap  to send the Picture **By Multimedia Msg/Via Bluetooth**

Tap  to delete the picture.

Tap  to set the selected image as a **favourites**, or remove as a **favourites**.




Note


To scroll to options not viewed on the screen, apply gentle upward pressure to the Touch Screen.

3. My Videos

Allows you to view and manage videos stored in the phone.

Play

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Play**.
4. Tap **My Videos**.
5. Gallery lists of your videos display.

Use options by tapping the Options Key , and then selecting one of the following:

Record Video/Manage My Videos/Erase All

Note




To scroll to options not viewed on the screen, apply gentle upward pressure to the Touch Screen.

Select a video file by tapping it, and then tap the green arrow to play the selected video.

Video Player Options:




**Send/ Edit For Video Msg/
Multi Trim/ Multi Capture/ Add
Fade Effect/ Set As Lock Screen/
Erase/ Rename/ File Info**

4. My Sounds


1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Play**.
4. Tap **My Sounds**.

5. My Ringtones

Allows you to select a ringtone or download a new ringtone.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Play**.
4. Tap **My Ringtones**.

Tips

- To scroll through ringtones, use your finger to apply gentle upward (or downward) pressure.
- To preview what the ringtone sounds like, tap .

6. Tap a ringtone, and then select what you want to set the ringtone as:




- **Ringtone**

- **Contact ID:** Tap the Contact to identify with the selected ringtone.

- **Alert Sounds:** Tap the option to set it as a ringtone.
**All Messages/Text Message/
Multimedia Message/
Voicemail**

6. Games

Allows you to download games and applications from the media center server. Choose the software you want in the list displayed on the screen.




1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Play**.
4. Tap **Games**.

Connect




5. Tap **Get New**.

You can also select from the already installed games.

7. mobile TV

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Play**.
4. Tap **mobile TV**.

8. mobile radio

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Play**.
4. Tap **mobile radio**.



Connect

1. Wireless Web


The Browser feature allows you to access news, sports, and weather from your Telus Wireless device.




Accessibility and selections within this feature depend on your service provider. For specific information on Browser access through your phone, contact your service provider.

Adding a Wireless Web Shortcut


With the screen unlocked, spin the idle screen to display **Shortcuts**. Tap the Shortcut Menu Key , tap , and then tap **Wireless Web** (checkmark appears) in the **ADD MENU** list, and then tap **DONE**. You now see the **Web** icon on the screen. Tap **Done**.

SHORTCUT

With the screen unlocked, spin the idle screen to display **Shortcuts**, and then touch .

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Connect**.
4. Tap **Wireless Web**.

Ending a Browser Session

End a Browser session by pressing the Power/End Key .

Browser Navigating

Links embedded in content

Select items or links by tapping them.

Scrolling/Fast Scrolling

Use your fingertip to move the screen contents in the direction you move your finger.

How quickly you move your finger determines the how fast you scroll.

Panning

Panning is when you move within screen content by moving your fingertip (or stylus) to the area you want to see.


CAUTION

Do not use a sharp item for your stylus because it could scratch your screen.

Return to Home Page

Tap .

Using the Browser Menu

Tap  to view Browser menu items; **Normal Screen View**, **Display Rendering**, **Send URL**, **Search**, **History**, **Settings**, **Manage Memory**, and **Information**.


Browser Menu Items

Note

You may have to scroll down to see some of the menu items listed below.

- **Full Screen View** Use the whole screen, including the

Connect

annunciator and command bar area, to view pages. You can open the command bar by tapping the icon  at the lower right of the Touch Screen.

- **Display Rendering** Allows you to select a mode that changes the layout of content.
 - Standard** Displays a standard Browser screen, with vertical and horizontal page navigation.
 - Screen Optimized** Displays vertically aligned content of the Web page, fitting the size of the screen. Allows vertical navigation only.
 - Text Only** Displays only text and excludes images used in the Web page.
- **Send URL** Allows you to send the link of the current page via a text message.
- **Search** Allows you to search for

text on the web page. (Search Text is not case sensitive.)

- **History** Displays a list of visited Web pages.
- **Settings**

Homepage Set the selected page as your Home Page.

Restart Browser Restarts the Wireless Web.

Display Allows you to define the **Thumbnail, Scroll, and Fit to width** settings.

JavaScript Set to **ON/OFF**.

Timer Set the duration of each keystroke or connection.

Security Allows you to define the **Cookies, Send Referrer, Authentication, SSL 3.0, TLS 1.0, Root Certificates, and Current Certificate** settings.

Flash Set to **On/Off**.









- **Manage Memory** Manages the memory used by the browser. You can choose from **Clear All**, **Clear Cache**, **Clear Cookies**, and **Clear History**.

- **Information**

Show URL Redisplays the current Web page.





About Displays the current browser information.

Command Bar icons:


- **Back**  to return to the previous page.
- **Forward**  to move to the next page.
- **Refresh**  Allows you to reload the current Web page.
- **Zoom**  Allows you to zoom the screen in or out.
- **Home**  Returns to the Home Page.
- **Favourites**  Allows you to add bookmarks.
-  Allows you to enter a Web address.
-  Allows access to the Browser Menu.

Thumbnail Option in Browser Menu

This option displays the entire outline of the Web page in the screen corner, which is helpful to find out where you are on the Web page and move to where you want to go on the page.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Connect**.
4. Tap **Wireless Web**.
5. Tap .
6. Tap **Settings** -> **Display** -> **Thumbnail**.

Tip

To access thumbnails when the option is set to Off, change the settings by touching  > **Settings** > **Display** > **Thumbnail** > **On** or **Auto**.

- **On:** Thumbnail screen image is always displayed in one corner of the screen.
- **Off:** Thumbnail screen image is never displayed on the screen (default).
- **Auto:** Thumbnail screen image is displayed whenever a spot is touched on the screen or your finger moves up/down softly on the right side of the screen.

Entering/Deleting Text, Numbers, or Symbols

When text, numbers, or symbols need to be entered on the screen, such as Web addresses, a Touch Keypad will appear. Simply touch the characters you want, and then touch **CLR** to delete.

Flash Content

The LG9600 includes the Flash Lite engine, which supports Flash content with the following Codecs:

- Video codec: Sorenson, On2
- Audio codec: MP3

How to play Flash content:

Tap , or tap the image box.

Note

Sometimes it's necessary to touch the text field more than once to activate the Touch Keypad.

Browser Menu  **Settings > Flash > ON/OFF**

Connect

 
Unsupported Flash media:

- Flash media that requires a higher version of Flash available on the LG9600.
- Error messages may result in the following circumstances:

- Server times out. If the server does not respond within 60 seconds, the Flash content will not load, and you will receive an error message.

- Out of memory. If the Flash content requires more memory than what is available on the LG9600, an Out of Memory error message will appear.


Multi-Windows
Transfer/Count icon

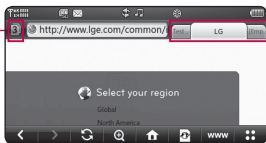

[Multi-Windows Screen]

Window Transfer
Tab with title

 Tip
This screen is a
demo website.

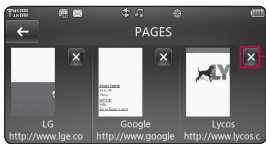

[Multi-Windows Transferred Screen]

Tap this to close
the window.

 
Using the RSS reader

RSS (Really Simple Syndication) is a family of Web feed formats used to publish frequently updated content, such as blog entries, news headlines, and podcasts. An RSS document, which is called a feed, web feed, or channel, it contains either a summary of content from an associated website or the full text.

RSS makes it possible for people to keep up with their favourite websites in an automated manner that is easier than checking manually. To add an RSS feed, you must first be on a website that supports RSS. The RSS registration indicator will show the RSS icon if the site has RSS. Touch the RSS registration indicator to add the RSS Feed to your Feeds.

Note

You can also open your saved RSS Feeds using your Bookmarks Menu.

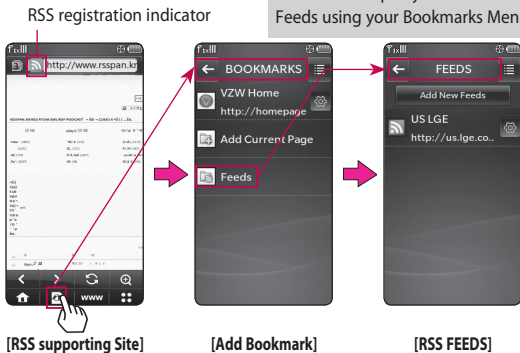


Tip This screen is a demo website.

After adding the Bookmark, the registered FEEDS display.

Connect

Fit To Width

 
A browser function that resizes the current Web page to fit better with the width of the screen.

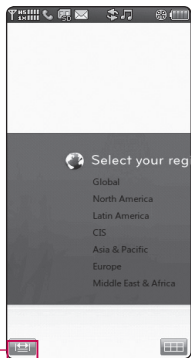

[Before Fit To Width]

Fit To Width icon: Allows you to adjust the zoom level of the Browser screen.

 Browser Menu  >
Settings > **Display** >
**Fit to width (Manual/
Automatic)**

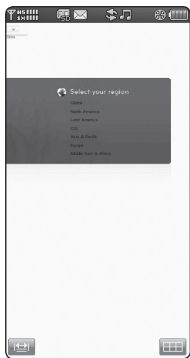

[After Fit To Width]

2. Bluetooth




The LG9600 is compatible with devices that support the Bluetooth® Headset, Handsfree, Dial Up Networking, Stereo, Phonebook Access, Basic Printing, Object Push, File Transfer, Basic Imaging, and Human Interface profiles.*

You may create and store 20 pairings in the LG9600 and connect to one device at a time.


The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

Bluetooth QD ID B015808

Adding a Bluetooth Menu Shortcut

With the screen unlocked, spin the idle screen to display Shortcuts. Tap the Shortcut Menu Key , tap , tap Bluetooth , and then tap **DONE**. The Bluetooth icon will appear on the screen. Tap **Done**.

Shortcut

With the screen unlocked, spin the idle screen to display Shortcuts, and then tap Bluetooth .

Note



Read the user guide of each Bluetooth® accessory you are trying to pair with your phone; the instructions may differ.

Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology. The phone does not support ALL Bluetooth® OBEX Profiles.


* For vehicle/accessory compatibility, go to www.telusmobility.com/bluetoothchart.

Add New Device

Pairing is the process that allows the handset to locate, establish, and register a 1-to-1 connection with the target device.

1. Tap , or press the Unlock Key  at the top edge of the phone.

Connect

2. Tap the Menu Key  to access the menu.
3. Tap **Connect**.
4. Tap **Bluetooth**. The [BLUETOOTH ADDRESS IS NOT SET] message appears if the address is not set.
5. If Bluetooth® is off, you must turn it on by tapping **TURN ON** on the upper left side of the screen.
6. Tap **ADD** and then **START** to begin searching.
7. The device will appear in the **ADD NEW DEVICE** menu when it is located. Select the device you want to pair with your LG9600 by tapping the item on the list.
8. The handset will ask you for the passcode of the device you

●selected. Or a confirmation message







appears to ask whether your device codes match with the other. Consult the Bluetooth® accessory instructions for the appropriate passcode (typically “0000” - 4 zeroes). Enter the passcode, and then touch **OK**.

9. Once pairing is successful, touch to select either **Always Ask** or **Always Connect** to select your preference for how the LG9600 connects with this recently added device.
10. Once pairing is successful, touch either **Always Ask** or **Always Connect** to select your preference on how the LG9600 connects with this recently added device.
11. Once paired, you will see the device listed in the Bluetooth Menu.

Icon Reference in Adding New Device




When the Bluetooth® wireless connection is built and paired devices are found, the following icons display on your Bluetooth Menu.

- **Icon References When a Bluetooth® Wireless Connection is Searched** (neither connected nor paired).

	When your LG9600 device finds an audio device
	When your LG9600 device finds a PC
	When your LG9600 device finds a PDA
	When your LG9600 device finds another phone device
	When your LG9600 device finds a printer
	When your LG9600 device finds other undefined devices
	When your LG9600 device finds a keyboard





Connect

- Icon References When Successfully Connected

	When an only-mono headset is connected to your LG9600 device
	When an only-stereo headset is connected to your LG9600 device
	When stereo headsets or mono headsets are all connected to your LG9600 device




My Device Info

Allows you to edit the name of the Bluetooth® device.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Connect**.
4. Tap **Bluetooth**.
5. Tap the Options icon .
6. Tap **My Device Info**.
7. Tap **RENAME DEVICE**.
8. Use the pop-up keypad to enter a new custom name. (If you used the keyboard for entry, tap **DONE** to exit the keyboard.)





Turn Bluetooth® On/Off

Allows you to set the phone's Bluetooth® power On/Off.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Connect**.
4. Tap **Bluetooth**.
5. Tap **TURN ON** to turn on Bluetooth.





Discovery Mode

Allows you to set whether your device is able to be found by other Bluetooth® devices in the area. After entering the Bluetooth Menu, simply touch **SHOW** to make your phone discoverable for one minute. To enter discoverable mode from Standby Mode, follow the instructions below.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Connect**.
4. Tap **Bluetooth**.
5. Tap the Options icon .
6. Tap **Discovery Mode**.
7. Tap a setting.
On/Off

Supported Profiles

Allows you to see the profiles your LG9600 phone supports.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Connect**.
4. Tap **Bluetooth**.
5. Tap the Options icon .
6. Tap **Supported Profiles**. Choose from **Headset, Handsfree, Dial Up Networking, Stereo, Phonebook Access, Basic Printing, Object Push, File Transfer, Basic Imaging, and Human Interface**.

Connect

TIPS

- Headset supports the use of a compatible Bluetooth® headset for mono voice.
- Hands-free supports Bluetooth® headsets and may also support other installed compatible Bluetooth devices with speakerphone capabilities, such as car kits and conference room devices. For Hands-free Car Kit Compatibility, refer to www.telusmobility.com/bluetoothchart on the Telus Mobility website.
- Dial-Up Networking allows the phone to be used as a data modem with a compatible Bluetooth device, such as a laptop or PDA.
- Stereo supports delivery of stereo audio to a compatible Bluetooth device.
- The Phonebook Access Profile allows you to share information. By pairing the devices and connecting with this profile, you can access and use your phonebook data with a compatible Bluetooth device.

TIPS

- Basic Printing Profile is a profile to transfer user-generated images (JPEG) to a printer.
- Object Push Profile (OPP) allows you to transfer a contact entry (vCard), calendar event (vCal), image and/or video to another OPP-enabled Bluetooth device.
- File Transfer allows sending or receiving non-protected data files to a compatible Bluetooth device.
- Image transfer of user-generated content is available through the Basic Imaging Profile. This profile allows you to send non-protected images to a compatible device for storage and printing.
- The Human Interface supports the use of a wireless keyboard as an input device for the mobile device.

Auto Pair Handsfree

If you attempt to pair a device that is part of the handsfree/headset profile, "PAIR" is selected. Your device will automatically attempt to pair using a "0000" passcode.

Transferring Audio

When a Bluetooth® audio device is connected, **Audio To Phone/ Audio To Device** displays in the In-Call Options menu (only during a call).

Audio To Phone Sound comes from the handset.

Audio To Device Sound comes from the Bluetooth® audio device.

You have the following options in the paired device:

- For devices that support OBEX profiles:

Remove Device: You can remove the device from the pairing list.

Rename Device: You can rename the name of the paired device.

Incoming Security: Allows you to set permissions before connecting to an incoming device.

Service Discovery: Allows you to search for the services that the selected device supports.

Device Info: Shows the device information.

Send Name Card: You can transfer your Contact List to other devices, except audio devices.

Send Calendar Event: You can transfer Calendar events to other devices, except audio devices.

Get Name Card: You can get name cards from other devices, except audio devices.

Connect

Exchange Name Card: You can get name cards from other devices and transfer your name card to other devices, except audio devices.

Send Picture: You can transfer images to a device that supports Basic Imaging Profile (BIP) profiles.

Send Sound

Send Music

Send Video: You can transfer a video to a device that supports Object Push Profile (OPP).

Browse/Get Files: You can browse and get the files of a device that supports the File Transfer Protocol (FTP).

- For headset devices:

Remove Device: You can remove the device from the pairing list.

Rename Device: You can rename the name of the paired device.

Service Discovery: Allows you to search for the services that the selected device supports.



Device Info: Shows the device information.




3. My Email 2.0

Allows you to use mobile email. Select an email service. Mobile Email is an application downloadable from the Messaging Menu. Don't miss an important email. Thanks to Mobile Email, you can get your email on your phone, when you're on the go. Mobile Email works with many providers, including Yahoo!, and Telus.net.

Get alerts from your LG9600 when new email has arrived.




Adding a My Email 2.0 Shortcut

With the screen unlocked, spin the idle screen to display Shortcuts. Tap the Shortcut Menu Key , tap , scroll the ADD MENU list upward, tap My Email 2.0 (checkmark appears), and then tap **DONE**. The My Email icon will appear on the screen. Tap **Done**.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Connect**.
4. Tap **My Email 2.0**.




4. Messenger 2.0

Allows you to send and receive an Instant Message at any time.




1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Connect**.
4. Tap **Messenger 2.0**.

Connect




5. Go to Site

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Connect**.
4. Tap **Go to Site**.

6. Bookmarks

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Connect**.
4. Tap **Bookmarks**.




7. Navigator

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Connect**.
4. Tap **Navigator**.

Download




1. Pictures

Allows you to connect to Media Center and download a variety of images to store in My Pictures.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Download**.
4. Tap **Pictures**.

2. Videos




Allows you to connect to the browser to download videos.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Download**.
4. Tap **Videos**.
5. Tap video clip categories you want to view.

Download




3. Ringtones

Allows you to connect to Media Center and download various ringtones.




1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Download**.
4. Tap **Ringtones**.
5. Tap **Get New Applications** to shop for ringtones.

4. Games

Refer to page 66 for more information.




1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Download**.
4. Tap **Games**.

5. Apps

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Download**.
4. Tap **Apps**.

Contact List

Refer to page 47 for more information.




1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Contact List**.

Quick Menu


Message List

Your phone will alert you when you have new messages, as shown below:

- By displaying a message on the screen.
- By making a sound or vibrating, if set.
- By displaying (it blinks for high-priority messages).

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Message List**.
4. Tap the message you want to open.

5. Options:

- Tap **REPLY**.
- Tap **ERASE**.
- Tap **FORWARD**.
- Tap the Options icon .

Reply With Copy Replies to the return address, and includes the original message in your reply.

Save Quick Text Allows you to save the message as Quick Text.

Lock/Unlock Locks or unlocks the selected message. Locked messages cannot be deleted by the Erase functions.


Add To Contacts Stores the callback number, email address, and numbers in the address of the received message into your Contacts as **New Contact** or **Update Existing**.

Extract Address Information from the message displays for you to add to an existing entry or create a new Contact entry.

Message Info Allows you to check the received message information.


Message Icon Reference


 New/Unread TXT Messages

 Opened/Read TXT Messages

 High Priority





 Locked

 New/Unread Multimedia Messages

 New/Read Multimedia Messages

Message Settings

Allows you to configure settings for your messages.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Message List**.
4. Tap the Options icon , and then tap **Settings**.
5. Tap one of the settings.

Quick Menu

Message Settings Submenu Descriptions

Message View (BY CONTACT/BY TIME)

BY CONTACT: Message View By Contact will display all messages in **INBOX-CONTACTS**, sorted by time and grouped by person.

BY TIME: Message View **By Time** will display all messages in the **INBOX**, sorted by time received.

Entry Mode (Word/Abc/ABC/123)

Allows you to select the default input mode.

Auto Save (On/Off/Prompt)

With this feature on, messages are automatically saved in the Sent folder when transmitted.

Auto Erase (ON/OFF)

With this feature on, read messages are automatically deleted when you exceed the storage limit.

Auto Receive (ON/OFF)

Allows you to directly download pictures, videos, and voice messages.

Quick Text

Allows you to display and add text phrases. These text strings allow you to reduce manual text input into messages.

Callback # (On/Off)




Allows you to automatically send a designated callback number when you send a message.

Signature (None/Custom)

Allows you to make/edit a signature to automatically append to your messages.




Alarm

Refer to page 58 for more information.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Alarm**.




Camera

Refer to page 40 for more information.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Camera**.




mobile music

Refer to page 63 for more information.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **mobile music**.

My Media




Refer to page 39 for more information.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **My Media**.

Quick Menu

Wireless Web

Refer to page 67 for more information.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Wireless Web**.




Settings

1. Sounds Settings

Provides options to customize the phone's sounds.




1.1 Master Volume

Allows you to set volume settings.



1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Sounds Settings**.
5. Tap **Master Volume**.
6. Touch the volume level you want, and then touch **SET** to save the setting.


1.2 Call Sounds

Allows you to set how the phone alerts you to incoming calls.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Sounds Settings**.
5. Tap **Call Sounds**.




1.2.1 Call Ringtone

1. Unlock the Touch Screen.
 - Open the Qwerty flip (when attached).
- OR**
- Tap , or press the Unlock Key  at the top edge of the phone.

2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Sounds Settings**.
5. Tap **Call Sounds**.
6. Tap **Call Ringtone**.
7. Tap a ringtone to set it as the default Call Ringtone.

1.2.2 Call Vibrate

You can have your phone ring and vibrate to alert you to an incoming call. To have your phone vibrate, set this setting to ON.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Sounds Settings**.




Quick Menu

5. Tap **Call Sounds**.
6. Tap **Call Vibrate**.
7. Tap a setting.

ON/OFF

1.2.3 Audio Output




When earphones or the Bluetooth headset is connected to your phone, you can customize audio output.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Sounds Settings**.
5. Tap **Call Sounds**.
6. Tap Audio Output.

**Speaker/Headset Only/
Headset and Vibrate**

1.3 Alert Sounds

Allows you to select the Alert Types for when you receive an incoming Text Message, Multimedia Message, Voicemail, Emergency Tone, or Missed Call.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Sounds Settings**.
5. Tap **Alert Sounds**.
6. Tap **Text Message/Multimedia Message/Voicemail/
Emergency Tone/Missed Call**.
7. Tap an Alert Sounds submenu.
Tone/Vibrate/Reminder




Note

For Emergency Tone, the options are limited to **Alert**, **Vibrate**, and **Off**.

8. Touch the setting(s) you want.




1.4 Keypad Volume

Allows you to set the keypad volume.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Sounds Settings**.
5. Tap **Keypad Volume**.
6. Touch the volume level you want, and then tap **SET** to save the setting.

1.5 Service Alerts

Allows you to set any of the four Service Alert options to either ON or OFF.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Sounds Settings**.
5. Tap **Service Alerts**.
6. Touch an alert option to toggle the setting(s).

Service Change Alerts you to the status of cellular service.

Minute Beep Alerts you 10 seconds before the end of every minute during a call.




Quick Menu

Call Connect Alerts you when the call connects.

Charge Complete Alerts you when the battery is completely charged.

1.6 Power On/Off

Allows you to set the phone to sound a tone when the phone is turned on/off.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Sounds Settings**.
5. Tap **Power On/Off**.
6. Tap a setting.

Power On/Power Off

2. Display Settings




Provides options to customize the phone's display screen.

2.1 Banner

Allows you to enter text to display on the Lock Screen. You can enter up to 24 characters.

Note




Banner is only displayed in Lock Screen Mode.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Display Settings**.
5. Tap **Banner**.
6. Enter the banner text, and then touch **DONE**.

2.2 Backlight




2.2.1 Phone Backlight

Allows you to set the duration of the phone backlight.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Display Settings**.
5. Tap **Backlight**.
6. Tap **Phone Backlight**.
7. Tap the setting you want.
7 Seconds/15 Seconds/30 Seconds/Always On/Always Off

2.2.2 Module Backlight

Allows you to set the duration of the Qwerty keypad backlight.




1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Display Settings**.
5. Tap **Backlight**.
6. Tap **Module Backlight**.
7. Tap the setting you want.
7 Seconds/15 Seconds/30 Seconds/Always On/Always Off

Quick Menu

2.3 Wallpaper

Allows you to choose the kind of background to display on the idle screens for Lock Screen, Shortcuts, Media, Favorites, and

Module Shortcuts. Fun Animations provide you with Flash animations for your screen, and Slide Show allows you to select several images to display in slides on your Lock Screen.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Display Settings**.
5. Tap **Wallpaper**.

6. Tap the screen background you want to set.




**Lock Screen/Favorites/
Shortcuts/Media/Module
Shortcuts**

7. Tap a submenu. Depending on the Screen you want you personalize, some or all of the following options will appear:
My Pictures/My Videos/Fun Animations/Slide Show

8. Tap your choice.
9. Tap **SELECT**.

2.4 Screensaver

Allows you to set a screensaver to prevent others from seeing your personal phone information.




1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.

3. Tap **Settings**.
4. Tap **Display Settings**.
5. Tap **Screensaver**.
6. Tap a setting.

No Screensaver/Desk Clock/ Calendar/Slide Show

2.5 Menu Fonts




Allows you to set menu fonts.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Display Settings**.
5. Tap **Menu Key Fonts**.
6. Tap a setting.

LG Gothic/LG Serif/LG Edge/LG Joy/LG Script

2.6 Dial Fonts




Allows you to set the dial font size. This setting is helpful to those who need larger display text.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Display Settings**.
5. Tap **Dial Fonts**.
6. Tap a setting.
Normal/Large Only

Quick Menu




2.7 Menu Style

Smart Menu is an innovative, streamlined way to display and access your menu options. It allows you to touch what you want to do (e.g., Call, Play, or Download), and, based on the action you selected, displays the relevant options to tap and select. Allows you to set the Menu Style.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Display Settings**.
5. Tap **Menu Key Style**.
6. Tap a setting.

Smart Menu/Grid Menu




2.8 Time Format

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Display Settings**.
5. Tap **Time Format**.
6. Tap a setting.

12 Hours/24 Hours

2.9 Home Screen Order




Home Screen Order is the menu that lets you can change the order of the idle screens. You access them by flicking your fingertip horizontally across the top edge of the Touch Screen while in Standby Mode.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Display Settings**.
5. Place your finger on the Touch Screen, apply gentle upward motion to scroll up the list, and then tap **Home Screen Order**.
6. Change the order by dragging and dropping one Home Screen on top of another to exchange places. Then tap **DONE** to save the setting.

**Home 1/Home 2/Home 3/
Home 4**

3. Games & Apps

Provides options to customize the phone's games and apps settings.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Games & Apps**.
5. Tap a setting.

Backlight Settings 7 Seconds/15 Seconds/30 Seconds/Always On/Always Off

Volume Off/Low/Medium Low/Medium/Medium High/High

Notifications Voicemail (ON/OFF)/Messages (ON/OFF)

Others

Plug-Ins




Quick Menu

4. Phone Settings

Provides options to customize the phone's specific settings.

4.1 Airplane Mode




Allows you to use the functions of the phone that do not require wireless communications, when radio transmission is restricted. Activating Airplane Mode will disable all wireless communications. When in Airplane Mode, services supporting Location On functionality are suspended.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Settings**.
5. Tap **Airplane Mode**.

6. Tap a setting.

On/Off




4.2 Media Mode

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Settings**.
5. Tap **Media Mode**.
6. Tap a setting.

On/Off

4.3 Set Qwerty Shortcut




Allows you to, if desired, set the device to automatically start a Text Message or Notepad entry when you open the Qwerty flip and begin typing. Or, set this feature to Off.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Settings**.
5. Tap **Set Qwerty Shortcut**.
6. Tap a setting.

Off/Contact Search/Text Message/Notepad

4.4 Keyguard Setting

Allows you to set Qwerty Keyguard when the Qwerty keypad is connected to the phone.




1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Settings**.
5. Tap **Keyguard Setting**.
6. Tap a setting.

Always Off/7 Seconds/15 Seconds/30 Seconds

Quick Menu

4.5 Voice Commands

Allows you to customize the Voice Command feature to suit your needs.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Settings**.
5. Tap **Voice Commands**.

**Prompt Mode Prompts/
Readout + Alerts/Readout/
Tones Only**

**Audio Playback Speakerphone/
Earpiece**




**Prompt Timeout 5 seconds/10
seconds**

**Call Alert Ring Only/Caller ID +
Ring/Name Repeat**

Active with CLR... ON/OFF
enables or disables the CLR key
to activate the Voice Command
feature in standby mode.




4.6 Language

Allows you to choose between
having the text displays of the
LG9600 (menus, prompts, pop-
up messages, etc.) in English or
French.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Settings**.
5. Tap **Language**.
6. Tap a setting.
English/Français

4.7 Location

Allows you to set GPS (Global Positioning System, the satellite-assisted location information system) mode.




1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Settings**.
5. Tap **Location**.
6. Tap a setting.
Location On/E911 Only

Note

- The phone does not always receive GPS satellite signals when indoors or under poor atmospheric and environmental conditions.
- When a location lock mode is activated in the Security Menu, the lock code is required when you enter the location menu. The lock code is the same four digits you use as your device lock code; by default, the last four digits of your phone number.
- When in Airplane Mode, services using the Location On function are suspended.

4.8 Security

Allows you to secure the phone electronically.




1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.

Quick Menu

4. Tap **Phone Settings**.
5. Place your finger on the Touch Screen, apply gentle upward motion to scroll up the list, and then tap Security.
6. Enter the four-digit phone lock code.
The phone lock code is the last 4 digits of your mobile phone number, if it is set. The phone lock code is the last 4 digits of your MEID if your mobile phone number is not set.

4.8.1 Edit Codes




Allows you to enter a new four-digit lock code.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.

4. Tap **Phone Settings**.
5. Scroll up the list, and then touch **Security**.
6. Enter the four-digit lock code.
7. Tap **Edit Codes**.
8. Tap **Phone Only** or **Calls & Services**, and then enter your new phone lock code. Enter it again to confirm.

4.8.2 Restrictions

Allows you to set separate restrictions for Location Setting, Calls, Messages, and Dial-Up Modem.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.

4. Tap **Phone Settings**.
5. Scroll up the list, and then touch **Security**.
6. Enter the four-digit phone lock code.
7. Tap **Restrictions**.
8. Enter the four-digit service lock code.
9. Tap a Restrictions submenu, and then tap the setting.

Location Lock Setting/Unlock Setting

Calls Incoming Calls (Allow All/Contacts Only/Block All)

Outgoing Calls (Allow All/Contacts Only/Block All)




Messages Incoming Messages (Allow All/Block All)

Outgoing Messages (Allow All/Block All)

Dial-up Modem Allow All/Block All

4.8.3 Phone Lock

Protects your phone from unauthorized use. Once the phone is locked, it's in restricted mode until the phone lock code is entered. You can receive phone calls and still make emergency calls. Modify the phone lock code using the Edit Codes submenu in the Security menu.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Settings**.
5. Scroll up the list, and then touch **Security**.



Quick Menu

6. Enter the four-digit lock code.
7. Tap **Phone Lock**.
8. Tap a setting.

Unlocked The phone is not locked (Lock mode can be used).

On Power Up The phone is locked when it is turned on.




4.8.4 Camera Lock

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Settings**.
5. Scroll up the list, and then touch **Security**.
6. Enter the four-digit phone lock code.

7. Tap **Camera Lock**.
8. Tap a setting.




On/Off

4.8.5 Lock Phone Now

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Settings**.
5. Scroll up the list, and then touch **Security**.
6. Enter the four-digit phone lock code.
7. Tap **Lock Phone Now**.

4.8.6 Reset Default




Allows you to reset your phone to the factory default settings.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Settings**.
5. Scroll up the list, and then touch **Security**.
6. Enter the four-digit lock code.
7. Tap **Reset Default**.
8. Tap **OK** after reading the warning message.
9. Tap **REVERT**.

A confirmation message is displayed briefly before the phone resets itself.

4.9 System Select

The System Select submenu allows you to set your preferred system. If your phone cannot find a preferred network, it automatically selects a network based on the option you set in the System Select Menu. Contact Telus Wireless for more information.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Settings**.
5. Scroll up the list, and then tap System Select.
6. Tap a setting.

Home Only: You can make/receive calls in your home network only.




Quick Menu

Automatic (Automatic A/ Automatic B): You can make/ receive calls in your home or roam network. The roaming rate applies when not in the home service area.

(Depending on the available network, the options may differ between Automatic and Automatic A/Automatic B.)

4.10 NAM Select




Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Settings**.

5. Scroll up the list, and then tap **NAM Select**.
6. Tap a setting.
NAM1/NAM2

4.11 Serving System

Allows you to identify the channel number of a served system and an SI Number. This information is only for technical support.




1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Settings**.
5. Scroll up the list, and then tap **Serving System**.

5. Call Settings

Provides options for customizing the handling of both incoming and outgoing calls.

5.1 Answer Options

Allows you to determine how the phone will answer incoming calls.




1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Call Settings**.
5. Tap **Answer Options**.
6. Tap the setting(s) you want to use.
Any Key/Auto with Hands-free

Note

Auto with Hands-free is available when any external device or Bluetooth® device is connected to the phone, or if the Speakerphone is ON.

5.2 Auto Retry




Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Call Settings**.
5. Tap **Auto Retry**.
6. Tap a setting.
Off/Every 10 Seconds/Every 30 Seconds/Every 60 Seconds

Quick Menu

5.3 TTY Mode

Allows you to attach a TTY device to communicate with parties also using TTY devices. A phone with TTY support can translate typed characters into voice. Voice can also be translated into characters and then displayed on the TTY.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Call Settings**.
5. Tap **TTY Mode**.
6. After reading the disclaimer, tap **OK**.
7. Tap a setting.

TTY Full/TTY + Talk/TTY + Hear/TTY Off

TTY Full:

- Users who cannot talk or hear send and receive text messages through TTY equipment.

TTY + Talk:

- Users who can talk but cannot hear receive text messages and send voice through TTY equipment.

TTY + Hear:

- Users who can hear but cannot talk send text messages and receive voice through TTY equipment.

TTY Off:

- Users send and receive without TTY equipment.




Connecting TTY Equipment to a Terminal

1. Connect a TTY cable to the TTY connector on the terminal (the TTY connector location is the same as the headset jack).
2. Enter the Call Settings menu, and then set the desired TTY mode.
3. After setting the TTY mode, check the LCD screen of the phone for the TTY icon.
4. Connect the TTY equipment to the power source, and then turn it on.
5. Make a phone connection to the desired number.
6. When connected, use the TTY equipment to type in and send a text message or send voice.
7. The voice or text message from the receiver end displays on the

TTY equipment display.

7.4 One Touch Dial




Allows you to initiate a speed-dial call by touching and holding the speed-dial digit. If set to Off, the designated Speed-Dial numbers will not function.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Call Settings**.
5. Tap **One Touch Dial**.
6. Tap a setting.

ON/OFF




Quick Menu

5.5 Auto Prepend





1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Call Settings**.
5. Tap **Auto Prepend**.
6. Tap a setting.
ON/OFF

5.6 DTMF Tones

 
Allows you to set the DTMF tone length.




1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Call Settings**.
5. Tap **DTMF Tones**.
6. Tap a setting.
Normal/Long

5.7 Do Not Disturb

1. Tap , or press the Unlock Key  at the top edge of the phone. 
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Call Settings**.
5. Tap **Do Not Disturb**.
6. Tap a setting.
ON/OFF

5.8 International Dialing

If set to on, you can initiate an international call. 

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Call Settings**.
5. Scroll up the list, and then tap **International Dialing**.
6. Tap a setting.

On/Off

7. The code 011 is the default for International Dialing. If you are in another country, edit the dialing code, and then touch **DONE** to set it.

Quick Menu

Note

Example: A device in China is trying to reach the U.S. number 201-555-5555 (the Reference Country is Canada).




Replace the "+" code with the IDD prefix for China.

User Enters: +1-201-555-5555,

International Dialing: 00-1-201-555-5555

6. Touch Settings

Provides options to customize the phone's Touch Screen settings.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Touch Settings**.
5. Tap a setting.

Auto Lock On/Off

Vibrate Type Short/Double/
Long

Vibrate Level Off/Low/Medium/
High

Sound Wood Block/Click/
Clean/Water Drop/Off

Calibration

Note

The Calibration setting allows you to calibrate the Touch Screen for improved touch accuracy based on your touch.

7. Memory

Allows you to check your LG9600 internal phone memory as well as the microSD Card external memory. The LG9600 can access the following file types stored on the removable microSD card.

My Pictures: JPG, PNG, GIF, WBMP, JPEG




My Sounds: MID, MIDI, AAC, MP3, QCP, WAV, AMR

My Videos: MP4, AMC, 3GP, 3G2

My Music: SDC, WAV, MP3, M4A, APL, AMR, AAC, 3GP, 3G2, MP4

7.1 Save Options




Allows you to select which memory (phone or memory card) to use to save your files.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Scroll up the list, and then tap **Memory**.
5. Tap **Save Options**.
6. Tap **Pictures/Videos/Sounds**.
7. Tap **Phone Memory/Card Memory**.

Quick Menu




7.2 Phone Memory

Allows you to see information about the memory in your phone.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Scroll up the list, and then tap **Memory**.
5. Tap **Phone Memory**.
6. Tap **Memory Usage/My Pictures/My Videos/My Music/My Sounds**.

7.3 Card Memory

Allows you to see information about the memory on your card.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Scroll up the list, and then tap **Memory**.
5. Tap **Card Memory**.
6. Tap **Memory Usage/My Pictures/My Videos/My Music/My Sounds**.

Note




The Card Memory Usage option shows the total used memory and memory space remaining.

7.4 USB Mass Storage

Refer to page 125 for more information.



8. Phone Info


Allows you to view information specific to your phone and software.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Info**.

8.1 My Number




Allows you to view your phone number.

1. Tap , or press the Unlock Key  at the top edge of the phone.

2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Info**.
5. Tap **My Number**.

8.2 SW/HW Version




Allows you to view the versions of various applications, such as SW, PRL, Browser, AVR, MMS, Bluetooth, HW, and ESN.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Info**.
5. Tap **SW/HW Version**.

8.3 Icon Glossary




Quick Menu

Allows you to view all the icons and what they represent.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Settings**.
4. Tap **Phone Info**.
5. Tap **Icon Glossary**.

Games & Apps

Refer to page 66 for more information.

1. Tap  or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Games & Apps**.

Tools

Your phone tools include Bluetooth Menu, Voice Recorder, Voice Commands, Calculator, Ez Tip Calculator, Calendar, Alarm Clock, Stopwatch, World Clock, Notepad, Drawing Pad, and USB Mass Storage.


1. Bluetooth Menu




Refer to page 77 for more information.

2. Voice Recorder



Refer to page 55 for more information.

3. Voice Commands

This feature provides Voice-activated functions. Information on how to use the functions appear in the Info submenu. To access the Info submenu, follow the steps below. Then touch the Options icon  and touch **Info**. This is how you access the **Settings** menu.


1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Tools**.
4. Tap **Voice Commands**.

3.1 Call <Name or Number>


Press the Clear/Voice Command/Voice Recorder button  on your phone or  > Tools > Voice Commands to activate the Voice Commands function. Say "**Call**" followed by the Contact name or number you want to call, exactly as it is saved in the Contact List. If this contact has multiple phone numbers the system will state the numbers. You can say Yes or No. The LG9600 will then dial the phone number you want.

Quick Menu

3.2 Send Msg to <Name or Number>

Press the Clear/Voice Command/Voice Recorder button  on your phone to activate the Voice Commands function. Say "**Send Message**" and the voice command will prompt you for the type of message: Text Message or Multimedia Message. After choosing the message type, the system will ask you for the contact name or number; you can also say a Group name if you want to message an entire group. It will automatically start a message. If you say a full-sentence command, such as "**Send Message to Bob**," the system will automatically start a text message without asking for the message type. When using the "**Send Message**" command, speak clearly and say the number, group name, or name exactly as it appears in your Contact List.

3.3 Go to <Menu>

Press the Clear/Voice Command/Voice Recorder button  on your phone to activate the Voice Commands function. The "**Go to**" command allows you to access a phone menu (e.g., "**Go to Calendar**"). If no menu option is stated, a list of options will be provided.

3.4 Check <Item>

The "**Check**" command allows you to check Phone Status, Voicemail, Messages, Missed Calls, Time, Signal Strength, Battery level, and Volume.

3.5 Lookup <Name>

You can Read out, Create New, Erase, or Modify Contacts. Just follow the prompts.



3.6 Help

Provides general guidelines for using Voice Commands.


4. Calculator







Allows you to perform simple mathematical calculations. You can enter numbers up to the sixth decimal place. Calculations can be made with up to 3 lines at one time.

Adding a Calculator Shortcut

With the screen unlocked, spin the idle screen to display Shortcuts. Tap the Shortcut Menu Key , tap , scroll the ADD MENU list upward, tap Calculator (checkmark appears), and then tap **DONE**.

Shortcut

With the screen unlocked, spin the idle screen to display Shortcuts, and then touch Calculator .

1. Tap , or press the Unlock Key  at the top edge of the phone.
 2. Tap the Menu Key  to access the menu.
 3. Tap **Tools**.
 4. Tap **Calculator**.
 5. Enter the numbers to get the value you want. To cancel a calculation, tap **Reset**.
1. Tap , or press the Unlock Key  at the top edge of the phone.
 2. Tap the Menu Key  to access the menu.
 3. Tap **Tools**.
 4. Tap **Ez Tip Calculator**.
 5. Enter the variable fields (Total bill, Tip %, Split).

Quick Menu

- Touch the Total bill field to display a keypad for entering the amount.
- Touch the left and right arrow keys to increase or decrease the Tip % and Split amount(s).

The corresponding calculation fields (tip and total for each person) appear automatically.

7. Tap **Reset** when the keypad displays for another calculation.

6. Calendar




Refer to page 57 for more information.

7. Alarm Clock

Refer to page 59 for more information.




8. Stopwatch

Allows you to use your phone as a stopwatch. Start measuring time by touching **START** and end by touching **STOP**.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Tools**.
4. Tap **Stopwatch**.
5. Tap **START**, then the options:
 - Tap **LAP**.
 - Tap **STOP**.
 - Tap **RESUME** or **RESET**.

9. World Clock

Tells you the current time in another time zone or country.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Tools**.
4. Scroll up the list, and then touch **World Clock**.
5. Tap **CITIES** to choose from a list of available cities.
6. Tap a city in the list.

The display shows the position of the city on a world map.

7. Tap **OK** to zoom in on the city and view its date and time information.

Note

Tap **Set DST** to set to daylight saving time.

10. Notepad

Refer to page 64 for more information.

11. Drawing Pad

Refer to page 63 for more information.

Quick Menu

12. USB Mass Storage




Allows you to transfer content from your phone to your Windows® XP or Windows Vista™ PC (or vice versa) when your phone is connected to your Windows® XP or Windows Vista™ PC with a compatible USB cable. The Mac OS operating system is not supported. You can only access this menu when a microSD card is inserted into your phone (see page 18 for instructions).

Note

Do not insert or remove the microSD card while playing, deleting, or downloading Pictures/Videos/Music/Sounds. "Your Windows® XP or Windows Vista® PC" only. **The Mac OS operating system is not supported.**

Note

When you sync music from your PC, a folder named my_musicSYNCHED appears, but manually transferred files will not show on your handset and will appear in the **my_music** folder.

1. Tap , or press the Unlock Key  at the top edge of the phone.
2. Tap the Menu Key  to access the menu.
3. Tap **Tools**.
4. Place your finger on the Touch Screen, apply gentle upward pressure to scroll up the list, and then tap **USB Mass Storage**.

Call History

Refer to page 47 for more information.

Keypad

Refer to page 48 for more information.

Bluetooth

Refer to page 77 for more information.

E-mail

Refer to page 84 for more information.

IM

Refer to page 85 for more information.

TV & Radio

Refer to page 68 for more information.

Voicemail

Refer to page 48 for more information.

Safety

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate

FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving – driving safely is your first

responsibility;

- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations

Safety

of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices and Health

Care Facilities

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from the external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to the external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical

transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user

Safety

guide in an accessible place at all times after reading it.

Violation of the instructions may cause minor or serious damage to the product.

- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other

hazard.

- The phone shall only be connected to USB products that bear the USB-IF logo or have completed the USB-IF compliance program.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.
- Use the correct adapter for your phone when using the battery pack charger abroad.

Battery Information and Care

- Please read the manual for proper installation and removal

of the battery.

- Please read the manual for specified charger and charging method.
- Do not damage the power cord by bending, twisting, or heating. Do not use the plug if it is loose as it may cause electric shock or fire. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty. When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire. If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-

Safety

circuit the phone. Always cover the receptacle when not in use.

- Recharge the battery after long periods of non-use to maximize battery life. Battery life will vary due to usage pattern and environmental conditions.
- Please use only an approved charging accessory to charge your LG phone. Improper handling of the charging port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.
- Never store your phone in temperatures less than -4°F or greater than 122°F.
- Charging temperature range is 32°F and 113°F. Do not charge the battery outside this range. Doing so may generate excessive heat causing serious damage to the battery deteriorating battery life and/or other battery characteristics.
- Do not use or leave the battery in direct sunlight or inside a hot car. The battery may generate heat, smoke or flame, as well as deteriorating battery life and/or other battery characteristics.
- The battery pack has a protection circuit. Do not use near places that can generate more than 100V static electricity which could damage the protection circuit. Damaged protection circuits may rupture, smoke, or ignite.
- When using the battery for the first time, if it emits a bad smell, you see rust on it, or anything else abnormal, do not use the equipment. Return it to the place where it was bought.
- If children are allowed to use the device battery, an adult is

responsible for teaching about the safe handling and use of batteries, as well as supervising their proper use and care.

- Keep the battery away from young children. Safeguard so that small children do not remove the battery from the charger or device.
- If liquid from the battery rubs against skin or clothing, rinse with clean water. The battery liquid could cause skin irritation.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire. Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Never use and unapproved battery since this could damage the phone and/or battery and

Safety

could cause the battery to explode. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected.

If not, it may cause excessive heat or fire.

- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.

- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ringtones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.

Safety

- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Caution: **Avoid potential hearing loss.**

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise induced hearing loss. This includes the use of headphones (including headsets, earbuds and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a

ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies. The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings.

If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.

- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device,

discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: www.audiology.org

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD USA 20892-2320

Voice: (301) 496-7243

Email: nidcdinfo@nih.gov

Internet: <http://www.nidcd.nih.gov/health/hearing>

Safety

National Institute for Occupational Safety and Health

Hubert H. Humphrey Bldg.

200 Independence Ave., SW

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4674)

Internet:

<http://www.cdc.gov/niosh/topics/noise/default.html>

FDA Consumer Update

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones

emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such

as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data does not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure

to the user that is not necessary for device function; and

- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency

Safety

working group activities, as well. The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell,” “mobile,” or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the

conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

Safety

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect, if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at

which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop

a series of public information documents on EMF issues. The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC.

Safety

The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test

methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head.

Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential

risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data does not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using

wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly

Safety

precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cellphones/>)

Federal Communications
Commission (FCC) RF Safety
Program

(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-
Ionizing Radiation Protection

(<http://www.icnirp.de>)

World Health Organization (WHO)
International EMF Project

(<http://www.who.int/emf>)

National Radiological Protection
Board (UK)

(<http://www.nrpb.org.uk/>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your

Safety

attention off the road.

2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your Voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light,

or otherwise stationary. But if you need to dial while driving, follow this simple tip – dial only a few numbers, check the road and your mirrors, then continue.

7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations – with your phone at your side, help is only three numbers away.
9. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But

Safety

you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific

literature related to the biological effects of RF energy.

The exposure Limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below

the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be

Safety

maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 1.38 W/kg and when worn on the body, as described in this user's manual, is 0.764 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the

government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone.

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the

Safety

phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for

best use.

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that’s acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

To enter that the Hearing Aid Compatibility rating for your phone is maintained, secondary transmitters such as Bluetooth and WLAN (this phone does not have WLAN) components must be disabled during a call. See Page 91 for instructions to disable these components.

Accessories

There are a variety of accessories available for your phone and three easy ways to purchase them: shop online anytime at www.telusmobility.com, visit one of our Telus Communication Stores.



Chargers



Portable Stereo Speakers



Batteries



Holster



Bluetooth Headset



Bluetooth Headset



USB Cable



QWERTY Keypad (Optional)

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product

during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.

- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

LIMITED WARRANTY STATEMENT

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a

rental program.

(11) Consumables (such as fuses).

3. WHAT LG WILL DO:

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING

THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

LIMITED WARRANTY STATEMENT

5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit <http://us.lgservice.com>.
Correspondence may also be mailed to:

LG Electronics Service- Mobile
Handsets, P.O. Box 240007,
Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS. Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

