

LEARNING THE BASICS



INSTALLING THE BATTERY

1. Place your thumbnail in the notch of the phone at the top (1) and lift it up and out (2).



2. Slide the battery into the compartment so that the tabs on the end align with the slots at the bottom of the phone (1). Be sure to line up the gold contacts.
3. Lightly press down on the battery until it snaps into place (2).



4. Replace the cover.

Note: Make sure the power is off so that you don't lose any stored numbers or messages.

WARNING! FOR CONNECTION TO AN ELECTRICAL SUPPLY NOT LOCATED IN NORTH AMERICA, YOU MUST USE AN ADAPTER OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. USE OF THE WRONG ADAPTER COULD DAMAGE YOUR PHONE AND VOID YOUR WARRANTY. IMPORTANT SAFETY INSTRUCTIONS - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

TURNING YOUR PHONE ON AND OFF

To turn your phone on:

Press and hold the key until the phone switches on.

To turn your phone off:

Press and hold the key until the power-off image displays.

MAKING AND ANSWERING CALLS

To make a call:

1. From the Home screen, touch the **Dialer** icon. Enter the number you want to dial and press .
2. If you make a mistake while dialing, press the key to clear the last digit displayed. Press and hold to clear the entire display.
3. Briefly press the key to end the call.

To answer a call:

1. Press to answer an incoming call. If the **Any** key option in the **Answering mode** menu is activated, you can touch any key to answer a call except for the key.
2. End the call by pressing .

MUSIC PLAYER

To access music:

1. In Idle mode, press **Menu > My Downloads > Music > Music Player** and press the **Select** soft key or press .
2. From this screen you can play your music files.

IM & E-MAIL

To use IM (Instant Messaging):

1. In Idle mode, press **Menu > Messaging > IM**.
2. Select an account and press the **Select** soft key or press .
3. Enter the required sign in information then press the **Sign In** soft key.
Note: The information required for sign in varies depending on the Instant Messaging provider you use.
4. If you use Windows Live, agree to the Terms of use for this service and press **Accept**.
5. Follow the on-screen instructions to read, reply to, compose, send, and manage your Instant Messaging account.

To use E-mail:

1. In Idle mode, press **Menu > Messaging > Email**. Please note that additional charges may apply for accessing this service.
2. Follow the on-screen instructions.

QUICK PICS & VIDEO

To take a picture:

1. In Idle mode, press **Menu > My Downloads > Photos > Camera** and press to access the menu. Or, press the **Camera** key on the right side of the phone.
2. Adjust the image by aiming the camera at the subject.
3. Press the **Camera** key or to take the photo.

To record a video:

1. In Idle mode, press **Menu > My Downloads > Videos > Record Video**.
2. Before filming the video, press **Menu** to access camcorder options.
3. Adjust the image by aiming the camcorder at the subject.
4. Press to begin recording the video.
5. Press the **Stop** key to stop the recording and save the video file to your Videos folder.
6. Once the file saves, press to play back your video.

BLUETOOTH ACTIVATION

To turn Bluetooth on/off:

1. In Idle mode, press **Menu > Bluetooth** and press the **Select** soft key or press .
2. Turn **On** or **Off** and press the **Select** soft key or press .

When Bluetooth is on, you will see the icon on the screen.

Note: For more information, please see the online User Guide at www.samsung.com/userguides.

TECHNICAL SPECIFICATIONS

Network

- Dual Band HSDPA

Dimensions

- 116.5 x 53.8 x 15.2 mm

Weight

- 123 g

Display

- 2.4" 240 x 320 TFT 262K colors

Battery Standard

- Talk time - up to 4 hrs
- Standby time - up to 240 hrs

Memory

- Phone Book: 1000 contacts
- Speed Dial Numbers: 2-9
- Multimedia: Images, Videos, Sounds, and Game and apps shared memory

Messaging Capabilities

- Voice memo
- MMS/SMS

Camera / Video Specs

- 2M pixel camera
- 1600 x 1200 camera resolution

Bluetooth Supported Profiles

- Supports OPP, AVRCP, A2DP, FTP, DUN, HFP, HSP, BPP, SAP, SPP

Expandable Memory

- Up to 16GB

THE FINE PRINT

Samsung Electronics Canada Inc.

Customer Care Centre

1.800.SAMSUNG



www.samsung.ca

Many of the services and features described above are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas.

Please Note: Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of call, and voice, data and other application usage patterns.

Compatibility with all Bluetooth® and Pictbridge™ equipment is not guaranteed. The Bluetooth technology trademarks are owned by Bluetooth SIG, Inc., USA and used by Samsung Electronics Co. Ltd. under license.

Windows Live and Hotmail are either registered trade-marks or trade-marks of Microsoft Corporation in the United States and/or other countries.

© 2010 Samsung Electronics Canada Inc. All rights reserved. Samsung is a registered trademark of Samsung Electronics Co. Ltd. and its related entities. Specifications subject to change without notice.

GH68-29560A