



ENGLISH
LG-V905R

Quick Start Guide



P/N : MBM63399501 (1.0) H
Printed in Korea

Understanding your device

Before using the device, please read this!

To optimize Battery Life:

You can extend your battery's life between charges by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery:

- Turn off radio communications that you aren't using, such as Wi-Fi, Bluetooth, or GPS.
- Turn down screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail™, Calendar, Contacts, and other applications.
- If you know you won't be near a mobile or Wi-Fi network for a while, switch to Airplane mode.

To check the battery charge level:

- **Apps > Settings > About tablet > Status**

To monitor and control what uses the battery:

The Battery use screen lists the apps that have been using the battery, from greatest to least battery use. You can use it to turn off apps that you've downloaded, if they are consuming too much power.

- **Apps > Settings > Applications > Battery use.**

To download the USB Driver:

To use **USB tethering** and **USB debugging**, you need to install the "LG USB Driver" on your PC first. The LG USB Driver is downloadable from the LG website (www.lg.com). Go to <http://www.lg.com> and select your region, country & language.

To reboot your device when the screen freezes:

Remove the back cover and press the **RESET button** with a pointed object to restart your device. If it still does not work, please contact customer service.



To transfer files to a computer using USB:

You must install the latest version of **Windows Media Player** to the computer.

 
Inserting the SIM card

Before you can start exploring your new device, you'll need to set it up.

To insert the SIM card:

1. Press and slide the back cover upwards with both hands (see image below).
2. Slide the SIM card into the SIM card slot until it clicks into place. Make sure the gold contact area on the card is facing downwards.
3. Slide the back cover downwards until it clicks into place (see image below).

NOTE: If you install the SIM card while the device is on, your device will reboot automatically.

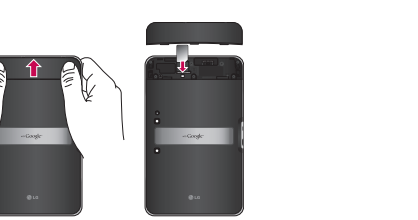

Locking and unlocking the screen

When you do not use the device for a while, the screen is turned off and locked automatically to prevent unintended operation and save the battery power. When you are not using your device, press the **Power/Lock Key** to lock your device.

To turn on the screen by pressing the Power/Lock Key:

Your Lock Screen will appear.

To touch and hold the Power/Lock Key:

 
A circle appears on the screen around your finger.

To drag your finger to the edge of the larger circle that surrounds it:

The screen is unlocked and the last screen you were working on opens.



Device components

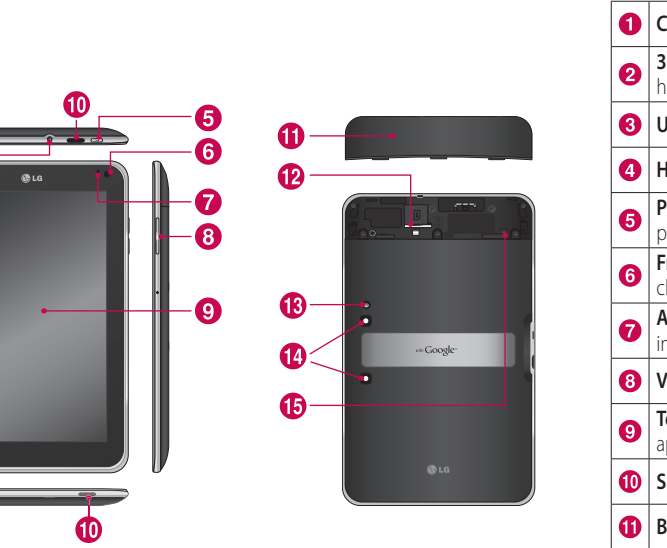


WARNING: Placing a heavy object on the device or sitting on it can damage its LCD and touch screen functionalities.

1. **Charger port** lets you charge your device using the provided travel adapter.
2. **3.5mm Headset Jack** lets you to plug in an optional headset for convenient, hands-free use. You can also plug in headphones to listen to music.
3. **USB cable port** allows you to connect a USB cable.
4. **HDMI cable port** allows you to connect an HDMI cable.
5. **Power/Lock Key** locks the screen on your device. Press and hold to open the power off menu.
6. **Front-facing Camera Lens** use for taking pictures and recording videos. Keep clean for optimal performance.
7. **Ambient Light Sensor** detects available environmental light and automatically increases or decreases the display's backlighting.
8. **Volume Keys** allow you to adjust the notification and media volumes.
9. **Touchscreen** displays all the information needed to operate your device, such as applications, date, time, signal status, and battery strength.
10. **Speaker** lets you hear notifications and sounds.
11. **Back Cover** encloses the SIM card compartment.
12. **SIM card slot** encloses the SIM card.
13. **Camera Flash** helps picture and video quality when taking pictures or recording videos in low light conditions.
14. **Rear-facing Camera Lens** use for taking pictures and recording videos. Keep clean for optimal performance.
15. **Reset button** reboots your device.

Your Home screen and basics


To navigate your Home screen, simply swipe your finger to the left or right to view your Home screen panels. You can also customize each panel with widgets and shortcuts to your favourite applications, and set a wallpaper.

 The Home screen is your starting point to access all the features on your device. It displays application shortcuts, icons, widgets, and other features.

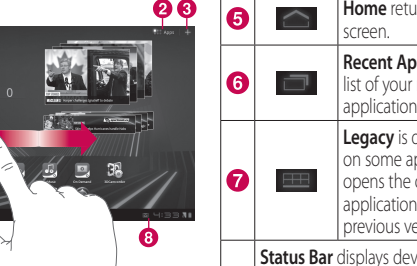

Navigation buttons

 1. **Google Search™** opens the Google Search™ application.
2. **Apps Launcher** open the Launch screen to view installed applications.
3. **Home screen Settings** allows you to customize your home screen panels.
4. **Back** go to the previous screen.
5. **Home** return to the Home screen.
6. **Recent Apps** displays a list of your recently used applications.
7. **Legacy** is displayed only on some applications and opens the options menu for applications designed for previous versions of Android.
8. **Status Bar** displays device status information, including the time, signal strength, battery status, and notification icons.

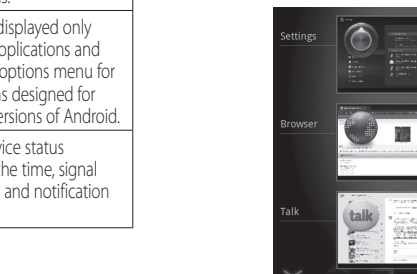


Using the Multi-tasking functions

Multi-tasking is easy with Android because open applications keep running even when you open another application. There's no need to quit an application before opening another. You can use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

Opening and Switching Applications

 
Simply touch **Recent Apps** on the screen to view the list recently used applications. Touch an application to return to it.

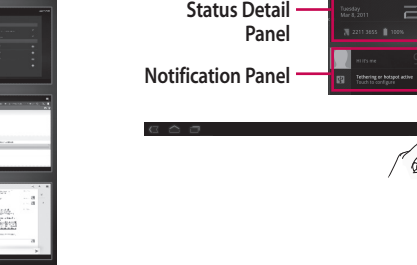

Notifications Panel and Quick Settings

The Notifications Panel allows you to check and manage Wi-Fi, Bluetooth as well as other notifications, such as the arrival of new messages, calendar events, alarms, and ongoing events. When you receive a notification, text appears briefly and the notification icon will be displayed in the Status Bar. Depending on your settings, you may hear a notification sound.

 You can open the Notifications Panel to view a list of all recent notifications. When you touch the Status Bar once, you can see the Notifications Panel along with the Status Detail Panel.

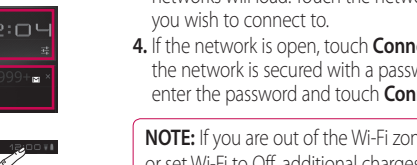

Wi-Fi Networks

With **Wi-Fi**, you can use high-speed Internet access within the coverage of the wireless access point. You can enjoy wireless Internet with Wi-Fi without extra charges. Once the **Wi-Fi setting** is **ON**, a list of active and in-range Wi-Fi networks is displayed. You may need a password depending on the network.

Turn on Wi-Fi and connect to a network

1. **Apps > Settings > Wireless & networks > Wi-Fi settings > Wi-Fi**
2. A checkmark indicates that Wi-Fi is on.
3. A list of active and in-range Wi-Fi networks will load. Touch the network you wish to connect to.
4. If the network is open, touch **Connect**. If the network is secured with a password, enter the password and touch **Connect**.

NOTE: If you are out of the Wi-Fi zone or set Wi-Fi to Off, additional charges may be applied by your mobile operator for mobile data use.

Opening webpages

1. **Apps > Browser**
2. Touch the URL field and input the URL, then touch **Go**.

To zoom in or out, double-tap the screen. You can also use the two finger zoom; place your two fingers on the screen and slowly pinch or spread apart.

While browsing the web page, use the following options:

- + Open a new tab.
- ☆ Add the current web page as a Bookmark.
- ↻ Refresh the web page.
- ➔ Go to page you connected to after the current page.
- ← Goes to the previous page.
- 🔖 View your current bookmarks and add a new bookmark. You can also view your browser history.
- 🔍 Search web pages.

Connecting to a computer via USB

 
You can connect your device to a computer with a USB cable, to transfer music, pictures, and other files between your tablet and the computer. Using Media Transfer Protocol (MTP), you can manage contents on your tablet storage.

NOTE: Before using MTP, please read the following first!

- You must install the latest version of Windows Media Player to use MTP. You can download the latest version of Windows Media Player from the Microsoft website: <http://www.microsoft.com/windows/windowsmedia/download>
- **MTP works with:**
 - Windows XP Service Pack 2 or higher with Windows Media Player 10 or higher installed (Windows Media Player 11 or higher is recommended).
 - Windows Vista and Windows 7.
 - Mac OS with third party software XNUB.
 - Linux with third party software libmtp.

Camera

Getting to know your camera view finder

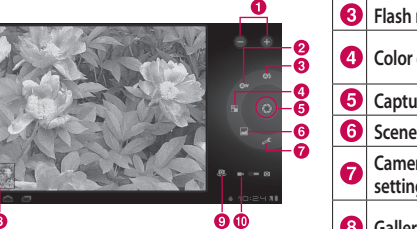

Taking a photo

1. **Apps > Camera**
2. Holding the device, point the lens towards the subject you want to photograph.
3. Touch and hold the **Capture** button lightly and a focus box will appear in the center of the viewfinder screen. (A focus box appears only on the rear-facing camera mode.)
4. Position the device so you can see the subject in the focus box.
5. When the focus box turns green, the camera has focused on your subject.
6. Take your finger off the **Capture** button.

1	Zoom	Zoom in or zoom out.
2	White balance	Adjust the amount of sunlight entering the image.
3	Flash mode	Enable and disable Flash.
4	Color effect	Choose a color tone for a new photo.
5	Capture	Take a photo.
6	Scene mode	Change Scene mode.
7	Camera settings	Change the camera settings.
8	Gallery	Access your saved photos from the camera mode.
9	Switch lenses	Switch between the rear-facing camera lens and the front-facing camera lens.
10	Video mode	Touch the video icon to switch to video mode.

3D Camcorder and 3D Player

Getting to know your 3D Camcorder view finder



Taking a 3D Video

1. **Apps > 3DCamcorder**
2. Holding the device, point the lens towards the subject you want to record.
3. Touch the **Record** button once to start recording. REC will appear on your viewfinder with a timer showing the length of the video.
4. Touch the **Stop** button to stop recording.

TIP: Use Help whenever you want to know how function operates.

Playing a 3D Video

1. **Apps > 3DPlayer**
2. Select a video from your 3D video list. It will start playing automatically.
- **Watching the 3D video on a 3D TV:** Connect the HDMI cable from the tablet to your 3D TV. Switch to **3D TV** mode and wear the 3D glasses (for 3DTV).

1	3D mode	Choose the 3D camera mode.
2	Depth control	Control the depth of 3D video.
3	3D Camera settings	Change the 3D camera settings.
4	Help	Provide you with a quick guide for 3D Camera.
5	Gallery	Access your saved 3D videos from within the 3D camera mode.
6	Record/Stop	Start and stop recording a 3D video.