

Important Safety Precautions

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.



Violation of the instructions may cause serious injury or death.



- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



- Never place your phone in a microwave oven as it will cause the battery to explode.
- Do not dispose of your battery by fire or with hazardous or flammable materials.



- Make sure that no sharp-edged items such as animal's teeth, nails, come into contact with the battery. There is a risk of this causing a fire.



- Store the battery out of reach of children.
- Be careful that children do not swallow any parts such as rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.



- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



Important Safety Precautions



- When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.



- Do not use a hand-held phone while driving.



- Do not use the phone in areas where its use is prohibited. (For example: aircraft).

- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.

- Never store your phone in temperatures less than -4°F or greater than 122°F .



- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.



- Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.



- Do not use your phone in high explosive areas as the phone may generate sparks.

- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.



- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



- Do not disassemble the phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



- Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



- Do not hold or let the antenna come in contact with your body during a call.
- An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.



Contents

Important Safety Precautions1	Quick Access to Convenient Features 16	Text Input Examples19
Contents4	Manner Mode16	Using Abc (Multi-tap) Text Input19
Welcome7	Lock Mode16	Using T9 Mode Text Input19
FCC Part 15 Class B Compliance7	Mute Function16	Using the NEXT Key20
Industry Canada Compliance7	Volume Quick Adjustment16	Adding Words to the T9 Database20
Technical Details7	Adjusting Speaker On17	
FCC RF Exposure Information9	Call Waiting17	
	Caller ID17	
	Speed Dialing17	
Phone Overview10		
Menu Overview11	Entering and Editing Information . .18	Contacts in Your Phone's Memory .21
Getting Started with Your Phone .12	Text Input18	The Basics of Storing Contacts Entries 21
The Battery12	Key Functions18	Options to Customize Your Contacts 22
Battery Charge Level12	Text Input Modes18	Adding or Changing the Group22
Turning the Phone On and Off13	Abc (Multi-tap) Mode18	Changing the Call Ringer22
Signal Strength13	T9Word (T9) Mode18	Adding or Changing the Memo22
Screen Icons14	123 (Numbers) Mode18	Adding or Changing the Picture ID . . .23
Making Calls15	Symbols Mode18	Adding Speed Dial23
Receiving Calls15	Smileys Mode18	Adding Voice Dial23
	Pre-set Msg19	
	Recent Msgs19	Editing Contacts Entries24
	Changing Letter Case19	Adding Another Phone Number24
	Initial Cap (T9Word / Abc)19	From the Main Menu Screen24
	Caps Lock (T9WORD / ABC)19	Through Contacts24
	Lower Case (T9word / abc)19	Default Numbers24
		Changing the Default Number24
		Editing Stored Phone Numbers . . .25
		Editing Stored Names25
		Editing Customized Options25

Deleting	26	4. Speed Dials	31	To access to Sounds menu	42
Deleting a Phone Number from a Contact	26	5. Erase all Contacts	32	To access to Wallpaper menu	42
Deleting a Contact Entry	26	Call History	32	To access to Games menu	42
Additional Ways to Delete a Contact	26	1. All Calls	33	To access to Tools menu	42
Deleting a Speed Dial	26	2. Outgoing Calls	33	To access to Favourites menu	44
Phone Numbers With Pauses	27	3. Incoming Calls	33	To access to Memory Status menu	44
Hard Pause (P)	27	4. Missed Calls	33		
2-sec Pause (T)	27	5. Erase History	33	Web	45
Storing a Number with Pauses	27	6. Timers	34	1. Web	45
Adding a Pause to an Existing Number	27	Messaging	34	Settings	46
27		1. Voice Mail	35	1. Sounds	46
Searching Your Phone's Memory	28	2. Text Messaging	36	1.1 Ringers	46
Scrolling Through Your Contacts	28	2.1 Send New	36	1.2 DTMF Length	46
Searching by Letter	28	2.2 Inbox	37	1.3 Volume	47
Making a Call From Your Phone's		2.3 Outbox/Sent	38	1.4 Alerts	47
Memory	28	2.4 Templates	39	2. Display	48
From Contacts	28	2.5 Drafts	39	2.1 Banner	48
From Recent Calls	29	2.6 Saved	39	2.2 Backlight	48
		2.7 Erase Messages	39	2.3 Wallpaper	48
		2.8 Settings	40	2.4 Contrast	48
Using Phone Menus	30	3. Web Alert	41	2.5 Menu Style	48
Menu Access	30	4. e-mail	41	2.6 Theme Colour	49
Contacts	30	5. IM & Chat	41	2.7 Time	49
1. List Entries	31	Do More	42	2.8 Fonts	49
2. New Entry	31	To access to Wireless Web menu ..	42	2.9 Power Saver	49
3. Groups	31			3. Games / Tools	50



Contents

3.1 Backlight Settings	50	Warranty Information	70
3.2 Volume	50		
3.3 Notification	50		
4. Setup	50		
4.1 Short cut	50		
4.2 Call Answer	51		
4.3 Auto-Answer	51		
4.4 Auto-Prepend	51		
4.5 Language	51		
4.6 TTY Mode	51		
4.7 Data/Fax	52		
4.8 PC Connection	52		
5. Advanced	52		
5.1 Phone Info	52		
5.2 System	52		
5.3 Security	53		
6. Airplane Mode	54		
7. Icon Glossary	54		
Safety	55		
TIA Safety Information	55		
Consumer Information on SAR	67		
Accessories	69		

Thank you for choosing the advanced and compact LG125 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA) and Advanced Mobile Phone Service (AMPS). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this phone offers:

- Large, easy-to-read, 7-line backlight LCD with status icons.
- Paging, messaging, voice mail, and caller ID.
- 18-key keypad.
- Speaker phone feature.
- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and French) capabilities.

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Industry Canada Compliance

This phone complies with Industry Canada RSS 133. This phone complies with the Class B limits for radio noise emissions as set out in the interference causing standard entitled "Digital Apparatus" ICES-003 of Industry Canada.

Technical Details

The LG 125 is an all digital phone that operates on both Code



Welcome

Division Multiple Access (CDMA) frequencies: cellular services at 800 MHz and Personal Communication Services (PCS) at 1.9 GHz. Also, the LG 125 works on Advanced Mobile Phone Service (AMPS). We call it a tri-mode phone. Since the phone operates on Cellular, PCS and AMPS, the call fail rate is less than on a conventional dual-mode or singlemode phone.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard Handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base station Transmission System), and MS (Mobile Station). The following table lists some major CDMA standards.

* TSB -74: Protocol between an IS-95A system and ANSI J-STD-008 1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000 ANSI TIA/EIA 553A	CDMA Dual-Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band cdma2000 1xRTT AirInterface Advanced Mobile Phone Service
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Nom-signaling data comm.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-99 TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Async Data and Fax Short message service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
Performance	TIA/EIA/IS-97 TIA/EIA/IS-98 ANSI J-STD-018 ANSI J-STD-019 TIA/EIA/IS-125	Cellular base station Cellular mobile station PCS personal station PCS base station Speech CODEC

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 3/4 inches (2 cm) from the body. To comply with FCC and IC RF exposure requirements, a minimum separation distance of 3/4 inches (2 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain

3/4 inches (2 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC and IC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

A minimum distance of 8 inches (20 cm) must be maintained between the user / bystander and the vehicle-mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov.

Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

Phone Overview



1. **Earpiece**
2. **Flip** Flip open the case to answer an incoming call and close to end the call.
3. **LCD Screen** Displays messages and indicator icons.
4. **Left Soft Key** Use to display the function setting menu.
5. **Headset Jack**
6. **Side Keys** Use to adjust the ringer volume in Main Menu Screen and the earpiece volume during a call.
7. **SEND Key** Use to place or answer calls.
8. **Voice Dial Key** Use for access to Voice Dial.
9. **Manner Mode Key** Use to set the Manner Mode (from Main Menu Screen press and hold ***8** for about 3 seconds).
10. **Right Soft Key** Use to select an action within a menu.
11. **Navigation Key** Use for quick access to Messaging, List Entries, Scheduler, and All Calls.
12. **END/POWER Key** Use to turn the power on/off and to end a call. Also use to return to the main menu display screen.
13. **Back Key** Press to delete a single space or character. Press and hold to delete entire words. Press this key once in a menu to go back one level.
14. **Speakerphone Key** Use to set the Speaker Phone Mode.
15. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
16. **Lock Mode Key** Use in Main Menu Screen to set the lock function by pressing and holding the key **#0** for about 3 seconds.
17. **Microphone**



Contacts

1. List Entries
2. New Entry
3. Groups
4. Speed Dials
5. Erase all Contacts



Call History

1. All Calls
2. Outgoing Calls
3. Incoming Calls
4. Missed Calls
5. Erase History
 1. All Calls
 2. Outgoing Calls
 3. Incoming Calls
 4. Missed Calls
6. Timers
 1. Last Call
 2. Lifetime



Messaging

1. Voice Mail
2. Text Messaging
3. Web Alert
4. e-mail
5. IM & Chat



Do More

1. Wireless Web
2. Sounds
3. Wallpaper
4. Games
5. Tools
6. Favourites
7. Memory Status



Web

1. Web



Settings

1. Sounds
 1. Ringers
 2. DTMF length
 3. Volume
 4. Alerts
2. Display
 1. Banner
 2. Backlight
 3. Wallpaper
 4. Contrast
 5. Menu Style

6. Theme Colour
7. Time
8. Fonts
9. Power Saver
3. Games / Tools
 1. Backlight Settings
 2. Volume
 3. Notification
4. Setup
 1. Short cut
 2. Call Answer
 3. Auto-Answer
 4. Auto-Prepend
 5. Language
 6. TTY Mode
 7. Data/Fax
 8. PC Connection
5. Advanced
 1. Phone Info
 2. System
 3. Security
6. Airplane Mode
7. Icon Glossary



The Battery

NOTE It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

Installing the Battery

To install the battery, insert the battery into the opening on the back of the phone. Put the battery cover on the battery and push it slightly upwards.

Removing the Battery

Turn the power off. While pressing the PUSH button on the back of the phone, pull the battery cover downward and remove it. Then remove the battery by pressing the upper area of it.

Charging the Battery

To use the charger provided with your phone:

Warning! Use only the charger provided with the phone. Using any charger other than the one included with the LG125 may damage your phone or battery.

1. Plug the round end of the adapter into the phone's charge jack and the other end into an electrical outlet.
2. The charge time varies depending upon the battery level. The maximum charge time for a fully discharged battery is 3.5 hours.

Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying **LOW BATTERY WARNING!** If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.




Fully Charged

Fully Discharged


Turning the Phone On and Off

Turning the Phone On

1. Install a charged battery or connect the phone to an external power source such as a vehicle power charger or hands-free car kit.
2. Press  for a few seconds until the LCD screen lights up.

NOTE Like any other radio device, avoid any unnecessary contact with the antenna while your phone is on.

Turning the Phone Off

1. Press and hold  until the display turns off.

Signal Strength






















Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon: The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.





Getting Started with Your Phone

Screen Icons

When the phone is powered on, the top line of the LCD screen displays icons indicating the status of the phone.

	Signal strength indicator. The strength of the signal received by the phone is indicated by the number of bars displayed.		New Msgs & Voice Mails.
	In use indicator. A call is in progress. * No icon indicates the phone is in Main Menu Screen.		Battery indicator. Indicates battery charge level.
	No service indicator. The phone is not receiving a system signal.		Charging indicator.
	IS-2000		Manner Mode.
	Digital indicator. Digital service is available.		Ringer on.
	Analog indicator		Ringer off / Silence All Mode
	Roaming indicator. The phone is outside of the home service area.		SSL
	1X Data.		TTY Mode.
	New Voicemails.		Speaker On.
	New Messages indicator.		Missed Calls.
			Incoming Calls.

Making Calls



1. Make sure the phone is turned on. If not, press  for about 3 seconds.
2. Enter the phone number (include the area code if needed).
3. Press .

If the phone is locked, enter the lock code.


Call Failed - indicates the call did not go through.

4. Press  to end the call.

Correcting Dialing Mistakes



If you make a mistake while dialing a number, press  once to erase the last digit entered, or hold down  for at least 2 seconds to delete all digits.

Redialing Calls

1. Press  twice to redial the last number you dialed.
The last 30 numbers are stored in the call history list and you can also select one of these to redial.

Receiving Calls

1. When the phone rings or vibrates, press  to answer.


NOTE If you press  or  (the side keys) while the phone is ringing, the ringing or vibration is muted for that call.

2. Press  to end the call.



Quick Access to Convenient Features

Manner Mode

Use Manner Mode in public places. When Manner Mode is set,  is displayed on the screen, the key tones are silent, and the phone is set to vibrate.

Manner Mode Quick Activation

1. From Main Menu Screen press  for 3 seconds.

Manner Mode Quick Cancellation

1. Press  to switch to Normal Mode.

Lock Mode

Use Lock Mode to prevent others from using your phone. When Lock Mode is set, your 4-digit password is required to use the phone.

NOTE The lock code/password is the last 4 digits of your phone number. You can change to a new password using the Security menu.

Lock Mode Quick Activation

1. From Main Menu Screen press  for 3 seconds.

Lock Mode Quick Cancellation

1. Press Right Soft Key  **Unlock** then enter your 4-digit password.

Mute Function

The Mute function prevents the other party from hearing your voice, but allows you to hear the other party.

Mute Quick Activation

1. Use  to highlight **Mute**, then press  during a call.

Mute Quick Cancellation

1. Use  to highlight **Unmute**, then press  again.


Volume Quick Adjustment


Use the side keys to adjust the earpiece and ringer volumes. The upper key increases the volume and the lower key decreases the volume.

- Earpiece volume can be adjusted during a call. From Main Menu Screen Ringer volume can be adjusted.

NOTE Key beep volume is adjusted through the Sounds Volume (Menu -> 6 -> 1 -> 3 -> 3).



Adjusting Speaker On

During a call, press the Speakerphone key  to quickly activate Speaker On allowing your phone to function as a speaker box.

NOTE To cancel Speaker On, press Speakerphone Key  again.

Call Waiting

Your cellular service may offer call waiting. While a call is in progress, two beeps indicate another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.

1. Press  to receive a waiting call.
2. Press  again to switch between calls.

Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name appears with the number. Check with your service provider to ensure they offer this feature.

Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly and easily with a few keystrokes. Your phone recalls the number from your Contacts, displays it briefly, and then dials it.

Dialing Single Digit Speed Dials (from 1 to 9)

Press and hold the Speed Dial number.

OR

Enter the speed dial number and press .

Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the last digit.

OR


 




Enter the first and second digits and press .





Text Input

You can input and edit your Banner, Schedule, Contacts, and messages.

Key Functions

-  **Right Soft Key** (Left Soft Key): Press to scroll through the following text input modes:
Abc -> T9Word -> 123 -> Symbols -> Smileys.
-  **Shift:** Press to change case.
T9 text : T9Word -> T9WORD -> T9word
Abc text : Abc -> ABC -> abc
-  **Next :** In T9 mode, press to display other matching words.
-  **Space :** Press to complete a word and insert a space.
-  **Clear :** Press to delete a single space or character. Hold to delete words.
-  **Punctuation :** In T9 mode, press to insert punctuation in a word and complete a sentence.

Text Input Modes

There are five modes for entering text, numbers, special characters, and punctuation. In a text entry field, pressing Right Soft Key  (or Left Soft Key ) displays a pop-up list of text modes.

Abc (Multi-tap) Mode

Use to type text using one keystroke per letter. The phone translates keystrokes into common words by using the letters on each key and a compressed database.

T9Word (T9) Mode

Use to add words to the T9 database.

123 (Numbers) Mode

Use to type numbers using one keystroke per number.

Symbols Mode

Use to insert special characters or punctuation. There are 34 special characters including “SP” which inserts a space and “LF” which forces the text to the next line.

Smileys Mode

Use to insert smiley graphics. There are 35 smiley characters.

 
Pre-set Msg

Use to insert predefined phrases.

Recent Msgs

Use to insert your recent messages.

Changing Letter Case

Using T9 and Abc text input modes you can set the capitalization. Press  to reach the following:

Initial Cap (T9Word / Abc)

Only the first letter is capitalized and subsequent letters are lower case.

Caps Lock (T9WORD / ABC)

All letters are capitalized.



Lower Case (T9word / abc)

All letters are in lower case.








Text Input Examples

Display the text modes and select a text mode:






 




 







1. In a text entry field, press Right (or Left) Soft Key  to display text modes.

2. Press  to highlight the text input mode you want to use.
3. Press  to select the highlighted text input mode.

Using Abc (Multi-tap) Text Input

1. Press Right (or Left) Soft Key  () to change to Abc mode.
2. Press  to change to ABC Caps Lock.
3. Press     .
LG is displayed.

Using T9 Mode Text Input

1. Press Right (or Left) Soft Key  () to change to T9Word mode.
2. Press     .
3. Press  to complete the word and add a space.
4. Press            .

Call the office. is displayed.



Using the NEXT Key

After you have finished entering a word, if the word displayed is not the one you want, press **0 next** to display additional choices of words from the database.

1. Press **4 ghi** **6 mno** **6 mno** **3 def** .

Good is displayed.

2. Press **0 next** .

The display gives you additional choices such as: **Home**, **Gone**, **Hood**, etc.


Adding Words to the T9 Database


If a word is not in the T9 database, add it using Abc (Multi-tap) mode text entry.

1. Press Right Soft (or Left) Key  to change to Abc (multi-tap) mode.

2. Press **2 abc** **2 abc** **6 mno** **6 mno** **6 mno** **7 p qrs** .

Bop is displayed.

3. Press Right Soft (or Left) Key  to change to T9 mode to add the word Bop to the T9 database.

4. Press **BACK**  to erase the existing word.

5. Press **2 abc** **6 mno** **7 p qrs** .

Cop is displayed.

6. Press **0 next** **0 next** .

Bop is displayed.

Contacts Entries

This allows you to have easy access to your most frequently dialed phone numbers. You may store up to 500 entries with up to 5 phone numbers each. Each entry may be up to 32 characters. Each phone number may be up to 48 digits.

The Basics of Storing Contacts Entries



1. From Main Menu Screen, enter the phone number you want to save (up to 48 digits).

2. Press Left Soft Key **Save**.

3. Use **Left Arrow** to select **New Name** or **Existing** and press **OK**.

NOTE Use Existing to add another phone number to a contact already stored in memory.

4. Use **Left Arrow** to select a Label and press **OK**.

Mobile / Home / Office / Fax / Pager

A confirmation message is displayed briefly.

5. Enter a name for the phone number (up to 32 characters) and press **Left Arrow**.



NOTE To further customize the Contact entry, press Left Soft Key **Done**.

NOTE If the information is complete, press **Right Arrow** to return to the Main Menu Screen.



 
6. Continue saving the entry as a Speed Dial, high light the phone number, then press Right soft key **Options**.

7. Press **7.00** **Set Speed Dial** to Enter a Speed Dial digit (e.g., 2). Use the keypad and press **OK** or Use **Left Arrow** to highlight the Speed Dial location and press **OK** two times.



8. Continue saving the entry to have Voice Dial access use **Left Arrow** to highlight the phone number and press Right soft key **Options**.

9. Press **2abc** **Set Voice Dial** to enter the Voice Dial module.

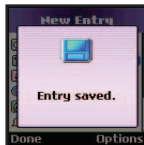







10. Highlight **OK**, and press **OK**. Follow the recording voice. Press **Right Arrow** to return to the Main Menu Screen.



Contacts in Your Phone's Memory









Options to Customize Your Contacts

Once the basic phone number and name information is stored in your Contacts, you can edit and customize each entry.

1. Press Right Soft Key  **Contacts** and use  to highlight the contact entry you want to edit, then press .
2. Highlight **Edit Entry**, and press .
3. Use  to highlight the information you want to customize, then press .

Adding or Changing the Group

Allows you to manage your Contacts entries by organizing them into groups.










1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press .
 2. Highlight **Edit Entry**, and press .
 3. Use  to highlight **No Group**, then press .
 4. Use  to select the Group, then press .
- No Group / Family / Friends / Colleagues / Business / School**

5. Press Left Soft Key  **Done** to save the change.

NOTE Use Menu -> 1 -> 3 to change the name of a group, add a group, and delete a group.









Changing the Call Ringer

Allows you to identify who is calling, by setting different ringers for different phone numbers in your Contacts. It is automatically set to the default ringer when the Contact is saved.

1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press .
2. Highlight **Edit Entry**, and press .
3. Use  to highlight **Default**, then press .
4. Use  to select the Ringer Type, then press .
5. Press Left Soft Key  **Done** to save the change.












Adding or Changing the Memo

Allows you to enter up to 32 characters as a memo to the Contact entry.













1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press .
2. Highlight **Edit Entry**, and press .
3. Use  to highlight **Memo**, then press .
4. Enter text, then press .
5. Press Left Soft Key  **Done** to save the change.

Adding or Changing the Picture ID








Allows the phone to display an image to identify the caller.

1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press .
2. Highlight **Edit Entry**, and press .
3. Use  to highlight **Default**, then press .
4. Press Right Soft Key  **More** to display additional choices.
5. Use  to select one, then press .
6. Press Left Soft Key  **Save**.
7. Press Left Soft Key  **Done** to save the change.

Adding Speed Dial

1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press .
2. Highlight **Edit Entry**, and press .
3. Use  to highlight the phone number you want to set with a Speed Dial, then press Right Soft Key  **Options**.
4. Press  to select  **Set Speed Dial**.
5. Enter a Speed Dial digit. Use the Keypad, then press , or use  to highlight the Speed Dial digit, then press  two times.
6. Press Left Soft Key  **Done** to save the change.

Adding Voice Dial

1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press .
2. Highlight **Edit Entry**, and press .
3. Use  to highlight the phone number you want to set with a Voice Dial and Right Soft Key  **Options**.
4. Press  **Set Voice Dial**.



Contacts in Your Phone's Memory

5. Highlight **OK**, and Press .
6. Follow the Voice Dial prompts.
7. Press Left Soft Key **Done** to continue editing the Contact entry, or Press to return to the Main Menu Screen.

Editing Contacts Entries

Adding Another Phone Number

From the Main Menu Screen

1. From Main Menu Screen enter the phone number you want to save (up to 48 digits).
2. Press Left Soft Key **Save**.
3. Use to highlight **Existing**, then press .
4. Use to highlight the existing Contact entry, then press .
5. Use to highlight the desired Phone Type, then press .
6. Press Left Soft Key **Done** .

Through Contacts





1. From Main Menu Screen press Right Soft Key **Contacts**. Your Contacts display alphabetically.
2. Use to highlight the Contact entry you want to edit, then press .
3. Highlight **Edit Entry**, and press .
4. Use to highlight **Add Number**, then press .
5. Enter the number, then press .
6. Use to highlight a Label, then press .
7. Press Left Soft Key **Done** .

Default Numbers









The phone number saved when a Contact is created is the Default Number. If more than one number is saved in a Contact entry, another number can be designated as the Default Number.

Changing the Default Number



1. Press Right Soft Key **Contacts** to display your Contacts alphabetically.
2. Use to highlight the Contact entry you want to edit, then press .

3. Highlight **Edit Entry**, and press .
4. Use  to highlight the phone number you want to set as the Default Number, then press Right Soft Key  **Options**.
5. Press  **Set as Default #**.
A confirmation message is displayed.






Editing Stored Phone Numbers

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Highlight **Edit Entry**, and press .
4. Use  to highlight the phone number, then press .
5. Edit the phone number as necessary, then press .
6. Press Left Soft Key  **Done**.

Editing Stored Names









1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry you want to edit,

then press .

3. Highlight **Edit Entry**, and press .
4. Use  to highlight the name, then press .
5. Edit the name as necessary, then press .
6. Press Left Soft Key  **Done** to save the change.

Editing Customized Options

Edit any of the Contacts options in the same manner as when the Contact is created.








1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Highlight **Edit Entry**, and press .
4. Use  to highlight the information you want to customize, then press .
5. Edit the information as necessary, then press .
6. Press Left Soft Key  **Done** to save the change.







Contacts in Your Phone's Memory

Deleting

Deleting a Phone Number from a Contact

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry, then press .
3. Highlight **Edit Entry**, and press .
4. Use  to highlight the phone number to be deleted.
5. Press Right Soft Key  **Options**.
6. Press  **Erase Field**.
7. Select **Erase**.
A confirmation message is displayed.


Deleting a Contact Entry

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry to be deleted, then press .
3. Highlight **Erase Entry**, and press .












4. Select **Erase**.

A confirmation message is displayed.

Additional Ways to Delete a Contact

At any time when your Contacts are displayed, the Right Soft Key  **Options** allows you to erase the highlighted entry.


Deleting a Speed Dial

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
 2. Use  to highlight the Contact entry, then press .
 3. Highlight **Edit Entry**, and press .
 4. Use  to highlight the speed dial number.
 5. Press Right Soft Key  **Options**.
 6. Press  **Set Speed Dial**,  to highlight the speed dial entry, then press .
 7. Highlight **Erase Speed Dial** and press .
 8. Highlight **Erase** and press .
- A confirmation message is displayed.

Phone Numbers With Pauses

When you call automated systems such as voice mail or credit billing numbers, you often have to enter a series of numbers. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (P, T). There are two different types of pauses you can use when storing a number:





Hard Pause (P)






The phone stops dialing until you **Send Tone** or press  to advance to the next number.

2-sec Pause (T)













The phone waits 2 seconds before sending the next string of digits.

Storing a Number with Pauses

1. Press Left Soft Key  **Menu**.
2. Press  **Contacts**.
3. Press  **New Entry**.
4. Enter the number.
5. Press Right Soft Key  **Options**.

6. Use  to select pause type, then press  .
Hard pause / 2-sec pause
7. Enter additional number(s) (e.g., pin number or credit card number), then press  .
8. Use  to select a Label, then press  .
9. Enter a name (up to 32 characters).
A confirmation message is displayed.

Adding a Pause to an Existing Number

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry to edit, then press  .
3. Highlight **Edit Entry**, and press  .
4. Use  to highlight the number then press  .
5. Press Right Soft Key  **Options**.
6. Press  **Hard pause** or  **2-sec pause**.
7. Enter additional number(s), then press  .
8. Use  to confirm the Label, then press  .





Searching Your Phone's Memory


The LG125 phone is able to perform a dynamic search of the contents in your phone's memory. A dynamic search compares entered letters against the entries in your Contacts. A matching list is displayed in descending order. You can then select a number from the list to call or edit. There are several ways to search:

- Scrolling Alphabetically
- Searching by Letter

Scrolling Through Your Contacts


1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to scroll through the list.

Searching by Letter






1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Press (or press repeatedly) the key on the keypad that corresponds with the search letter.

Making a Call From Your Phone's Memory





Once you have stored phone numbers in your Contacts, you can place calls to those numbers quickly and easily.

- By pressing  after searching for a phone number in Contacts or Recent Calls and highlighting it.
- Use Speed Dialing
- Use Voice Dialing



From Contacts

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to select the Contact entry, then press .
3. Use  to select the phone number.
4. Press  to place the call.


From Recent Calls

1. Press Left Soft Key  **Menu**.
2. Press  **Call History**.
3. Use  to select the type of recent call, then press .

All Calls/Outgoing Calls/Incoming Calls/Missed Calls





4. Use  to select the phone number.
5. Press  to place the call.


Menu Access

Press Left Soft Key  **Menu** to access six phone menus. There are two methods of accessing menus and submenus:

- Use the navigation key to highlight and select, or
- Press the number key that corresponds to the menu (or submenu).

For example:



1. Press Left Soft Key  **Menu** to display six menu items. Use  to scroll through the list of menus.
2. Press the appropriate number key corresponding to the menu item you want to select. The sub-menu list will be displayed.
3. Press the appropriate number key corresponding to the sub-menu you want to access.
4. Use  to highlight your preferred setting, then press  to select it.

 
NOTE Press  to go back one step (while accessing a menu or selecting a setting). Changes to settings will not be saved.

Contacts

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory. When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 500).

Access and Options

1. Press Left Soft Key  **Menu**.
2. Press  **Contacts**.
3. Select a sub-menu.

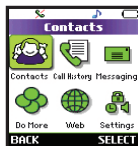
 




1. List Entries
2. New Entry
3. Groups
4. Speed Dials
5. Erase all Contacts



1. List Entries








Allows you to view your Contacts list.

1. Press , , .
2. Options from here:
 - Press  to scroll through your Contacts alphabetically.

2. New Entry



 




Allows you to add a new number to your Contacts.

NOTE Using this sub-menu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.

1. Press , , .
2. Enter the name, then press .
3. Enter the number, then press .
4. Select the Label you want and press .
5. Continue saving the entry as necessary.
6. Press Left Soft Key  **Done**.






3. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a whole group.

1. Press , , .
2. Options from here:
 - Use  to highlight a group to view, then press .
 - Select **Add Group**.
 - Use  to highlight a group, then press  to select **Add Members / Edit Group / Erase Group**.





4. Speed Dials

Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.

1. Press , , .
2. Use  to highlight the Speed Dial position (or enter the Speed Dial digit), then press .
3. Select **Set Speed Dial / Next Empty / Erase Speed Dial / Erase all**.

5. Erase all Contacts

Allows you to erase all of your Contacts at once.



1. Press , , .
2. Set **Erase all #s / Cancel** then press .
3. Enter your lock code.

 


Call History

The Recent Calls Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Access and Options

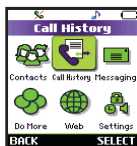


1. Press Left Soft Key  **Menu**.
2. Press  **Call History**.
3. Select a sub-menu.



1. All Calls
2. Outgoing Calls
3. Incoming Calls
4. Missed Calls
5. Erase History
6. Timers









NOTE To view a quick list of all your recent calls, press  from the Main Menu.

-  indicates a dialed call.
-  indicates a received call.
-  indicates a missed call.







1. All Calls

Allows you to view the list of outgoing calls; up to 30 entries.

1. Press , , .
2. Use  to highlight an entry.
- Press  to view the entry.
- Press  to place a call to the number.



 

2. Outgoing Calls

Allows you to view the list of outgoing calls; up to 30 entries.

1. Press , , .
2. Use  to highlight an entry.
- Press  to view the entry.
- Press  to place a call to the number.





3. Incoming Calls

Allows you to view the list of incoming calls; up to 30 entries.

1. Press , , .
2. Use  to highlight an entry.








4. Missed Calls

Allows you to view the list of missed calls; up to 30 entries.

1. Press , , .
2. Use  to highlight an entry.

5. Erase History

Allows you to erase selected call list(s).

1. Press , , .
 2. Use  to highlight the list of calls to erase, then press .
- All Calls / Outgoing Calls / Incoming Calls / Missed Calls**
3. Use  to highlight **Erase / Cancel**, then press .



6. Timers

 
Allows you to view the duration of selected calls.

1. Press , **2** , **6** .
2. Use  to highlight **Last Call / Lifetime**, then press .

Messaging

Access and Options

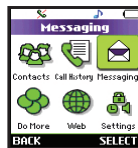

1. Press Left Soft Key  **Menu**.
2. Press **3**  **Messaging**.
3. Select a sub-menu.



1. **Voice Mail**
2. **Text Messaging**
3. **Web Alert**
4. **e-mail**
5. **IM & Chat**




Text messages, pages, and the voice mail box become available as soon as the phone is powered on.

- Check types of messages by pressing the message key  .
- Make a call to the callback number by pressing  during an Inbox message check.
- Read and edit messages saved in the outbox after transmission and resend them.

The phone can store up to 116 messages (1 voice message, 50 inbox text messages, 50 outbox text messages, 15 saved text messages). The LG125 supports up to 150 characters per message including header information. The information stored in the message is determined by phone mode and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

New Message Alert

There are three ways your phone alerts you to new messages.

1. The phone displays a message on the screen.
2. One of eight ring types is heard, if selected.
3. The message icon () is displayed on the screen. In the case of an urgent message, the icon will flash and Urgent message is displayed.

NOTE If you receive the same message twice, your phone deletes the older one and the new one is stored as a Duplicate.



1. Voice Mail

Allows you to view new voice messages recorded in the voice mail box. Your phone will alert you when you receive a new voice message.

Checking Your Voice Mail Box

1. Press , , .

Options from here:

- Press  **Call voicemail** to listen to the message(s).
- Press  **Clear voicemail icon** to delete information, then select **Clear Icon**.



2. Text Messaging

2.1 Send New

You can send messages from one phone to another.

1. Press , , , .
2. Select **Mobile**, **Email**, **From Contacts** or **Recent List** to enter recipients and press .
 - Mobile to enter a mobile phone number directly.
 - Email to enter an email address directly.
 - From Contacts to select a recipient from your Contacts list. Highlight an entry and press to select , then Press Left softkey **Done** .
 - Recent List to select a recipient from your recent lists. Highlight an entry and press to select , then Press Left softkey **Done** .
3. Press Left softkey **Next** when you are finished selecting/entering recipients (you may include up to 10 recipients).
4. Enter the message, and press .
5. Press then select **Normal / Urgent**.
6. Press to select Callback #, then press to

insert a callback number.

7. Press Left softkey **Send** to send the message.

NOTE If there is a failure when sending a message, the message goes to the Outbox folder.

Text Options







While you are composing the text of a message you can insert customized text.

1. Create a new message and press .
2. Press Right Soft Key **Options**.
3. Select the option to customize.

Save draft Allows you to save the message in Drafts folder.

4. Complete and send or save the message.

Message Icon Reference

	Sent : Messages sent in Short Message Center(SMC) have been transmitted.
	Fail : Indicates a failed message transmission.
	Delivery : Message has been delivered.
	Lock : Indicates that messages are locked.
	Multi-sending : Indicates more than one designated recipient.
	Pending : Transmission is unavailable in a no service area or in an analog service area. Messages are pending transmission. Pending messages are transmitted automatically when digital mode becomes available.

2.2 Inbox

The phone alerts you in 3 ways when you receive a new message by:

- Displaying a message notification on the screen.
- Sounding a beep, vibrating or sound, if set.
- Displaying the message icon (✉). It blinks when the message is urgent.








Received text messages, page messages, and e-mail lists may be searched and the contents viewed. Received messages are displayed from newest to oldest.

Out of Memory Warning

If the memory is full, no more messages can be received until enough memory space becomes available. The message **NOT ENOUGH MEMORY** is displayed and new messages are not accepted.

Viewing Your Inbox

Up to 50 received messages can be stored in the Inbox.

1. Press , , , .
2. Use  to highlight an Inbox message.
 - Left Soft Key  **Reply**.
 - Right Soft Key  **Options**.





Using Phone Menus

Lock/Unlock Locks a message so that it is not erased if the Erase Inbox or Erase All feature are used.

Erase Deletes the selected message from the Inbox.

Erase Read Msgs Deletes the read message from the Inbox.

Erase all Deletes all messages from the Inbox.

3. Use  to highlight an Inbox message, then press .

4. While viewing the selected message, press Left Soft Key  **Reply** or Right Soft Key  **Options**.

Options from here:

Go URL Go URL and connect web site.

Reply Replies to the SMS with the original message attached.

Forward Forwards a received message to other destination address(es).

Erase Deletes the selected message from the Inbox.

Save Number Stores the callback number, e-mail address, and numbers in user data included in the received message into

your Contacts.

Save E-mail Saves the message into the E-mail list.

Lock/Unlock Locks or unlocks the selected message. Locked messages can not be deleted by the Erase Inbox or Erase All functions.

Save Message Saves Inbox message into the Saved Folder.

2.3 Outbox/Sent

Up to 50 sent messages can be stored in the Outbox. View lists and contents of sent messages and verify whether the transmission was successful or not.

1. Press , , , .

2. Use  to highlight an Outbox message.

• Press Left Soft Key  **Resend**.

• Press Right Soft Key  **Options**.

Lock/Unlock Locks a message so that it is not erased if the Erase Outbox or Erase All feature is used.

Erase Deletes the selected message from the Outbox/Sent.

Erase all Deletes all messages from the Outbox/Sent









3. Use  to highlight an Outbox message, then press .

While viewing the selected Outbox message, press Left Soft Key  **Forward** or press Right Soft Key  **Options**.

Go URL / Resend / Forward / Edit / Lock/Unlock / Canned Message / Erase / Compose new / Save Message








2.4 Templates

Allows you save your templates messages in your Templates folder.

1. Press , , , .
2. Create new message selecting Create New or select your saved message using  and Press Left Soft Key  **Edit** or Press Right Soft key  **Options**.
 - **Send / Erase / Erase all**
3. Press  to view the message.

2.5 Drafts

Displays draft messages.



 




1. Press , , , .
2. Select a message with  and Press Left Soft Key  **Edit** or Press Right Soft key  **Options**.

Erase Deletes the selected message.

Erase all Deletes all messages.

2.6 Saved

Displays saved messages and draft messages.

1. Press , , , .
2. Use  to highlight a Saved message.
 - Press Left Soft Key  **Reply / Resend / Edit**.
 - Press Right Soft Key  **Options**.






Lock/Unlock Locks a message so that it is not erased if the Erase Saved or Erase All feature is used.

Erase Deletes the selected message.

Erase all Deletes all messages.

2.7 Erase Messages

This allows you to erase all text messages stored in your Inbox, Outbox, Draft, Saved or Templates folders. You can also erase all messages stored in these folders at the same time.

1. Press , , , .
- Press  **Inbox** to erase all messages stored in the Inbox.






Using Phone Menus

- Press **2_{abc}** **Outbox** to erase all messages stored in the Outbox.
- Press **3_{def}** **Drafts** to erase all messages stored in the Draft.
- Press **4_{ghi}** **Saved** to erase all messages stored in the Saved Items folder.
- Press **5_{jkl}** **Templates** to erase all messages stored in the Templates Items folder.
- Press **6_{mno}** **All Messages** to erase all messages stored in the Inbox, Outbox, and Saved Items folder.

Erase all / Cancel

2.8 Settings

Allows you to configure 9 settings for received messages.

1. Press , **3_{def}**, **2_{abc}**, **8_{tuv}**.
2. Use  to highlight one of the settings and press  to select it.

Save to Outbox Auto Save / Prompt / Do Not Save

Auto Delete Inbox On / Off

Callback #

None / My Phone Number / Other

Quick Text

Can't talk right now. Send me a message. / Call me / Where are you? / Can you talk? / Don't forget to / Can you pick up? / Thanks! / Meet me at / Let's get lunch. / I sent this from my PCS phone. / The meeting has been cancelled. / I have to work late. / I'm on a conference call. / I'll be there at / What time does it start? / Tag, you're it! / I love you! / Hugs and kisses - OXOXO / Crazy 4 you! / Too Funny!

Default Entry Mode T9Word / Alpha / Number

Message Settings Sub-Menu Descriptions

1. Save to Outbox

Allows you to automatically save sent messages in your Outbox. You can choose Auto Save, Prompt, or Do Not Save.

2. Auto Delete Inbox

With this feature on, read messages(except locked messages) are automatically deleted when you exceed the storage limit.

3. Callback

Allows you to automatically send a designated callback number when you send a message. Allows you to manually enter the number.

4. Quick-Text

Allows you to display, edit, and add text phrases. These text strings allow you to reduce manual text input into messages.

5. Default Entry Mode

Allows you to select the default input method.

3. Web Alert

Web Msg are special links or message provided from the carrier to inform you of special offers, bulletins and announcements.

1. Press , , .

Web Msg notifies the user with 4 kinds of alert.

The Alert type is determined by its priority.

4. e-mail

Allows you send an e-mail.

1. Press , , .

2. Press  **Get New**.

5. IM & Chat

Allows you to send and receive instant messages at any time.

Allows you to chat with internet messenger users.

1. Press , , .



Do More

Your phone's Do More menu lets you access some of the extra features built into your phone. Your phone permits you to store up to 2.5MB of memory. Each item is also limited by size according to their content-type when you download.

To access to Wireless Web menu :

1. Press Left Soft Key  **Menu**, **4** ghi, **1** a.o.

To access to Sounds menu :

1. Press Left Soft Key  **Menu**, **4** ghi, **2** abc.

To access to Wallpaper menu :

1. Press Left Soft Key  **Menu**, **4** ghi, **3** def.

To access to Games menu :

1. Press Left Soft Key  **Menu**, **4** ghi, **4** ghi.

To access to Tools menu :

1. Press Left Soft Key  **Menu**, **4** ghi, **5** jkl.

Get New

1. From Tools menu, select **Get New** to get new tools.

Calculator





Allows you to perform simple mathematical calculations. You can enter numbers up to the second decimal place.

1. From Tools menu, select **Calculator**.

NOTE Calculations can be made with up to 2 lines at one time.

Alarm

Allows you to set one of four alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time, **Alarm 1** (or 2 or 3, as applicable) will be displayed on the LCD screen and the alarm will sound.

1. Press Left Soft Key  **Menu**, **4** ghi, **5** jkl.
 2. Use  to select **Alarm** then press .
 3. Select the alarm you want to edit and press .
- [1] **Alarm 1** / [2] **Alarm 2** / [3] **Alarm 3** / [4] **Quick Alarm**

- Use to select **On / Off** then press .
- Press , set the time for alarm and press .
- Press to select one of the following:
Once / Daily / Mon - Fri / Weekends
- Use to highlight Ring (ring type setting), press , and select your desired ring using .
- Press .
- Left Soft Key **Save**.

Scheduler

Allows you to conveniently keep and access your agenda(s). Simply store your appointments and your phone will alert you with a reminder of your appointment.

- Press Left Soft Key **Menu**, , .
- Use to select **Scheduler** then press .
- Use to highlight the scheduled day.
 - Moves cursor to the left.
 - Moves cursor to the right.
 - Moves to the previous week.
 - Moves to the next week.

- Press Left Soft Key **Add**.
- Enter your schedule information including:
 - Date
 - Time
 - Content
 - Recurring event
 - When to ring the alarm reminder
 - Which ring alarm to sound
- Press Left Soft Key **Save**.

NOTE Scheduler will not alert you during a call or during SMS transmitting.

Notepad

Allows you to read, add, edit, and erase notes to yourself.

- Press Left Soft Key **Menu**, , .
- Use to select **Notepad** then press .
- Press to select **Add New**.



Using Phone Menus

EZ Tip Calc

Allows you to calculate a tip based on several user defined variables.

1. Press Left Soft Key  **Menu**, , .
2. Use  to select **EZ Tip Calc** then press .

World Clock

Useful if you need to make a call to another country and you are not sure about the time difference.

1. Press Left Soft Key  **Menu**, , .
2. Use  to select **World Clock** then press .

To access to Favourites menu :

1. Press Left Soft Key  **Menu**, , .

6.1 Shortcode List

Shows you the Shortcode List.

6.2 Text Messages

Allows you to access to the Text Message Menu.

6.3 Web Links

Allows you to bookmark many individual web pages.

To access to Memory Status menu :

 
1. Press Left Soft Key  **Menu**, , .



The MiniBrowser feature allows you to view Internet content especially designed for the mobile phone interface. For specific information on MiniBrowser access through your phone, contact your service provider.

Access and Options

1. Press Left Soft Key  **Menu**.
2. Press  **Web**.
3. Select a sub-menu.

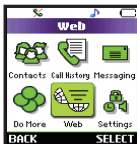

1. Web



1. Web

1. Press , , .

Overview

The MiniBrowser allows the user to use a variety of Internet services. Using the MiniBrowser on the phone allows you to:

- Send and receive Internet e-mail.
- Browse and search the World Wide Web via web pages especially designed for wireless phone customers.
- Set bookmarks to directly access your favorite sites.
- Retrieve information, such as stock quotes and flight schedules from the Internet.

Quality of Browser

Browsing the web via the phone is not like using your home computer. Site providers have selected only the critical aspects of their site to present to wireless phone users and have removed most graphics.

Ending the MiniBrowser Session

You can end a MiniBrowser session by pressing .

Navigating through the Browser

While using the MiniBrowser, you will find that on-screen items may be presented in one of the following ways:

- Numbered options.
- Links (embedded in content).
- Text or numeric input.
- Simple text.

You can act on the options or the links by using the Soft Keys.

 


Settings

The Settings menu has options to customize your phone.

Access and Options

1. Press Left Soft Key **Menu**.
2. Press **Settings**.
3. Select a sub-menu.

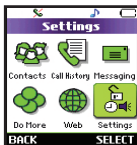

1. Sounds
2. Display
3. Games / Tools
4. Setup
5. Advanced
6. Airplane Mode
7. Icon Glossary



1. Sounds

Options to customize the phone's sounds.

1.1 Ringers

Allows you to assign ring tones for incoming calls.

1. Press , , , .

2. Press **Voice Calls**

Select **Caller ID / No Caller ID** .

3. Press **Messages**

Select **Voice Mail / Text Messages / 2-Min Reminder**.

4. Use to select a ringer, then press to save the sound.

1.2 DTMF Length

Allows you to set the Key tone length and touch tone playback speed.

1. Press , , , .

2. Select an option, then press .







Normal Sends out a tone for a fixed period of time even if you keep the key pressed.

Long Sends out a continuous tone for as long as you keep the key pressed.

NOTE Dual-Tone Multi Frequency (DTMF) Signaling by the simultaneous transmission of two tones, one from a group of low frequencies and another from a group of high frequencies. Each group of frequencies consists of four frequencies. Setting the Key Beep length to Long will extend the DTMF tone.





1.3 Volume

Allows you to set various volume settings.

1. Press , **6** , **7** , **3** .
2. Select **Ringer / Earpiece / Key Tones / Power On/Off**.
3. Use  to adjust the volume of the ringer, then press .

1.4 Alerts

Allows you to set any of the 5 Alert options to On or Off.

1. Press , **6** , **7** , **4** .
2. Select an alert option.

1.4.1 Service Change

Alerts you when service changes. Displays Entering Service Area or Leaving Service Area message.

1.4.2 Minute Beep

Alerts you 10 seconds before the end of every minute during a call.

1.4.3 Call Connect

Alerts you when the call is connected.

1.4.4 Lost Connection

Alerts you when you scroll through the end of a menu list.

3. Use  to set **On** or **Off**, then press .



2. Display

Options to customize the phone's display screen.

2.1 Banner

Allows you to enter a string of up to 16 characters which display on the LCD screen.

1. Press , , , .
2. Use to select **Custom / Off** , and press .
3. Enter your banner text, then press .

2.2 Backlight

Allows you to set the duration for illuminating the backlight. LCD and Key Light Timer are set separately.

NOTE If an amount of time is set for the timer option, the time starts after the last key was pressed.

2.2.1 Main Display

1. Press , , , , .
2. Choose a setting, then press .

2.2.2 Keypad

1. Press , , , , .
2. Choose a setting, then press .

2.3 Wallpaper

Allows you to assign ring tones for incoming calls.

1. Press , , , .
2. Select from different images, then press .
3. Press Left Soft Key **Save** .

NOTE Press Right Soft Key **More** for more image choices.

- 1.Default 2.Downloads

2.4 Contrast

Allows you to set the level of contrast for your LCD screen.

1. Press , , , .
2. Use to adjust the contrast level, then press .



2.5 Menu Style

Allows you to view the Menu as an Icon or List display.

1. Press , , , .
2. Select **Icon** or **List** and press .



2.6 Theme Colour

Allows you to choose the colour of the background screen.

1. Press , **6** mno, **2** abc, **6** mno.
2. Select **Default / Theme 1 / Theme 2**, then press .

2.7 Time




Allows you to choose the kind of time to be displayed on the LCD screen.

1. Press , **6** mno, **2** abc, **7** pqr.
2. Choose a Time sub-menu and press .
 - 1** 00 **Main LCD** (Digital Time / Analog Time / Off)
 - 2** abc **Sub LCD** (Time&Date / Time Only)

2.8 Fonts




Allows you to set the size and color of the font for calling digits and text editor.

2.8.1 Message

1. Press , **6** mno, **2** abc, **8** tuv, **1** 00.
2. Press  to choose a setting, then press  to save.




Small / Normal / Large

2.8.2 Browser

1. Press , **6** mno, **2** abc, **8** tuv, **2** abc.
2. Press  to choose a setting, then press  to save.

Small / Normal / Large




2.8.3 Notepad

1. Press , **6** mno, **2** abc, **8** tuv, **3** def.
2. Press  to choose a setting, then press  to save.

Small / Normal / Large

2.9 Power Saver

Display and buttons are lighted for a designated length of time, allowing you the convenience to use your mobile phone in the dark.

1. Press , **6** mno, **2** abc, **9** pqrs.
2. Use  to select **30 seconds / 60 seconds / 90 seconds / Off**, then press .



3. Games / Tools

Your phone tools include a **Backlight Settings**, a **Volume** and **Notification**.

3.1 Backlight Settings

Allows you to set the duration for illuminating the backlight.

1. Press , **6**^{mno}, **3**^{def}, **7**^{q, w, e}.

- 8 seconds
- 15 seconds
- 30 seconds
- Always On
- Always Off means that the backlight is never on.

3.2 Volume

1. Press , **6**^{mno}, **3**^{def}, **2**^{abc}.

2. Select **High / High Med / Med / Med Low / Low / Off** then press .

3. Adjust the volume with  then press  to save the setting.

3.3 Notification

1. Press , **6**^{mno}, **3**^{def}, **3**^{def}.


2. Select **Voice Mail / Text Message** then press .

3. Set **On / Off** with  then press .

4. Setup


The Setup menu allows you to designate how the phone handles both incoming and outgoing calls.

4.1 Short cut

Assign a shortcut to your favorite and most frequently used function. Select it from the list, and then access it directly by pressing  in standby mode.

1. Press , **6**^{mno}, **4**^{ghi}, **7**^{q, w, e}.







2. Press  to select **OK**.

3. Select a menu and press .

Left Navigation / Right Navigation

4.2 Call Answer







Allows you to determine how to handle an answered call.

1. Press , **6** , **4** , **2** .
2. Use  to select a setting, then press .

Send Key / Any Key / Flip Open

4.3 Auto-Answer

Allows you to select the number of rings before the phone automatically answers a call. This feature is intended for use with hands free devices, but is an independent feature of the phone and must be manually turned on/off when connected or disconnected from the device.



1. Press , **6** , **4** , **3** .
2. Use  to select a setting, then press .

On / Off

4.4 Auto-Prepend







Allows you to add Dial 1+Number to Options in recent calls list. If you choose Dial 1+Number in recent calls list, Terminal displays dialing screen and shows 1+Number on the screen regardless of calling digits condition.

1. Press , **6** , **4** , **4** .

2. Use  to select a setting, then press .
- On / Off**

4.5 Language








Allows you to set the bilingual feature according to your preference. Choose between English and French.

1. Press , **6** , **4** , **5** .
2. Use  to select **English** or **Français**, then press .

4.6 TTY Mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

* TTY : Text Telephone. (or Teletypewriter for Deaf).

1. Press , **6** , **4** , **6** .
2. Press .
3. Use  to select a setting, then press .

Enable TTY / Disable TTY



Using Phone Menus

4.7 Data/Fax

Allows you to use your phone to transmit data and faxes.

1. Press , **6** ^{mno} , **4** ^{ghi} , **7** ^{pqrs} .
2. Use to select a setting, then press .
Off / Fax In Once / Fax In Always / Data In Once / Data In Always

NOTE The Data Connection Kit allows you to connect your PC or PDA to your LG wireless phone, freeing you from having to locate a telephone outlet. You can send or receive an e-mail, a fax, or access the Internet anytime, anywhere.

4.8 PC Connection

Allows you to select the data port.

1. Press , **6** ^{mno} , **4** ^{ghi} , **8** ^{tuv} .
2. Use to select a setting, then press .
USB / RS-232C / Closed

NOTE When using the 1X HSPD data service via an RS-232C data cable, the port speed is set to 115,200 (230,400 is not supported). When using the 1X HSPD data service via a USB data cable, you may get better port speed if the port speed is set to 230,400 rather than 115,200.

5. Advanced

Provides you with specific information pertaining to your phone model.

5.1 Phone Info

Allows you to view the Software, PRL, easyedgeSM and VR version.

1. Press , **6** ^{mno} , **5** ^{ijkl} , **7** ^{o.p} .

5.2 System

The System menu allows you to designate specific system network settings.

5.2.1 Set Mode

Allows you to set up the phone producer's management environment. Leave the default setting unless you want to alter the system selection as instructed by your service provider.

1. Press , **6** ^{mno} , **5** ^{ijkl} , **2** ^{abc} , **7** ^{o.p} .
2. Use to select a setting, then press .

Digital Only / Analog Only / Automatic / Home Only



5.2.2 Set NAM

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Press , **6**^{mno}, **5**^{jkl}, **2**^{abc}, **2**^{abc}.
2. Select **NAM 1 / NAM 2** then press .

5.2.3 Call Guard

Call Guard alerts you when roaming charges apply.

1. Press , **6**^{mno}, **5**^{jkl}, **2**^{abc}, **3**^{def}.
2. Select **On / Off** and press .

5.3 Security

The Security menu allows you to secure the phone electronically.

5.3.1 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls. You can modify the lock code using the New Lock code within the Security menu.

1. Press , **6**^{mno}, **5**^{jkl}, **3**^{def}.

2. Enter the four-digit lock code.

The lock code is commonly the last 4 digits of your phone number.

3. Press **7**₀₋₉ **Lock Phone**.

4. Select an option then press .

Unlock The phone is never locked (Lock mode can be used).

Lock Now The phone is always locked. When locked, you can receive incoming calls or make only emergency calls.

On Power Up The phone is locked when it is turned on.

5.3.2 Change Lock

Allows you to enter a new four-digit lock code.

1. Press , **6**^{mno}, **5**^{jkl}, **3**^{def}.

2. Enter the four-digit lock code.








3. Press **2**^{abc} **Change Lock**.

4. For confirmation, it will ask you to enter the new lock code again.








5.3.3 Reset Defaults

Allows you to reset your phone to the factory default settings.

1. Press , , , .
2. Enter the four-digit lock code.
3. Press  **Reset Defaults**.
4. Press , select **Revert / Cancel** then press .

6. Airplane Mode

Turning Airplane Mode ON will prevent any outgoing and incoming calls as well as any online access.

1. Press , , .
2. Press  to select OK.
3. Select **On / Off** then press .

7. Icon Glossary

Allows you to view all the icons and their meanings.

1. Press , , .

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

Health Canada, Safety Code 6, 1999.

American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For

example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines, IC Regulations (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.



Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives.) Optional for each phone manufacturer.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.

Violation of the instructions may cause minor or serious damage to the product.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery does not need to be fully discharged before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged

several hundred times before replacement.

- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, MiniBrowser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.

- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- The power cord on this product will expose you to lead, a chemical known to the State of California to cause (cancer) birth defects or other reproductive harm. Wash hands after handling.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ring tone to vibration so as not to disturb others.
- Do not turn your phone on or off when putting it in your ear.



FDA Consumer Update

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in the standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than

those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.



4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the

studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone

users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.



8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, “Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques,” sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones



for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones

(<http://www.fda.gov/cdrh/phones/index.html>)

Federal Communications Commission (FCC) RF Safety Program

(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection

(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project

(<http://www.who.int/emf>)

National Radiological Protection Board (UK)

(<http://www.nrp.org.uk/>)

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to Radio Frequency (RF) energy set by the Federal Communications Commission of the U.S. Government, and Industry Canada of the Canadian Government.

These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.

The SAR limit set by the FCC/IC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC/IC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC/IC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC/IC for each model.



Safety

The highest SAR value for this model phone when tested for use at the ear is 1.02W/kg and when worn on the body, as described in this user guide, is 0.924 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC/IC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJLX125. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability.



Battery Charger

The battery charger allows you to power your phone.



Battery

Two batteries are available. The standard battery, and the extended battery.



Vehicle Power Charger

The vehicle power charger allows you to operate the phone and trickle charge the phone's battery from your vehicle. It takes 5 hours to charge a completely discharged battery.



Hands-Free Car Kit (Portable)

The hands-free car kit enables you to attach the phone to the power jack in your car, providing you with hands-free operation. It can charge a completely discharged battery in 5 hours.



Headset

The headset connects to your phone allowing hands-free operation. It includes earpiece, microphone.

NOTE It operates in vibration/no sound mode on Manner Mode/Silence All Mode even when connected to a headset.



USB Converter Cable

Connects your phone to your PC.



Battery Pack Charger

The battery pack charger allows you to charge the battery pack itself without the phone. It can charge a completely discharged standard battery in 3.5 hours.



Holster



Warranty Information

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for ONE (1) year beginning on the date of purchase of the product by the original end user.
- (2) The limited warranty extends only to the original end user of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original end user of the product during the warranty period as long as it is in Canada.
- (4) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (5) During the applicable warranty period, LG will repair or replace at LG's sole option, without charge to the original end user, any defective component part of the phone or accessory.
- (6) LG may, use rebuilt, reconditioned, or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned or new product.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defect or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, or spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) The fact that the Customer Service Department at LG was not notified by the original end user of the alleged defect or malfunction of the product, during the warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) Damage resulting from use of non-LG approved accessories.
- (7) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.

- (8) Products serviced by non-authorized persons or companies.

Notes:

- (1) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of merchantability or fitness for a particular purpose.
- (2) Shipping damage is the sole responsibility of the shipping company.

3. EXCLUSION OF LIABILITY:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS CANADA, INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED

WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following telephone number from anywhere in Canada:

LG Electronics Canada, Inc.

Tel. 1-888-542-2623



Index

123 (Numbers) Mode 18
2-sec Pause (T) 27

A

Abc (Multi-tap) Mode 18
Menu Access 30
Accessories 69
Adding a Pause to an Existing Number 27
Adding Another Phone Number 24
Adding or Changing the Group 22
Adding or Changing the Memo 22
Adding or Changing the Picture ID 23
Adding Speed Dial 23
Adding Voice Dial 23
Adding Words to the T9 Database 20
Additional Ways to Delete a Contact 26
Adjusting Speaker On 17
Advanced 52
Aircraft 57
Airplane Mode 54
Alarm 42
Alerts 47
All Calls 33

All Messages 40
Alphanumeric Keypad 10
Antenna Care 55
Auto Delete Inbox 41
Auto-Answer 51
Auto-Prepend 51

B

Back Key 10
Backlight 48
Backlight Settings 50
Banner 48
Battery 69
Battery Charge Level 12
Battery Charger 69
Battery Information and Care 58
Battery Pack Charger 69
Blasting Areas 57
Bodily Contact During Operation 9
Browser 49

C

Calculator 42
Call Connect 47
Call Guard 53
Call History 32
Call Waiting 17

Callback # 41
Caller ID 17
Caps Lock (T9WORD / ABC) 19
Caution 9
Change Lock 53
Changing Letter Case 19
Changing the Call Ringer 22
Changing the Default Number 24
Charger and Adapter Safety 58
Charging the Battery 12
Checking Your Voice Mail Box 35
Clear 18
Consumer Information on SAR 67
Contacts 30
Contacts Entries 21
Contacts in Your Phone's Memory 21
Contents 4
Contrast 48
Correcting Dialing Mistakes 15

D

Data/Fax 52
Default Entry Mode 41

Default Numbers 24
Deleting 26
Deleting a Contact Entry 26
Deleting a Phone Number from a Contact 26
Deleting a Speed Dial 26
Dialing Double Digit Speed Dials (from 10 to 99) 17
Dialing Single Digit Speed Dials (from 1 to 9) 17
Display 48
Do More 42
Drafts 39-40
Driving 56
DTMF Length 46

E

e-mail 41
Earpiece 10
New Entry 31
Editing Contacts Entries 24
Editing Customized Options 25
Editing Stored Names 25
Editing Stored Phone Numbers 25
Electronic Devices 56
End/Power Key 10
Entering and Editing Information 18

Erase all Contacts 32
Erase History 33
Erase Messages 39
Explosion, Shock, and Fire Hazards 58
Exposure to Radio Frequency Signal 55
EZ Tip Calc 44

F

Favourites 44
FCC Part 15 Class B Compliance 7
FCC RF Exposure Information 9
FDA Consumer Update 60
Flip 10
Fonts 49
For Vehicles Equipped with an Air Bag 57
From Contacts 28
From Recent Calls 29
From the Main Menu Screen 24

G

Games / Tools 49
General Notice 59
Get New 42

Getting Started with Your Phone 12

H

Hands-Free Car Kit (Portable) 69
Hard Pause (P) 27
Headset 69
Headset Jack 10
Health Care Facilities 57
Hearing Aids 56
Holster 69

I

Icon Glossary 54
IM & Chat 41
Important Information 7
Important Safety Precautions 1
Inbox 37
Incoming Calls 33
Industry Canada Compliance 7
Initial Cap (T9Word / Abc) 19
Installing the Battery 12

K

Key Functions 18
Keypad 48

L

Language 51
LCD Screen 10
Left Soft Key 10
List Entries 31
Lock Mode 16
Lock Mode Key 10
Lock Mode Quick Activation 16
Lock Mode Quick Cancellation 16
Lock Phone 53
Lost Connection 47
Lower Case (T9word / abc) 19

M

Main Display 48
Making a Call From Your Phone's Memory 28
Making Calls 15
Manner Mode 16
Manner Mode Key 10
Manner Mode Quick Activation 16
Manner Mode Quick Cancellation 16
Memory Status 44
Menu Style 48
Menus Overview 11

Message 49
Message Icon Reference 37
Message Settings Sub-Menu Descriptions 40
Messaging 34
Microphone 10
Minute Beep 47
Missed Calls 33
Mute Function 16
Mute Quick Activation 16
Mute Quick Cancellation 16

N

Navigation Key 10
New Message Alert 35
Next 18
Notepad 43, 49
Notification 50

O

Options to Customize Your Contacts 22
Other Medical Devices 56
Out of Memory Warning 37
Outbox 40
Outbox/Sent 38
Outgoing Calls 33

P



Index

Pacemakers 56
PC Connection 52
Phone Info 52
Phone Numbers With
Pauses 27
Phone Operation 55
Phone Overview 10
Posted Facilities 57
Potentially Explosive
Atmosphere 57
Power Saver 49
Pre-set Msg 19
Punctuation 18

Q

Quick Access to Convenient
Features 16
Quick-Text 41

R

Receiving Calls 15
Recent Msgs 19
Redialing Calls 15
Removing the Battery 12
Reset Defaults 54
Right Soft Key 10
Ringers 46

S

Safety 55
Safety Information 58
Save to Outbox 40
Saved 39-40
Scheduler 43
Screen Icons 14
Scrolling Through Your
Contacts 28
Searching by Letter 28
Searching Your Phone's
Memory 28
Security 53
Send Key 10
Send New 36
Service Change 47
Set Mode 52
Set NAM 53
Settings 40, 46
Setup 50
Shift 18
Short cut 50
Shortcode List 44
Side Keys 10
Signal Strength 13
Smileys Mode 18
Sounds 42, 46
Space 18
Speakerphone Key 10
Speed Dialing 17
Storing a Number with

Pauses 27
Symbols Mode 18
System 52

T

T9Word (T9) Mode 18
Technical Details 7
Templates 39-40
Text Input 18
Text Input Examples 19
Text Input Modes 18
Text Messages 44
Text Messaging 36
Text Options 36
The Basics of Storing
Contacts Entries 21
The Battery 12
Theme Colour 48
Through Contacts 24
TIA Safety Information 55
Time 49
Timers 34
Tips on Efficient Operation
55
Tools 42
TTY Mode 51
Turning the Phone Off 13
Turning the Phone On 13
Turning the Phone On and
Off 13

U

USB Converter Cable 69
Using Abc (Multi-tap) Text
Input 19
Using Phone Menus 32
Using T9 Mode Text Input 19
Using the NEXT Key 20

V

Vehicle Power Charger 69
Vehicle-Mounted External
Antenna 9
Vehicles 57
Voice Dial Key 10
Voice Mail 35
Volume 47, 50
Volume Quick Adjustment
16

W

Wallpaper 42, 48
Warranty Information 70
Web 45
Web Alert 41
Web Links 44
Welcome 7-8
Wireless Web menu 42
World Clock 44

