



Slide into the spotlight with the d606.

SGH-d606

- Built-in MP3 player with removable TransFlash™ memory card
- Bluetooth® technology
- 2.0 Megapixel camera
- Video recorder
- Quadband
- Speakerphone
- Sleek slider design



SAMSUNG

KEY FEATURES and BENEFITS

Music & Downloads

Using your player

1. In menu mode, press 7 for Fun & Tunes.
2. Then press 3 for Music and Select.
3. Press 1 for Music.
4. Scroll until you highlight the song you wish to play and press the OK/∫ key.

Build a new playlist

1. In menu, press 6 for Media.
2. Press 2 for MP3 Player and your playlist should be highlighted.
3. Press the Options soft key and press 2 for Open and select My Playlist.
4. Scroll over the album that is empty and press OK.
5. Press the Options soft key and select Add Music from your phone or memory card.

Download content onto TF card from your computer

Using PC Studio software you can upload content from your PC to your TransFlash card. Once you have completed uploading files, you are now ready to use the content you have uploaded.

1. Create a new folder called MUSIC.
2. Using the media player on your computer, you can transfer MP3 files to the MUSIC folder.
3. Once you have downloaded your selected songs, follow the prompts from the Using your Player section to play the songs on your MP3 player.

Work without the wires

Activate your BT and connect Pairing your phone with another BT device

1. In menu mode, press 9 for Settings.
2. Press 6 to select Bluetooth.
3. Press 1 to turn Bluetooth on/off. Scroll to On and press the Select soft key.
4. On the Bluetooth menu, press 3 for My Visibility. Scroll to On and press the Select soft key.
5. On the Bluetooth menu, press 2 for My Devices. Highlighting Search New Devices, press the Select soft key.
6. The My New Devices screen will display all Bluetooth®-enabled devices within 30 feet of the d606. Scroll to the one you wish to connect with (such as a Bluetooth headset) and press the Select soft key.
7. You will be prompted to enter the PIN for your device (code is 0000). After entering the PIN, press the OK soft key and the two devices will connect. (The other device will also have a message displayed on screen asking to approve the connection.)
8. When these two devices are within range of each other, they will now be able to exchange information wirelessly. For a Bluetooth®-enabled headset, that means sound and voice pick-up will go directly to the headset rather than the handset.

Using the Speakerphone

When a call is engaged, to activate the Speaker Phone, press the Right soft key.

Camera

Send a multimedia message

1. In Standby mode, press and hold the Camera key on the right side of the handset to turn on the camera.
2. Press the OK key to snap the picture.
3. Press the "Options" soft key then press number 1 for Send via- use your right navigation key to choose how you wish to send you picture.
4. Press 1 for Multimedia message you will be prompted to add text in your message. You also have the option to add sound to your message.
5. Once you have inputted content into each field press the Options key (left soft key)- Send (3)
7. Press Options key and select from your contacts or enter the number you wish to send the message to.
8. Press Options key again and 1 for Send or the OK/∫ key to send.

Record a video on your video player

1. Press Menu- Media (6)
2. Select Camera (1)- Record Video (2).
3. Press the OK/∫ key to start recording your video clip.
4. To stop the recording, press the OK/∫ key again.
5. Press the right soft key to save. You will then be able to play back the video you just recorded.

Send a video via MMS

1. Record your video and save.
2. Press the left soft key and then select "Send Via" (1) and choose Multimedia Message (1).
3. Follow the prompts from the "send a multimedia message" section to send your message.

Playback a video on your video player

1. Press the side key to activate the camera.
2. Press the left soft key for "Options", select "Go to videos" (5)
3. Select the video you wish to playback and press OK/∫ key.

Print a photo from your phone

1. Press the side key to activate the camera.
 2. Take a picture and press left soft key "Options".
 3. Select "Print via" (10) and you can choose to print via USB (data cable included in-box) or Bluetooth.
- If you wish to print via USB, make sure the cable is attached to your phone and to your printer.
If you wish to print via Bluetooth, make sure your Bluetooth connection is on and that you are paired to the device you wish to print from. Follow the phone prompts to print your photo.

TECHNICAL SPECIFICATIONS

Network (Quadband)

- 850 MHz
- 900 MHz
- 1800 MHz
- 1900 MHz

Dimensions

- 95.7 x 47 x 21.8 mm

Weight

- 103 grams

Display

- 240 x 320 pixels colour

Standby time

- up to 300 hours

Talk Time

- up to 7 hours

Music Player

- n/a

Memory

- Internal phonebook
 - holds 250 numerical entries in SIM card
 - holds up to 1000 numerical entries in phone
 - One, Two, Three-touch dialing
- Call Logs
 - last 20 Received
 - last 20 Dialed
 - last 20 Missed

MENU TREE for the d606

1. Recent calls

1. All calls
2. Missed calls
3. Calls made
4. Calls received
5. Delete all
6. Call time

2. Messages

1. Instant Messaging
2. Create new message
3. My messages
4. Templates
5. Voice mail
6. Delete all
7. Settings
8. Broadcast message
9. Memory status

3. Games

- Get Games
- My games

4. Applications

1. Alarm
2. Calendar
3. Task
4. Calculator
5. Converter
6. Timer
7. Stopwatch
8. World time

5. Rogers Mail

1. Get Ring tones
2. Get Music
3. Get Games
4. Get Graphics
5. Get Video
6. Get Celebrity Voicemail
7. Get my Pix - Online Album
8. Navigate Home

6. Media

1. Camera
2. MP3 Player
3. Record audio
4. Rogers Music Store
5. Voice recognition

7. Fun & Tunes

1. Ringtones
2. Images
3. Videos
4. Music
5. Other files
6. Memory card
7. Memory status

8. Contacts

1. Contacts list
2. Add new contact
3. Group
4. Speed dial
5. My name card
6. Own number
7. Management
8. Service number

9. Settings

1. Time & Date
2. Phone settings
3. Display settings
4. Sound settings
5. Network services
6. Bluetooth
7. Security
8. Connection Settings
9. Voice recognition settings
0. Reset settings



* Many of the services and features described above are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas.

** **Please Note:** Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of call, and voice, data and other application usage patterns.

© 2006 Samsung Electronics Canada Inc. Samsung is a registered trademark of Samsung Electronics Co. Ltd. and its related entities. Specifications subject to change without notice.

*** Compatibility with all Bluetooth® and PictBridge™ equipment is not guaranteed. The Bluetooth technology trademarks are owned by Bluetooth SIG, Inc., USA and used by Samsung Electronics Co. Ltd under license.

Samsung Electronics Canada Inc.

Customer Care Centre

1.800.SAMSUNG

www.samsung.com/ca

