

Quick Start Guide

Thank you for purchasing the Nokia E62!
Use this guide to:

- Properly insert the SIM card and battery
- Get familiar with your device
- Understand how to dial and enter text with the keypad
- Explore connectivity options
- Find additional support



See the complete User Guide for more information, and for important safety and maintenance information. Do not use this document in place of the complete User Guide.



9244919, Issue 1.0, May 2006

All screen images are simulated. Your device may differ in color, keypad layout, or other features from the pictures shown here.

 
Model number: Nokia E62-1
Hereafter referred to as Nokia E62.

1 Install the SIM card, battery, and optional miniSD card

Your Nokia E62 uses a SIM card that provides access to your wireless service. A SIM card allows you to switch between phones and keep your phone number and your phone book with you. The Nokia E62 also provides a slot for an optional miniSD card for memory expansion. The miniSD card (if included) can store applications, presentations, music files, and more.

Insert the SIM card


1. With the back of the device facing you, hold down the cover release button (fig. 1.1a) and slide the battery cover in the direction shown (fig. 1.1b).
2. Slide the SIM card into position with the metal contacts facing down and the beveled edge pointing toward the bottom of the device (fig. 1.2).

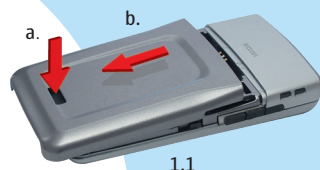


1.1

Insert the battery

 1. Insert the battery by aligning the contacts of the battery with the corresponding connectors on the battery compartment (fig. 1.3).
2. Replace the battery cover.
3. Charge the battery by connecting the Nokia charger to a standard wall outlet, and connect the charger to the bottom of your device.

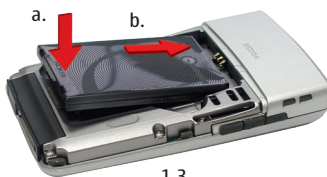

 1.3

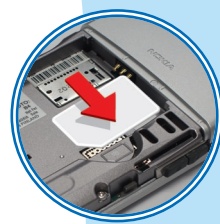


1.2

Insert the miniSD memory card (optional)

If the miniSD card is not included in-box, it can be purchased separately.

 1. If the back cover is on the device, remove it as shown in fig. 1.1.
2. Insert the miniSD card into the memory card slot with the metal contacts facing down and the beveled edge pointing toward the top of the device (fig. 1.4).
3. You will hear a click when the card is fully seated in the memory slot.

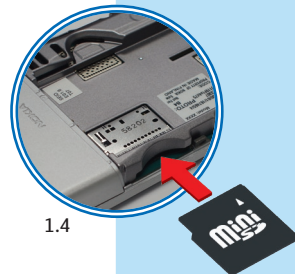

1.4

2 Get familiar with your device

The Nokia E62 is the perfect mobile solution for taking your business with you when you're on the go. Take a moment to get familiar with the keys.

1. Power key

Press and hold this button to switch your device on and off. Press this button once to switch between profiles.

2. Email LED

Light notifies you of a new email message.

3. Device display

4. Volume up/down keys

5. Voice key

Press quickly to access the voice recorder. Press and hold to activate enhanced voice commands.

6. Left and right selection keys

7. Menu key

Opens the main menu, giving you access to all applications.

8. Email key

Opens your default email inbox. Press and hold to begin composing a new email. (Note: Functionality may vary based on your email service provider.)

9. Joystick

Move up, down, left, or right to navigate. Press to select.

10. Call key

11. End key

12. Full keypad



Note: To lock your keypad, press and release the left selection key () then press the function key (). To unlock, press and release the left selection key () and then press the function key () again.

3 Learn the keys

Text entry is easy within applications like SMS, Notepad, and email. Simply press any letter key on the full messaging keyboard (QWERTY) to type the letter. Press the space key () to add spaces, and press the enter key () to go to the next line.

1. Function key (): Use to enter special characters and functions like &, !, or %, printed at the top of the keys. Press and release this key, then press the key with the desired character or function.

Tip! Function Lock – Press the function key () twice to lock the key and enter only characters printed at the top of the keys. Press again to release it.

2. Shift key (): Use to capitalize letters. Press and release, then press a letter key to capitalize that letter.

Tip! Press the shift key twice to turn on caps lock and enter only capital letters. Press again to release it.

3. Control key (ctrl): Use with common keyboard shortcuts, such as Ctrl+C to copy text and Ctrl+V to paste text.

4. Character key (chr): Use to select and enter special characters not found on the keypad. Press and release the Chr key () to view the table of special characters. Use the joystick to navigate to the desired character, and press the joystick to select the highlighted character.



Tip! To enter accent marks on letters, press and hold the Chr key (), and then press the letter key repeatedly until the special character appears.


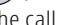 


4 Make a call


The design of the Nokia E62 makes it easy to dial, navigate, and multitask. Its advanced voice features provide you with everything you need to keep in touch.

Make a call

From the idle state, enter the phone number using the number pad on the keypad (fig. 4.1). You do not have to press the function key () to access the numbers when dialing. Press the call key () to make the call.

Tip! To dial a number that contains letters (such as 1-800-4NOKIA), hold down the Chr key () while pressing the letter keys. Press the call key () to make the call.

Speak handsfree

To activate the speakerphone, press the right selection key () while in a call. Or use Bluetooth wireless connectivity to connect to a compatible Bluetooth-enabled wireless headset.

Host a conference call

 
Host a conference call with up to 5 additional participants.* To dial in a new participant, select **Options > New call**. This places the active call on hold, and you can call the next participant. When the new participant answers, select **Options > Conference** to add the new participant into the conference call.

Consult your User Guide to learn more about these advanced voice features.

* This feature is network dependent. Contact your service provider for availability.



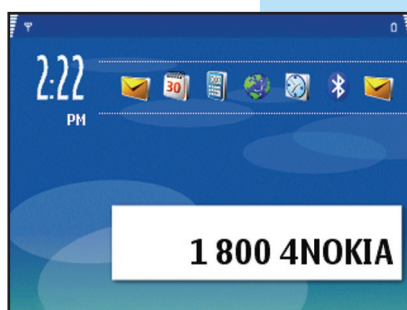

4.1



 
5 Use email

You have options for accessing email on your Nokia E62, including the built-in Nokia email client and third-party email clients. Email service and third-party clients are offered by your wireless carrier, Internet service provider (ISP), or your company. Check with your carrier or company's IT manager about third-party solutions that best fit your needs.

Once your email is set up, you can read and send email while on the go. The dedicated email key () makes it easy to access your messages, and the built-in document viewer lets you download and view email attachments right on your Nokia E62.*

To set up your email accounts, you can use the Settings Wizard application in your device. Settings Wizard includes the settings of a number of popular ISP email accounts and is activated the first time you press the email key (). To set up more email accounts, you could locate the Settings Wizard application in **Menu > Tools > Setting Wizard**. Alternatively, you can contact your service provider for support in configuring your email accounts.

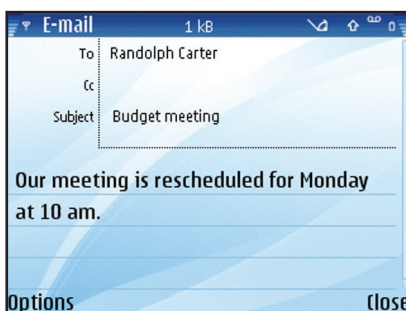

* Email services may vary depending on your email solutions provider.



6 Get connected

Your Nokia E62 offers a variety of ways for you to get connected—including Bluetooth wireless technology, USB, and Infrared connections. You can exchange data (such as contacts) between a previous device and your new device using the Transfer application on your Nokia E62. Consult your User Guide for specifics.

Bluetooth wireless connectivity



Bluetooth wireless technology allows your Nokia E62 to communicate with other compatible devices. Pair it with other Bluetooth-enabled devices such as headsets or car kits for handsfree communication, or pair it with your laptop, printer, or PDA to transfer data or synchronize information. To access Bluetooth set-up, select **Menu > Connect > Bluetooth**. Once the Bluetooth settings are configured, you can easily turn Bluetooth connectivity on/off by simultaneously pressing the function key () and the Ctrl key ().

USB connectivity

Use the USB port and the connectivity cable to connect your Nokia E62 to your compatible PC or laptop. Synchronize contact and calendar information with your PC using the Nokia PC Suite application included on the in-box CD-ROM, or transfer presentations, documents, music, and other data files to the optional miniSD card.

Infrared

Infrared allows you to "beam" data files, contact cards, etc. between your Nokia E62 and a compatible device such as your laptop, PDA, or compatible phone.

Tip! Infrared is easily turned on/off by simultaneously pressing the function key () and Chr key ().



7 Find additional support

Nokia support options are designed to be flexible and comprehensive. Use the following resources to learn more about your new Nokia E62.

In-box CD-ROM

Use the in-box CD-ROM to learn more and install Nokia PC Suite, a free software program that allows you to exchange data between your device and a compatible computer. To review the CD-ROM, insert the CD into the CD-ROM drive of your compatible PC. If the CD does not automatically launch, select: **Start > Run > D:\start.exe**, where D: is your CD-ROM drive.


On-device instructions

Use the on-device Help and Tutorial for instant support. To launch the tutorial, go to **Menu > Help > Tutorial**. To launch help topics within an application, press **Options > Help**.

Nokia E62 User Guide

Refer to the User Guide for the most comprehensive details on how to use your new Nokia E62.

Nokia Support on the Web

Check www.nokiausa.com/support or your local Nokia web site for the latest information. 

1-888-NOKIA2U (1-888-665-4228)

Nokia provides toll free customer support, Monday – Friday from 8:00 a.m. to 12:00 a.m. EST and Saturday – Sunday from 10:00 a.m. to 7:00 p.m. EST.

Service Provider

Contact your wireless service provider for questions regarding your wireless service.

