

QUICK START GUIDE

Thank you for purchasing the Nokia 5300 XpressMusic phone!

Use this guide to:

- ▶ Get familiar with your device
- ▶ Load up your Nokia 5300
- ▶ Play and customize your music
- ▶ Take pictures and video with your Nokia 5300
- ▶ Find additional support

NOKIA 5300 XpressMusic

Music gets you talking



See the complete user guide for more information and for important safety and maintenance information. Do not use this document in place of the complete user guide. All screen images are simulated. Your device may differ in colour, keypad layout, or other features from the pictures shown here.

NOKIA
Connecting People

9255258. Issue 1. Printed in Mexico.

1 CHECK IT OUT

The Nokia 5300 is the perfect way to take your music with you and make a bold statement wherever you go. With the phone cradled in your fingers, press the slider up with your thumb. The phone extends, revealing the keypad. Take a minute to check out the keys.

- 1. Display:** 240 x 320 pixels that vividly displays up to 16.7 million colours TFT.
- 2. Volume control keys (+) (-):** Press to turn your volume up and down.
- 3. Radio keys (◀▶) (▶▶) (▶▶▶):** Press to scan up, activate radio and scan down.
- 4. Camera key (📷):** 1.3 megapixel camera with 8x digital zoom.
- 5. Headset jack:** 2.5 mm jack compatible with Nokia headset and headphones (included adapter enables use with 3.5 mm headphones and speakers).
- 6. USB port:** Download your favourite songs from your computer with a USB cable.
- 7. Left and right selection keys (☐) (☐):** Press to activate the menu option shown above the key.
- 8. Send and End keys (☎) (☎):** Press to start or end your calls.
- 9. Power key (⏻):** Press and hold to turn the phone on/off.
- 10. Internet access key (🌐):** Press and hold to access the mobile web (requires Network configuration settings).
- 11. Silent ringing tone key (🔕):** From the Start screen, press and hold this key to quickly silence your phone. Press and hold the same key to restore your ringing tone to normal.
- 12. Scroll key (⬆️):** From the Start screen, press the scroll key to access these shortcuts:
 - ▶ Press up to access **Gallery**
 - ▶ Press down to access **Contacts**
 - ▶ Press right to create a new text message
 - ▶ Press left to access **Call log**
- 13. Hot swappable microSD memory card:** Use up to a 2GB microSD card (sold separately) to increase the memory of your phone.



2 GETTING STARTED WITH YOUR MUSIC PLAYER

1. Install the Rogers PC Media Player

Visit www.rogers.com/musicstore, download the Rogers PC Media Player, and install it on your computer.

2. Put music on your computer

To import music from your CDs into the Rogers PC Media Player

1. Put a CD into your computer
2. Launch the Rogers PC Media Player
3. Select "Import" under "CD"
4. Select/Deselect songs, choose the file type (eg. MP3), and select the "Import" button

Your Nokia 5300 is ready to rock right out of the box. Take a look at how easy it is to transfer your music from your computer to your phone. See the CD-ROM included for more info.

1. Connect your Nokia 5300 to your PC with the USB data cable (fig. 2.1).
2. Select **OK** to confirm USB connection. (☐)
3. Select **Data Storage*** on the Nokia 5300. (☐)
Your phone is now connected to your PC as a mass storage memory device ("removable disk").
4. Using Windows Explorer on your computer, find the music files you wish to transfer to your phone (usually in **My Music**) and "drag and drop" them to the folder named **Music** of the 5300.
5. Once the transfer is complete, select **Quit** from your Nokia 5300 (☐), and unplug the USB cable from the devices.
6. Enjoy your music!








fig. 2.1

Nokia USB Data Cable (DKE-2)


* For Win DRM protected media, select Print and Media.

3 PLAY YOUR MUSIC

 
 
 
THE NOKIA 5300 MAKES IT EASY TO ENJOY YOUR FAVORITE TUNES

1. To view your music library, from the Start screen, select **Music**. ()
2. To immediately start playing your tracks, press the scroll key. ()
3. To play specific songs or a playlist, select **Options**. ()
4. Select **Library**. () ()
5. Select **Artists, Albums, New songs, Genres, or All songs**.

TIP! You can receive calls even when you are listening to your music.

When your phone rings, the music automatically pauses. To restart the music after the call, just press the scroll key ().

Tune in the FM radio to your favorite local stations (compatible headset required).

1. Press the Activate Radio button () on the left side of the phone to activate the radio.
2. To scroll to the desired frequency, press Scan up () or Scan Down ().
3. To adjust the volume, press the volume key.

USING HEADPHONES

The included adapter lets you listen to music with any headphones that have a standard 3.5 mm jack.

NOTE: While using standard headphones, use the phone's microphone to talk on the phone.

 

TIP! Consult your user guide to learn more about these advanced features.





 


4 CAPTURE THE FUN

 
 
The Nokia 5300 also comes with a 1.3 megapixel (240 x 320 pixels) camera that allows you to take high quality images and share them with your friends. You can even zoom in up to eight times!

TAKE A PICTURE

1. From the Start screen, press the **Camera** key on the side of your phone. ()
2. Use the volume keys located on the side of the phone to zoom in and out (+) (-).
3. To take a picture, press the **Camera** key. ()

MAKE A VIDEO

1. From the Start screen, press the **Camera** key on the side of your phone. ()
2. With the phone in horizontal position, press **Options > Video**. () ()
3. To start recording, press the **Camera** key. ()
4. To stop recording, select **Stop**. ()

TIP! The camera in your Nokia 5300 also has a self timer and self-portrait mirror next to the camera lens. Press the **Camera** key () > **Options** () to explore the fun features of your phone!



Camera key

5 FIND ADDITIONAL SUPPORT

Nokia support options are designed to be flexible and comprehensive. Use the following resources to learn more about your new Nokia 5300.

NOKIA 5300 USER GUIDE

Refer to the user guide for the most comprehensive details on how to use your new Nokia 5300.

NOKIA SUPPORT ON THE WEB

Check www.nokia.ca for the latest information and to help you get more from your new product.

1 888 22-NOKIA (1 888 226-6542)

Nokia provides toll-free customer support, Monday-Friday from 8:30 a.m. to 7:00 p.m. EST.

SERVICE PROVIDER

Contact your wireless service provider for questions regarding your wireless service.

