

Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

WARNING! *Violation of the instructions may cause serious injury or death.*



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.
3. Never store your phone in temperatures less than -4°F or greater than 122°F .
4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



6. Do not use a hand-held phone while driving.
7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

Table of Contents

Exposure to Radio Frequency Signal	80	Explosion, Shock, and Fire Hazards	85
Antenna Care	80	General Warnings and Cautions	87
Phone Operation	81		
Tips on Efficient Operation	81	Warning! Important safety information	88
Driving	81	Avoiding hearing damage	88
Electronic Devices	81	Using your phone safely	89
Pacemakers	81	Using headsets safely	89
Persons with Pacemakers:	82		
Hearing Aids	82	FDA Consumer Update	89
Other Medical Devices	82		
Health Care Facilities	82	Consumer Information on SAR	100
Vehicles	83		
Posted Facilities	83	Accessories	105
Aircraft	83		
Blasting Areas	83	Warranty Information	106
Potentially Explosive Atmosphere	83		
For Vehicles Equipped with an Air Bag	84		

Charger and Adapter Safety

Battery Information and Care 84

Safety Information 85

4. Bluetooth	59	7. Memory Card	75
5. Side Key Guard	59	8. Memo Pad	75
6. Text Entry	59	9. Voice Memo	76
7. More...	60	0. Voice Control	77
7.1 Accessibility	60	*. USB Mode	77
7.2 Airplane Mode	61	#.1 Mass Storage	77
7.3 Call Setup	62	#.2 Phone As Modem	78
7.4 Location	63		
7.5 Restrict and Lock	63	Phone Support	78
7.6 Roaming	64	1. Account Info	78
7.7 Security	65	2. Add New Services	78
7.8 Touch Key Vibrate	67	3. Phone Information	79
Tools	68	3.1 My Phone Number	79
1. Downloaded Tools	68	3.2 Icon Glossary	79
2. Alarm Clock	69	3.3 Version	79
3. Calendar	70	4. Security	79
4. Calculator	71	5. Live Assistance	79
4.1 Calculator	71	6. Text Assistance	79
4.2 Ez Tip Calculator	71		
5. Bluetooth	71	Safety	80
<Add New>	72		
<Settings>	73	TIA (Telecommunications Industry Association) Safety Information	80
6. World Clock	75		

Table of Contents

Messaging	41	Contacts	50
1. Send Message	41	1. Find/Add Entry	50
2. Text Messages	43	2. Speed Dial #'s	51
2.1 Inbox	43	3. Groups	52
2.2 Sent	44	4. Backup	52
2.3 Outbox	45	5. My Name Card	52
2.4 Draft	45	6. Services	52
2.5 Edit Folder	45	7. Send All Contacts	53
2.6 Send Message	46		
3. IM & Email	46	Settings	54
4. Pic/Video Message	46	1. Display	54
5. Web Alerts	46	1.1 Main Screen	54
6. Voicemail	47	1.2 Outer Screen	56
7. Settings	47	1.3 Font Size	56
7.1 Notification	47	1.4 Keypad Light	57
7.2 Message Reminder	48	1.5 Language	57
7.3 Callback Number	48	1.6 Phone Interface	57
7.4 Auto-Delete	48	2. Sounds	57
7.5 Signature	48	2.1 Volume	57
7.6 Quick Messages	49	2.2 Ringtones	58
7.7 Edit Voicemail #	49	2.3 Alerts	58
7.8 Web Alerts	49	2.4 Keytones	59
		3. Messages	59

Using Phone Menus	24	3. Outgoing Calls	30
Web	24	4. Recent Calls	31
Ringers	26	5. Settings	31
1. Downloaded Ringtones	26	6. Delete History	31
2. Ringer Type	26	Missed Alerts	31
2.1 Voice Calls	26	My Downloads	32
2.2 Messages	27	Application Manager	32
3. Volume	27	Tools	32
4. Caller Ringtones	27	Ringers	32
Entertainment	28	Screen Savers	33
1. TV & Radio	28	Games	33
1.1 Channel Listing	28	Memory Card	33
1.2 Memory Card	29	Memory Status	35
2. Movies	29	Camera	35
3. Music	29	1. Photo Album	36
4. Games	29	2. Camera	37
Calls	30	3. Camcorder	38
1. Missed Calls	30	4. Pic/Video Message	40
2. Incoming Calls	30	5. Settings	40

Table of Contents

Important Safety Precautions	1	Turning the Phone On and Off	19
Table of Contents	4	Turning the Phone On	19
Welcome	9	Turning the Phone Off	20
Technical Details	10	Signal Strength	20
Phone Overview	13	Making Calls	20
Menus Overview	15	Correcting Dialing Mistakes	21
Getting Started with Your Phone	18	Redialing Calls	21
The Battery	18	Receiving Calls	21
Installing the Battery	18	Quick Access to Convenient Features	22
Removing the Battery	18	Lock Mode	22
Charging the Battery	19	Mute Function	22
Battery Charge Level	19	Volume Quick Adjustment	22
		Call Waiting	22
		Caller ID	23
		Speed Dialing	23

Some of content in this user guide may be different from your phone depending on the software of the phone or your service provider. Features and specifications might be subject to change without prior notice.



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
2. Do not hold or let the antenna come in contact with your body during a call.



3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



4. Store the battery out of reach of children.
5. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



9. Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Important Safety Precautions



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.

4. Do not use your phone in high explosive areas as the phone may generate sparks.



5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.

7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



8. Do not disassemble the phone.

Welcome

Thank you for choosing the advanced and compact LG385 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this phone offers:

- Built-in Music Player
- Large, easy-to-read, 11-line backlit LCD with status icons.
- Paging, messaging, voicemail and caller ID.
- 24-key keypad.
- Speakerphone feature.
- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and French) capabilities.
- Easy-to-carry, compact and slim design.
- Bluetooth® wireless technology.
- Media Player.
- PictBridge Print capability.

Messaging


Out of Memory Warning



If the memory is full, no more messages can be received until enough memory space becomes available. A disclaimer is displayed and new messages are not accepted.

Viewing Your Inbox



Up to 100 received messages can be stored in the Inbox.



1. Press , , , .

2. Use  to highlight an Inbox message.

- Left Soft Key  Reply.
- Right Soft Key  Options.

Locked(Unlock)/ Delete/
Delete Read Msgs/ Delete
All

3. Use  to highlight an Inbox message, then press .

4. While viewing the selected message, press Left Soft Key  Reply or Right Soft Key  Options.

Options from here:

Call(Go to List)/ Forward/
Locked(Unlock)/ Save
Number/ Delete/ Delete All

2.2 Sent

Up to 100 sent messages can be stored in the Sent. View lists and contents of sent messages and verify whether the transmission was successful or not.

1. Press , , , .

2. Use  to highlight an Outbox message.

- Left Soft Key  Resend.
- Right Soft Key  Options.

Message Icon Reference



Indicates a text message is saved as draft.



Indicates the text message is duplicated.



Indicates the text message is duplicated and locked.



Indicates a text message is failed in transmission.



Indicates the text message is locked.



Indicates the text message is pending.



Indicates a text message is read.



Indicates a text message is sent.



Indicates the text message is not read.




Indicates the text message is cancelled.

2. Text Messages

1. Press  ,  8 TUV ,  2 ABC .

2.1 Inbox



The phone alerts you in 3 ways when you receive a new message by:

- Displaying a message notification on the screen.
- Sounding a beep, vibrating or sound, if set.
- Displaying the message icon  .

 
Received text messages, page messages, and e-mail lists may be searched and the contents viewed. Received messages are displayed from the newest to the oldest.





Messaging

Or enter the destination. Select **From Contacts/ Mobile/ Email/ Recent List** and press Left Soft Key.

3. Press Left Soft Key  **Next** and type your message (text or e-mail), then press .


Using Text Input Modes

Right Soft Key () To choose T9Word/ Abc/ 123/ Symbols/ Smileys/Quick Messages/Preset Suffix.

SHIFT Key		To change cases.
SPACE Key		To insert a space.
BACK Key		To backspace and hold it to delete words.
Punctuation Key		To insert punctuation in a word or to complete a sentence in T9Word Mode.

4. Set a priority of your message.
Priority: Normal/ Urgent

5. Set your callback number.
None/ My Phone Number/ Other

6. Press Left Soft Key  **Send**.
A confirmation message is displayed.

Sending a Pic/Video Message

Register your Pic/Video Message account.



Messaging

Access and Options

1. Press .
2. Press **Messaging**.
3. Select a sub-menu.
 1. Send Message
 2. Text Messages
 3. IM & Email
 4. Pic/Video Message
 5. Web Alerts
 6. Voicemail
 7. Settings

Text messages, pages, and the voicemail box become available as soon as the phone is powered on.

The phone can store up to 260 messages. The LG385 supports up to 140 characters per message including header information. The information stored in the message is

determined by phone mode and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

1. Send Message

Allows you to send text messages, picture messages, pages, and e-mail transmissions. Each message has a destination (up to 25 recipients per message) and information (Message). These are dependent upon the type of message you want to send.

Sending a Text Message

1. Press , , .
2. With the highlight on To field, press .
Search an entry you want to send a message in Contacts and press .

Camera

4. Pic/Video Message

Allows you to store your picture/video messages.

1. Press , , .

Note





While copying or moving the Pic/Video messages, do not eject your microSD card. This may damage your phone.

The available options are Memory Card and In Phone.

Account Info to display your current account settings via an online connection.

5. Settings

The Settings menu allows you to configure where pictures or videos are saved, view your account information, or switch the format between portrait or landscape mode.

1. Press , , .
2. Select one of the following options and press .

Auto-Save to to select where to save pictures and videos.

Phone Folder if you do not have a microSD card inserted. If you have a microSD card in the phone then the video will be automatically saved to your memory card instead. To change this option go to the Pictures menu, select Settings & Info, and then select the Auto Save to option. Select Memory Card or In Phone.)

6. Press Right Soft Key  **Options** for more options:

Play to play the video that was just captured.

Send to send the video.

Upload to upload videos from the In Phone Folder to the PCS Picture Mail Web site. Depending on your settings, you may be prompted to accept a PCS Vision connection. Choose from the

following options:

Delete to delete videos in the In Phone folder.

Post to Service to send the image to a number of popular third-party Web image services.

Review/Send Media

Take New Video to return to camcorder mode.

Camera

Assign to assign the picture to a phone task. Select an option:

- **Picture ID** to assign the picture to a Contacts entry.
- **Screen Saver** to use the picture as a screen saver.
- **Incoming Calls** to display the picture for all incoming calls.

Delete to delete the picture you just took.








Post to Service to send the image to a number of popular third-party Web image services.

Review/Send Media to review the picture and to send it to media.

Take New Picture to return to Camera mode to take another picture.

3. Camcorder

In addition to taking pictures, you can also record, view, and send videos to your friends and family with your phone's built-in video camera.

1. Press , , .
2. Select **Video Mail** or **Long Video** to activate video mode.
3. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
4. Press Left Soft Key  **Record**, , , or the side camera key to begin recording (The maximum recording time is **Video Mail**: 20 seconds/**Long Video**: 1 hour).
5. Press Left Soft Key  **Done** or the side camera key to stop recording. (The video will be automatically saved to the In

2. Select Upload and then select Uploads or an album title to save your picture(s) to your online albums.




2. Camera

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button.



1. Press , , .

Shortcut

Press the side camera key to access the camera. To return to camera mode, select Options and then Take New Picture.

2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
3. Press Left Soft Key 
Capture, , , or the side camera key until the

shutter sounds. (The picture will automatically be saved to the In Phone Folder if you do not have a microSD card inserted. If you have a microSD card in the phone then the pictures will be automatically saved to your memory card instead.

- To return to camera mode to take another picture, press .
4. Press Right Soft Key 
Options for more options:

Send to send the picture to up to 25 contacts at one time.

Upload to upload the picture you just took to the Picture Mail Web site. Depending on your settings, you may be prompted to accept a PCS Vision connection.

Camera

1. Photo Album

Your phone's picture storage area is called Photo Album. There are three types of folders that can be used separately according to your needs: In Phone/ Memory Card/ Online Albums.

1. Press  ,  ,  .

In Phone Folder

Allows you to see received messages. You can save media files such as picture and video to In Phone or microSD card.


To review your stored pictures in the In Phone folder:

1. Select Menu -> Camera -> Photo Album -> In Phone.
2. Use your navigation key to view and scroll through the pictures.
3. Use the following options:

Play*/ Send/ Upload/
Assign*/ Delete/ Post to
Service/ Copy/Move/
Detail/Edit/ Media Filter/
Album List/ Camera Mode/
Zoom

* Files dependent

Memory Card Options





When viewing the pictures in your memory card, press Right Soft Key  Options to display picture options. (The Memory Card options are identical to the In Phone Folder options)

Online Albums

To save your pictures to online albums:

1. Select Yes when prompted to save to an online album. (The PCS Picture Mail Web site will start.)

Displaying Your microSD Folders

1. Press  ,  .
2. Select your desired folder (dcim, media & my_music) and press  .
3. To view or play a preview of a file, highlight it with your navigation key, and then press  or the appropriate soft key.

Memory Status

Displays the used and available memory space.

1. Press  ,  .





Camera

Your phone's built-in camera gives you the ability to take full-color digital pictures, view your pictures using the phone's display, and instantly send them to family and friends.

Note

While recording a video, do not eject your microSD card. This may damage your phone.

Access and Options


1. Press  .
2. Press  **Camera**.
3. Select a sub-menu.
 1. Photo Album
 2. Camera
 3. Camcorder
 4. Pic/Video Message
 5. Settings

My Downloads

3. Pull the microSD memory card out of the phone.

Notes

- The microSD card and its adapter can be easily damaged by improper operation. Please be careful when inserting, removing, or handling them.
- Do not remove a microSD card while files are being accessed or transferred. It will result in loss or damage of data.

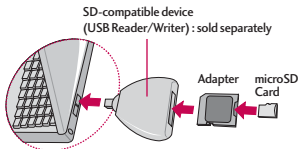




Creating Folders in the microSD Card





1. Press  , .
2. Press Right Soft Key 

Options and select **Create New Folder** (The phone will create the microSD's default folders: MEDIA and DCIM).

Viewing Memory in the microSD Card



1. Press  , .
2. Press Right Soft Key  Options and select **Memory Info** (The used and available memory space will be displayed).

Formatting the microSD Card

1. Press  , .
2. Press Right Soft Key  Options and select **Format Memory Card**.
3. If you are sure you wish to remove all the files from your microSD card, select **Delete** and press .


 

Screen Savers

To download an available Screen Saver to your phone:

1. Press , .
2. Highlight **Get More** and press  (The browser will launch and take you to the Screen Savers download menu).

Games

To download an available Games to your phone:

1. Press , .
2. Highlight **Get More** and press  (The browser will launch and take you to the Games download menu).

Memory Card

Up to 4GB is supported. It allows you to easily store images, video, music, and voice data in your phone.

Inserting the microSD Card

1. Open the microSD access panel located on the right side of the phone.
2. Position the microSD card perpendicular to the opening and gently slide it into place until it is fully inserted and locked.

Note

Be sure to use only recommended microSD cards (8MB–2GB). Using non-recommended microSD cards could cause data loss and damage your phone.

Removing the microSD Card

1. Open the microSD access panel located on the left side of the phone.
2. Push in and then release the microSD card to eject.

My Downloads

My Downloads

You have access to a dynamic variety of Premium Service content such as downloadable Tools, Ringers, Screen Savers, Games, and other applications.

Note

Additional fees may apply.

Access and Options

1. Press .
2. Press  **My Downloads**.
3. Select a sub-menu.

Application Manager

Tools

Ringers

Screen Savers

Games

Memory Card

Memory Status



Application Manager

Allows you to view the detailed information of the selected application you choose in the list.

1. Press , .




Tools

To download an available tool to your phone:

1. Press , .
2. Highlight **Get More** and press  (The browser will launch and take you to the Tools download menu).



Ringers

To download an available ringer to your phone:

1. Press , .
2. Highlight **Get More** and press  (The browser will launch and take you to the Ringers download menu).

4. Recent Calls

Allows you to view the list of recent calls; up to 50 entries.






1. Press , , .
2. Use  to highlight an entry.

5. Settings

See “Call Setup” on page 61.

6. Delete History

Allows you to erase selected call list(s).

1. Press , , .
2. Use  to highlight the list of calls to erase, then press .





Missed Calls/ Incoming Calls/ Outgoing Calls/ Recent Calls/ All Calls

3. Press   Yes.

Missed Alerts

Displays the list of your missed alerts. This feature allows you to check out functions you have not promptly checked. For example, the features are Missed Calls, Alarm, Text Messages.

Access and Options

1. Press .
2. Press  **Missed Alerts.**
3. Press   **View.**

Calls



Calls

The Calls Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Access and Options

1. Press .
2. Press Calls.
3. Select a sub-menu.

1. Missed Calls
2. Incoming Calls
3. Outgoing Calls
4. Recent Calls
5. Settings
6. Delete History

1. Missed Calls

Allows you to view the list of missed calls; up to 50 entries.

1. Press , , .
2. Use to highlight an entry, then
 - Press to view the entry.
 - Press to place a call to the number.

2. Incoming Calls

Allows you to view the list of incoming calls; up to 50 entries.

1. Press , , .
2. Use to highlight an entry.

3. Outgoing Calls

Allows you to view the list of outgoing calls; up to 50 entries.

1. Press , , .
2. Use to highlight an entry.

and follow the on-screen instructions to purchase access to it. Upon purchasing access to one of these channels, the channel will be listed, along with its corresponding channel number, in the My Channels section of your media player's Channel Listings. You will see it displayed in this section the next time you access your phone's media player.

1.2 Memory Card

This menu is available when you insert a memory card into your phone.

1. Press  ,  ,  ,  .




2. Movies

Allows you to select and buy movie(s) available on your phone.

1. Press  ,  ,  .




3. Music

This menu will let you use your phone as a portable personal jukebox. From both the Media Player and Music store to a variety of streaming music options, you're bound to find the music you want, when you want it.

1. Press  ,  ,  .
2. Use your keypad and navigation key to explore the store.

4. Games

Allows you to select and buy game applications available on your phone.



1. Press  ,  ,  .
2. Highlight **Get More** and press  (The browser will launch and take you to the Games download menu).

Entertainment

Entertainment

Allows you to expose to various multimedia menus such as TV & Radio, Movies, Music and Games.

Access and Options

1. Press .
2. Press  **Entertainment**.
3. Select a sub-menu.
 1. TV & Radio
 2. Movies
 3. Music
 4. Games

1. TV & Radio

Your phone's built-in media player gives you the ability to watch TV and listen to radio right from your phone's display.

1.1 Channel Listing

It's easy to access and view the multimedia Channel Listings on your LG385 from the phone's main menu.






1. Press , , , .

Your Channel Listings will display, divided into the following two sections:

- **My Channels:** These include the complimentary Previews channel that the service provider provides, as well as any available individual channels for which you have purchased access.
- **Available Channels:** These are channels that have not yet been purchased but are available to access for a monthly subscription fee. Use your navigation key to scroll through and select a channel,






2.2 Messages

Allows you to assign ringers for messages.

1. Press , , , .
2. Select **Voicemail Alerts, Text Message or Pic/Video Msg Alerts**. (The list of preprogrammed ringers is displayed.)
3. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign the desired ringer.

3. Volume

Allows you to set various volume settings.

1. Press , , .
2. Select **Ringer/ Earpiece/ Speakerphone/ Power On/Off/ Applications**.
3. Use  to adjust the volume of the ringer, then press .

4. Caller Ringtones

Allows you to set a ringtone for each caller that will ring when you have an incoming call.



1. Press , , .

Ringers

Ringers

This menu allows you to access and buy ringtones. You can control ringer type depending on the types of messages and customize the volume. Caller ringtones are also available.


Access and Options

1. Press .
2. Press  Ringers.
3. Select a sub-menu.
 1. Downloaded Ringtones
 2. Ringer Type
 3. Volume
 4. Caller Ringtones

1. Downloaded Ringtones

Allows you to download an available ringer to your phone.






1. Press , , .

2. Highlight **Get More** and press  (The browser will launch and take you to the Ringers download menu).

2. Ringer Type

2.1 Voice Calls

Allows you to assign ringers for incoming calls.

1. Press , , , .
2. Select **Caller ID** or **No Caller ID**. (The list of preprogrammed ringers is displayed.)
3. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign the desired ringer.

Quality of Browser

Browsing the web via the phone is not like using your home computer. Site providers have selected only the critical aspects of their site to present to wireless phone users and have removed most graphics.

Ending the Web Session

You can end a Web session by pressing .

Navigating through the Browser

While using the Web, you will find the following:

- Numbered options (some options may not be numbered);
- Links (embedded in content);
- Text or numeric input;
- Simple text.

You can act on the options or the links by using the Soft Keys.


Using Phone Menus

Web

The Web feature allows you to view Internet content especially designed for the mobile phone interface. For specific information on Web access through your phone, contact Bell Mobility.

Access and Options

Allows you to initiate a Wireless Web session.

1. Press .
2. Press   Web.

Overview

The Web allows the user to use a variety of Internet services. Using the Web on the phone allows you to:

- Send and receive Internet e-mail.
- Browse and search the World Wide Web via web pages especially designed for wireless phone customers.
- Set bookmarks to directly access your favorite sites.
- Retrieve information, such as stock quotes and flight schedules from the Internet.

Caller ID

Caller ID displays the number of the person calling when your phone rings. If the caller's identity is stored in Contacts, the name appears on the screen. Check with your service provider to ensure they offer this feature.

Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly and easily with a few keystrokes. Your phone recalls the number from your Contacts, displays it briefly and then dials it. Speed Dial number 1 is for Voicemail.

Dialing Single Digit Speed Dials (from 1 to 9)

Press and hold the Speed Dial number.


OR

Enter the Speed Dial number and press .

Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the last digit.

OR

Enter the first and second digits and press .

Quick Access to Convenient Features


Lock Mode

Sets your phone to require your 4-digit password in order to use the phone.

Note

By default, the lock code/password is the last 4 digits of your phone number. You can change this code/password in Security menu.


Mute Function

The Mute Function does not transmit your voice to the caller. To quickly activate **Mute** highlight the Mute and press .



Volume Quick Adjustment

Quickly adjust ringer and earpiece volumes by pressing the upper side key to increase and lower key to decrease.

Note



The earpiece volume can only be adjusted during a call and Keypad volume can only be adjusted through the  -> Settings -> Sounds -> Volume-> Earpiece.

Call Waiting

During a call, one beep indicates another incoming call. Check with your service provider for information about this function. Press  to receive the waiting call then press  again to switch between calls.



Note

If the phone is restricted, you can only dial phone numbers saved in the Emergency Numbers or your Contacts. To turn off this function:


 -> **Settings** -> **More...** -> **Restrict and Lock** -> **Enter Lock Code.** -> **Limit Calls** -> **Outgoing Calls**-> **Unlock** -> 

4. Press  to end the call.


Correcting Dialing Mistakes

If you make a mistake while dialing a number, press  once to erase the last digit entered or hold down  for at least 2 seconds to delete all digits.



Redialing Calls

1. Press  twice to redial the last number you called, received or missed. The last 50 numbers are stored in the call history list and you can also select one of these to redial.

Receiving Calls

1. When the phone rings or vibrates press  to answer a call. Just open the flip and answer the call when the flip is closed.

Note

If you press  or  the side keys while the phone is ringing, the ringing or vibration is muted for that call.

2. Press  to end the call.

Getting Started with Your Phone

Note

Like any other radio device, avoid any unnecessary contact with the antenna while your phone is on.

Turning the Phone Off

1. Press and hold **END** until the display turns off.

Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon: The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

Screen Icons

When the phone is powered on, the top line of the LCD screen displays icons indicating the status of the phone.

To see the icons, go to **OK-> Phone Support-> Phone Information-> Icon Glossary**.

Making Calls

1. Make sure the phone is turned on. If not, press **END** for about 3 seconds.
2. Enter the phone number (include the area code if needed).
3. Press **TALK**.
If the phone is locked, enter the lock code.


Note

By default, the lock code/password is the last 4 digits of your phone number. You can change this code/password in Security menu.

Charging the Battery

Warning! Use only the charger provided with the phone. Using any charger other than the one included with the LG385 may damage your phone or battery.

1. Attach the charger to the phone. Make sure that the triangle symbol faces up when inserting the plug into the charger port.
2. Plug the charger into a wall outlet.

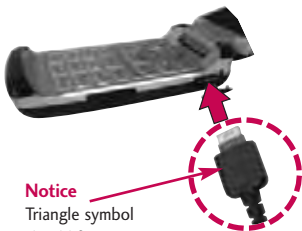

Notice
Triangle symbol should face up.

Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying a warning. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

Turning the Phone On and Off

Turning the Phone On

1. Install a charged battery or connect the phone to an external power source.
2. Press **END** for a few seconds until the LCD screen lights up.

Getting Started with Your Phone

The Battery


Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.


Installing the Battery

Press the button of the battery cover and align the battery.

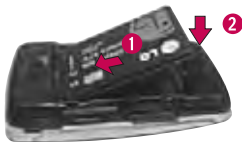

Removing the Battery

Press the button and lift the battery to get the battery out.

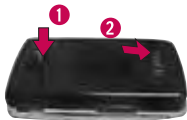

- 2. Auto-Space
- 3. Word Choice List
- 4. Word Prediction
- 5. Word Completion
- 6. Use My Words
- 7. My Words
- 8. Help
- 7. More...
 - 1. Accessibility
 - 1. TTY Mode
 - 2. Font Size
 - 3. Voice Guide
 - 2. Airplane Mode
 - 3. Call Setup
 - 1. Auto-Answer
 - 2. Abbreviated Dialing
 - 3. Call Answer
 - 4. Location
 - 5. Restrict and Lock
 - 1. Limit Calls
 - 2. Lock Pic/Video
 - 3. Lock Phone
 - 6. Roaming
 - 1. Set Mode
 - 2. Update PRL

- 7. Security
 - 1. Lock Phone
 - 2. Change Lock Code
 - 3. Special Numbers
 - 4. Edit Contacts List
 - 5. Erase/Reset
 - 8. Touch Key Vibrate

0. Tools

- 1. Downloaded Tools
- 2. Alarm Clock
- 3. Calendar
- 4. Calculator
- 5. Bluetooth
- 6. World Clock
- 7. Memory Card
- 8. Memo Pad
- 9. Voice Memo
- 0. Voice Control
- *. USB Mode

#. Phone Support

- 1. Account Info
- 2. Add New Services
- 3. Phone Information

- 1. My Phone Number
- 2. Icon Glossary
- 3. Version
- 4. Security
 - 1. Lock Phone
 - 2. Change Lock Code
 - 3. Special Numbers
 - 4. Edit Contacts List
 - 5. Erase/Reset
- 5. Live Assistance
- 6. Text Assistance

Menus Overview

2. Voicemail Details

3. Clear Icon

7. Settings

1. Notification

2. Message Reminder

3. Callback Number

4. Auto-Delete

5. Signature

6. Quick Messages

7. Edit Voicemail

8. Web Alerts



9. Contacts

1. Find/Add Entry

2. Speed Dial #'s

3. Groups

4. Backup

5. My Name Card

6. Services

7. Send All Contacts



*. Settings

1. Display

1. Main Screen

1. Screen Saver

2. Backlight

3. Time Format

4. Skins

5. Incoming Calls

2. Outer Screen

1. Screen Saver

2. Clock

3. Font Size

1. Message

2. Browser

3. Memo Pad

4. Keypad Light

5. Language

6. Phone Interface

2. Sounds

1. Volume

1. Ringer

2. Earpiece

3. Speakerphone

4. Power On/Off

5. Applications

2. Ringers

1. Voice Calls

2. Messages

3. Alerts

1. Minute Beep

2. Service Change

3. Call Connect

4. Signal Fade

4. Keytones

1. Tone Length

2. Tone Volume

3. Messages

1. Notification

2. Message Reminder

3. Callback Number

4. Auto-Delete

5. Signature

6. Quick Messages

7. Edit Voicemail

8. Web Alerts

4. Bluetooth

1. On/Off

2. Visibility

3. Device Name

4. Device Info

5. Exchange Folder

5. Side Key Guard

6. Text Entry

1. Auto-Capital

Menus Overview



1. Web



2. Ringers

1. Downloaded Ringtones
2. Ringer Type
3. Volume
4. Caller Ringtones



3. Entertainment

1. TV & Radio
2. Movies
3. Music
4. Games



4. Calls

1. Missed Calls
2. Incoming Calls
3. Outgoing Calls
4. Recent Calls
5. Settings
 1. Auto-Answer

2. Abbreviated Dialing

3. Call Answer

6. Delete History

1. Missed Calls
2. Incoming Calls
3. Outgoing Calls
4. Recent Calls
5. All Calls



5. Missed Alerts



6. My Downloads

Application Manager

Tools

Ringers

Screen Savers

Games

Memory Card

Memory Status



7. Camera


1. Photo Album
2. Camera
3. Camcorder
4. Pic/Video Message
5. Settings



8. Messaging

1. Send Message
2. Text Messages
 1. Inbox
 2. Sent
 3. Outbox
 4. Draft
 5. Edit Folder
 6. Send Message
3. IM & Email
4. Pic/Video Message
5. Web Alerts
6. Voicemail
 1. Call Voicemail

Menu Access

To use phone menus, press  using Navigation Key to highlight and select. Press the number key that corresponds to the submenu. This user guide gives navigation instructions according to the default "Grid" menu style. If the other style (List View) is set, navigating the phone's menus may be different.

Phone Overview

- 9. Music Key** Allows you to access the music application. While using the music application, pressing this button toggles the application to the foreground or the background. This key also turns the flash on/off while in camera or camcorder mode.
- 10. Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
- 11. Quick Navigation Pad** Use to access Main Menu Screen that displays the main menus vertically or horizontally (Grid View/ List View), Text Message, Music Player, Pictures, Tutorial, TV & Movies, Ringtones, Games and Web.
- 12. Navigation Key** Scrolls through the menu options.
- 13. Charger/Accessory Jack** Allows you to connect optional accessories, such as a USB cable and connects the phone to the phone charger. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
- 14. Right Soft Key** Use to access Contacts.
- 15. OK Key** Displays the phone's main menu from standby mode. It also selects the highlighted choice when navigating through a menu.
- 16. Camera Key** Allows you to access the Pictures menu with the press of a button in standby mode. Press and hold to automatically launch the camera. A single press to the exterior camera key (right side key) will launch the camera.
- 17. PWR/END Key** Ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the main menu, it returns the phone to standby mode and cancels your input.
- 18. BACK Key** Deletes characters from the display in text entry mode. When in a menu, press the key to return to the previous menu.
- 19. microSD™ Memory Card Slot** Allows you to insert a memory card made especially for wireless phones.
- 20. Digital Camera Lens** Allows you to take sharp, high-resolution digital pictures.
- 21. External Navigation Keys** Allows you to access the Music Store and music stored on your microSD card, as well as to navigate through your music while playing a song.

Phone Overview



- 1. Earpiece** Lets you hear the caller and automated prompts.
- 2. Flip** Open the case to answer an incoming call and close to end the call.
- 3. LCD Screen** Displays messages and indicator icons.
- 4. Left Soft Key** Use to access Options including Menu, Customize Carousel, Customize Home Screen and Tutorial.
- 5. Headset Jack** Allows you to plug in an optional headset for convenient, hands-free conversations. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
- 6. Speakerphone Key** Enables your phone's built-in speaker, allowing you to hear other callers.
- 7. Volume Control** Allows you to adjust the ringer volume in standby mode (with the flip open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options. To mute the ringer during an incoming call, press the volume key up or down.
- 8. SEND Key** Allows you to place or receive calls or answer Call Waiting.

Technical Details

Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC and IC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.6 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components should not be used. Avoid the use of

accessories that cannot maintain 0.6 inches (1.5 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

A minimum separation distance of 8 inches (20 cm) must be maintained between the user/ bystander and the vehicle-mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov.

Technical Details

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Industry Canada Compliance

This phone complies with Industry Canada RSS 133. This phone complies with the Class B limits for radio noise emissions as set out in the interference causing standard entitled "Digital Apparatus" (ICES-003) of Industry Canada.

FCC RF Exposure Information


WARNING! *Read this information before operating the phone.*

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are

2.3 Outbox

Up to 50 sent messages can be stored in the Outbox. View lists and contents of sent messages and verify whether the transmission was successful or not.

1. Press , , , .

2. Use  to highlight an Outbox message.

- Left Soft Key  Send.
- Right Soft Key  Options.

Edit

Compose New

Lock/Unlock Locks a message so that it is not erased if the Erase Outbox or Erase All feature is used.

Delete Deletes the selected message from the Outbox.

Delete all

3. Press .


Options from here:


Call(Go to List)/ Edit/
Locked(Unlock)/ Save Quick
Msg/ Compose new/ Delete/
Delete All

2.4 Draft

Displays draft messages.

1. Press , , , .

2. Use  to highlight a message.

- Left Soft Key  Edit.
- Right Soft Key  Options.
Send/ Compose New/
Delete/ Delete All

2.5 Edit Folder

Allows you to create or delete folders for your messages.

Safety

wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no

for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, “Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques,” sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of

energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a

Safety

7. How can I find out how much radio frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radio frequency energy (RF) exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and

Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF). The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information

documents on EMF issues. The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of

animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

person's RF exposure decreases rapidly with increasing distance from the source. The so called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested

that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or

Safety

participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure.

The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus

not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user’s head. These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a

wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health

FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the Main Menu Screen. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects

causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if

damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use your phone and/or headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your phone, see the features guide for your phone.

Using your phone safely

Use of your phone while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using your phone if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

Using headsets safely

Use of headsets to listen to music while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using this device if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

Safety

- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
 - Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
 - Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
 - Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
 - Do not use the phone in areas where its use is prohibited.
- (For example: aircraft).
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
 - Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not press the antenna unnecessarily.

Warning! Important safety information

Avoiding hearing damage

Permanent hearing loss may occur if you use your phone and/or headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be

phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.

- Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Never place your phone in a microwave oven as it will cause the battery to explode.

General Warnings and Cautions

- Only use the batteries, antennas, and chargers provided by LG. The warranty

will not be applied to products provided by other suppliers.

- Store the battery in a place out of reach of children.
- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Do not hold or let the antenna come in contact with your body during a call.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.

Safety

- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.
- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
- Do not disassemble the phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the

battery to explode.

- The battery does not need to be fully discharged before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.

- Use of extended backlighting, MiniBrowser, and data connectivity kits affect battery life and talk/standby times.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user's guide in an accessible place at all the times after reading it.

Explosion, Shock, and Fire Hazards

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal's teeth, nails, come into contact with the battery. There is a risk of this causing a fire.

Safety

below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. **DO NOT** place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- Do not dispose of your battery by fire or with hazardous or flammable materials.
- Never use an unapproved battery since this could damage the phone and/or battery and could cause the

or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC and Transport Canada regulations prohibit using your phone while in the air. Switch

OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations);

Safety

recommends that a minimum separation of six inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with Pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives.) Optional for each phone manufacturer.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals

modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Do not press the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and

always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association

Safety

TIA (Telecommunications Industry Association) Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

- ANSI C95.1 (1992) *
- NCRP Report 86 (1986)
- ICNIRP (1996)
- Health Canada, Safety Code 6, 1999.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines, IC Regulations (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas,

1. Press , , .

3. Phone Information

The Phone Information Menu provides you with specific information pertaining to your phone model.

3.1 My Phone Number

Allows you to view your phone number.

1. Press , , , .

3.2 Icon Glossary

Allows you to view the icons and their meanings.

1. Press , , , .

3.3 Version

Allows you to view the versions of S/W, H/W, PRL, Browser and MCL.

1. Press , , , .

4. Security

See “Security” on page 65.

1. Press , , .

5. Live Assistance

Connects you to the Customer Service Center.

1. Press , , .

6. Text Assistance

Sends a text message for assistance.





1. Press , , .

Phone Support

phone will then connect to your computer.



4. To exit and disable the Mass Storage, disconnect the USB cable from your phone.

#.2 Phone As Modem

1. Attach the USB cable to your phone and your computer.
2. Press , , , .

Phone Support

Access and Options

1. Press .
2. Press  Phone Support.
3. Select a sub-menu.
 1. Account Info
 2. Add New Services
 3. Phone Information
 4. Security
 5. Live Assistance
 6. Text Assistance

1. Account Info

Displays the account information of your phone.




1. Press , , .

2. Add New Services

Allows you to add new services on your phone.

0. Voice Control

The Voice Control is a convenient feature that allows you to make phone calls quickly and easily by saying a voice command that you have recorded in your Contacts.





1. Press , , .
2. After hearing the message “Call: please say a command,” simply say, in a natural voice, “Call” and the name of the person or the number you’d like to call. (For example, you can say, “Call Jane Smith,” “Call John Baker mobile.”)
3. Your request will be repeated and you will be asked to verify. Say “Yes” to call the number or person. (The number will automatically be dialed.) Say “No” if you wish to cancel.

*. USB Mode






#.1 Mass Storage


This menu is accessible when your phone is connected to your PC with a data cable and a microSD™ card is inserted into your phone. Enabling the Mass Storage allows you to connect your phone to your computer to view and transfer music files.

To enable the Mass Storage Mode:

1. Make sure that you attach the USB cable to your phone and your computer a microSD™ card is inserted into your phone.
2. Press , , , .
3. Select **Yes** to verify that calls will be disabled when the Mass Storage is enabled. Your






Tools

1. Press , , .
2. Press  on <Add New> to write a new note then press  to save.

In entering a note, use text input mode with Right Soft Key  **Mode**. Also, note that word choices/ suggestions are listed and adding an word to database is asked while entering characters.


9. Voice Memo

Allows you to add, listen to, and erase short verbal reminders. In the entry of Voice Memo, the recorded Voice Memos are listed. You can select <Record New>, <Delete All>, <Memory Info>.

1. Press , , .
2. Select  <Record New>.
3. Talk into the microphone after the tone, then press .

Stop. The default memo title is the date and time of recording.

To Playback a Voice Memo

1. Access Voice Memo, highlight the Voice Memo you want to hear, then press .

In the selected Voice Memo, the following options are available:

Play Play the selected Voice Memo.
Speaker On/ Pause/ Stop

Set As Caller ID/ No Caller ID/ Voicemail/ Message/ Pic/Video Message/ Contacts






View Details Title/ Recorded On/ Play Time

Edit Title Edit the title of the selected Voice Memo. Save/ Edit Mode: [Abc]/ Cancel

Delete Yes/ No






you may not access files in your PC from your handset.

For the setting of this menu, go to **Settings** -> **Bluetooth** -> **Exchange Folder**.

1. Press , , .
2. Scroll to <Settings> and press .
3. Press  **Exchange Folder**.
4. Select one of the following options:
 - **Memory Card** (Memory Card) : Upload any type of file.
 - **Pictures** (In Phone / Memory Card): Allows you to upload picture and video files.
 - **Music** (Memory Card only): Allows you to upload music files.

6. World Clock

Allows you to determine the current time in another time zone or country.

1. Press , , .
2. Press Right Soft Key  **Cities** to move the time bar across the world map and display the date/time in that location.
3. Press Left Soft Key  **Set DST** to display Daylight Savings Time in the selected location.

7. Memory Card


 





See “Memory Card” on page 33.

1. Press , , .

8. Memo Pad

Allows you to add, read, edit, and erase notes to yourself.

Tools

1. Press , , .
2. Scroll to <Settings> and press .
3. Press  **Visibility**.
4. Use  to select a setting, then press .



Hidden/ Visible for 3 min/
Always Visible

3. Device Name

The My Bluetooth Name section of the Bluetooth Settings menu allows you to select a *Bluetooth* name for your phone. Your phone's *Bluetooth* name will appear to other in-range Bluetooth devices, depending on your visibility settings.






1. Press , , .
2. Scroll to <Settings> and press .

3. Press  **Device Name**.





4. Press  to clear the current name.
5. Use your keypad to enter a new name and press  to save and exit.

4. Device Info

Allows you to display the Name, Class, Profiles and Address of your Bluetooth device.

1. Press , , .
2. Scroll to <Settings> and press .
3. Press  **Device Info**.
5. **Exchange Folder**

When your phone has a FTP connection, you can upload, download or delete files in the handset from your PC. However,








- The device will appear in the Found Devices menu once it has been located. Highlight the device and press .
- Select **Add to Trusted**.
- The handset will prompt you for the passkey. Consult the Bluetooth accessory instructions for the appropriate passkey (typically “0000”). Enter the passkey and touch .
- Once pairing is successful, select  **Yes** to connect with the device.
- Once connected, you will see the device listed in the Found Devices menu and the Bluetooth icon  will show at the top of the LCD screen.

<Settings>

You can control the settings to use the Bluetooth wireless technology via your phone. Your proper setting is a prerequisite for the maximization of the functionality.

1. On/Off

Allows you to set the *Bluetooth* power On/Off.

- Press , , .
- Scroll to <Settings> and press .
- Press  **On/Off**.
- Use  to select a setting, then press .

2. Visibility

Allows you to manage your phone’s availability to other *Bluetooth* devices.

Tools

free profile(s). You may create and store 20 pairings within the LG385 and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).





Bluetooth QD ID B012894

Notes








- Read user guide of each Bluetooth accessory that you are trying to pair with your phone because the instructions may be different.
- The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.
- Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology.

<Add New>

Pairing is the process that allows the handset to locate, establish and register 1-to-1 connection with the target device.

1. Press , , .
2. Scroll to <Add New> and press .

For pairing new Bluetooth® device

1. Press , , .
2. If Bluetooth device is set to off, you will be prompted to turn power on. Select   **Yes**.
3. Scroll to <Add New> and press .
4. Follow the Bluetooth accessory instructions to set the device to pairing mode.
5. Scroll to **Search** and press .









Note

Calendar will not alert you during a call or during SMS transmission. It will sound the reminder after you exit a call.



4. Calculator

4.1 Calculator

Allows you to perform simple mathematical calculations. You can enter numbers up to the sixth decimal place.







1. Press , , , .
2. Enter data.
 - Use  to enter plus, minus, slash and multiple calculations.
 - Press  to enter period and  to enter plus or minus.
 - Press  to delete digits

or symbols.

- Press Left Soft Key  **Clear** to Clear the calculation.
- Press Right Soft Key  to exit this menu.

4.2 Ez Tip Calculator

Allows you to quickly and easily calculate the amounts for a bill with the amount of the bill, the amount of the tip, and the number of people as variables.

1. Press , , , .
2. Press Left Soft Key  **Reset** if necessary.
3. Press Right Soft Key  **Close** to exit this menu.

5. Bluetooth


The LG385 is compatible with devices that support the Bluetooth® headset and hands-





Tools

3. Calendar

Allows you to conveniently keep and access your agenda(s). Simply store your appointments and your phone will alert you with a reminder of your appointment.

1. Press , , .


2. Use  to highlight the scheduled day.

-  Moves cursor to the left.
-  Moves cursor to the right.
-  Moves to the previous week.
-  Moves to the next week.

3. Press Left Soft Key  **Add**.

4. Enter your schedule information including:

- **Date**
- **Time** Press  to set

specific time or press Right Soft Key  **All day**.









- **Content**
- **Recurring event**
None/ Daily/ Mon-Fri/ Weekly/ Monthly/ Yearly
- **When to ring the alarm reminder**
None / On time/ 5 minutes/ 10 minutes/ 1 hour/ 1 day/ 2 days
- **Which ring alarm to sound (Alert 1~Alert 5, Tone 1~Tone 10)**



5. Press Left Soft Key  **Save**.

When you exit without saving, you are asked to select Return to Edit/ Save and Exit/ Exit in a pop up message.

2. Alarm Clock






Allows you to set one of four alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time, Alarm 1 (or 2, 3 or Quick Alarm) will be displayed on the LCD screen and the alarm will sound.

1. Press , , .
2. Select the alarm you want to edit.
Alarm 1/ Alarm 2/ Alarm 3/
Quick Alarm/ Delete All
3. Use  to highlight the alarm time then press .
4. Set the time for alarm and press .
5. Use  to highlight **Once** (recurring setting) and press .

6. Press  to select one of the following and press .

Once / Daily / Mon - Fri / Weekends

For **Quick Alarm** option,
set **Off/ 1 min later/ 10 min later/ 30 min later/ 1 hour later**

7. Use  to highlight a tone or an alert and press .
8. Use  to select one of the available alarm ring types and press .
9. Press Left Soft Key  **Save**.

Note



To delete all of the alarms you set, select **Delete All**.

Tools

Tools




Allows you to make use of various tools and applications to your phone.

Access and Options


1. Press .
2. Press  **Tools**.
3. Select a sub-menu.
 1. Downloaded Tools
 2. Alarm Clock
 3. Calendar
 4. Calculator
 5. Bluetooth
 6. World Clock
 7. Memory Card
 8. Memo Pad
 9. Voice Memo
 0. Voice Control
 - *. USB Mode

1. Downloaded Tools

Use to go to Get More on the Web or to run Backup Manager, which is an easy and secure way to back up your contacts when your phone is lost or stolen. Read the more detailed on-screen guideline.

1. Press , , .
2. Highlight **Get More** and press  (The browser will launch and take you to the Ringers download menu).

OR

Highlight **Backup Manager** and press  to get information on how to back up your contacts for possible theft or data loss of your phone.

5. Read the disclaimer and press



6. If you are certain that you would like to restore all the factory settings, select **Yes**.

7.7.5.4 Reset Phone

Resetting the phone resets all settings and erases all data on your phone.

1. Press , , , .

2. Enter the four-digit lock code.

3. Press **Erase/Reset**.

4. Press **Reset Phone**.
(A disclaimer appears.)

5. Read the disclaimer and press



6. If you are certain that you would like to erase all the data and reset your settings, select **Yes**.

7.8 Touch Key Vibrate






Allows you to set the sensitivity level of touch keys.

1. Press , , , .

2. Select **Off**, **Vibrate 1** or **Vibrate 2** and press .

Settings







7.7.4 Edit Contacts List

1. Press , , , .
2. Enter the four-digit lock code.
3. Press  **Edit Contacts List**.

7.7.5 Erase/Reset

7.7.5.1 Erase Phonebook

Allows you to erase all entries in your Contacts at once.


1. Press , , , .
2. Enter the four-digit lock code.
3. Press  **Erase/Reset**.
4. Press  **Erase Phonebook**.
5. In a pop up message, select **Yes/No**.


7.7.5.2 Reset Pic/Video Message

1. Press , , , .

2. Enter the four-digit lock code.

3. Press  **Erase/Reset**.







4. Press  **Reset Pic/Video Message**. (A disclaimer appears.)








5. Read the disclaimer and press .

6. Select **Yes** or **No**.

7.7.5.3 Reset All Settings

Resetting the current default settings restores all the factory defaults, including the ringer types and display settings. The Contacts, Call History, Scheduler, and Messaging are not affected.

1. Press , , , .
2. Enter the four-digit lock code.
3. Press  **Erase/Reset**.
4. Press  **Reset All Settings**. (A disclaimer appears.)

1. Press , , , , .
2. Use  to select **Automatic/1X Only/ EV-DO Only/ Home Only** then press .

7.6.2 Update PRL

1. Press , , , , .

7.7 Security






The Security Menu allows you to secure the phone electronically.

7.7.1 Lock Phone

See “Lock Phone” on page 64.







7.7.2 Change Lock Code

Allows you to change your lock code. To enter this menu, you are asked to enter a new lock code and once again to confirm it.

1. Press , , , .
2. Enter the four-digit lock code.
3. Press  **Change Lock Code**.
4. Enter a new lock code.
5. Enter the new lock code once more to confirm it.







7.7.3 Special Numbers

Allows you to set special phone numbers when you can call in emergency or any required situation.

1. Press , , , .
2. Enter the four-digit lock code.
3. Press  **Special Numbers**.
4. Select a location for your entry.
5. Enter a phone number then press .

Settings

7.5.2 Lock Pic/Video

1. Press , , , .
2. Enter the four-digit lock code.
3. Press  **Lock Pic/Video**.
4. Select **Unlock** or **Lock** and press .


7.5.3 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls.

You can modify the lock code using the New Lock code within the Security menu.

1. Press , , , .
2. Enter the four-digit lock code.

3. Press  **Lock Phone**.

4. Use  to select an option, then press .

Unlock The phone is never locked (Lock mode can be used).

Lock Now The phone is always locked. When locked, you can receive incoming calls and make only emergency calls.

On Power Up The phone is locked when it is turned on.

7.6 Roaming

7.6.1 Set Mode

Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

7.4 Location

Menu for GPS (Global Positioning System: Satellite assisted location information system) mode.

1. Press , , , .

The Location disclaimer is displayed.

2. Read the disclaimer and press



3. Select **On** or **Off** and press



Note

GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors etc.

7.5 Restrict and Lock

7.5.1 Limit Calls

Allows you to restrict outgoing calls. If you set this feature to On, you can only place calls to emergency numbers and phone numbers stored in your Contacts. You can still receive calls in restrict mode.



1. Press , , , .

2. Enter the four-digit lock code.

The default lock code is commonly the last 4 digits of your phone number.

3. Press  **Limit Calls**.

4. Select **Incoming Calls** or **Outgoing Calls** and press .

5. Use  to select a setting, then press .









Contacts Only/ Special #'s Only/ Unlock

Settings

7.3 Call Setup








7.3.1 Auto-Answer

This feature is only intended for use with hands free devices or headsets, but is an independent feature of the phone and must be manually turned on/off when connected or disconnected from the device.

1. Press , , , ,  .
 2. Use  to select a setting, then press .
- **Off**
 - **Headset** When your phone is connected to a Headset, the phone automatically responds a call.









7.3.2 Abbreviated Dialing

Your dialing match options allow you to enable or disable Abbreviated Dialing.

1. Press , , , ,  .
2. Select **On** and enter a five- or six-digit number (for example, area code and prefix) and press .

7.3.3 Call Answer

Allows you to determine how to handle an answered call.

1. Press , , , ,  .
2. Use  to select a setting, then press .

**Flip Open / Any Key/
TALK Only**

2. Press .

3. Select **On** or **Off** and press




7.1.2 Font Size

This setting allows you to adjust the display appearance when entering text (for example, when using the notepad or when adding a Contacts entry).

1. Press , , , , .

2. Select **Message**, **Browser**, or **Memo Pad**.

3. Select a size and press .

7.1.3 Voice Guide

Allows you to set up voice guide provided when you access detailed menus of each main menu or numbers on the keypad.

1. Press , , , , .

2. Select **On** or **Off** and press



7.2 Airplane Mode

The Airplane Mode allows you to use many of your phone's features, such as Games, Notepad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

1. Press , , , .

2. Press .

3. Select **On** or **Off** and press



Settings

6.2 Auto-Space (On/ Off)

Allows you to automatically insert space between letters, words or sentences.

6.3 Word Choice List (On/ Off)

Allows you to view the list of recommended word choices in writing a message.

6.4 Word Prediction (On/ Off)

Allows you to set your phone to predicting words when you enter a word in writing a message.

6.5 Word Completion (On/ Off)

Allows you to set your phone to enable word completion in advance in writing a message.

6.6 Use My Words (On/ Off)

Allows you to use your preset words in entering a message text.

6.7 My Words

Allows you to add your new words in the word database.

6.8 Help


Shows you the usefulness of modifying Word Options for your convenience.




7. More...

7.1 Accessibility

7.1.1 TTY Mode

Allows you to attach a TTY (Teletype Writer) device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Press , , , ,  .

1. Press , , **2** ABC, **3** DEF.
2. Select **Minute Beep/ Service Change/ Call Connect/ Signal Fade**.
3. Select **On** or **Off** and press .

2.4 Keytones

Allows you to select the Key Tone type.

1. Press , , **2** ABC, **4** GHI.
2. Select **Tone Length** or **Tone Volume** and press .

3. Messages

See “Settings” on page 48.





1. Press , , **3** DEF.

4. Bluetooth

See “Settings” on page 71.





1. Press , , **4** GHI.

5. Side Key Guard

1. Press , , **5** JKL.
(An information window is displayed.)
2. Read the information and press .
3. Select **On** or **Off** and press .

6. Text Entry

Allows you to configure 8 settings for editing messages.

1. Press , , **6** MNO.
2. Use  to highlight one of the settings and press  to select it.

6.1 Auto-Capital (On/ Off)







Allows you to automatically capitalize letters when necessary.

Settings

2.2 Ringers



 

 

2.2.1 Voice Calls

Allows you to assign ringers for incoming calls.

1. Press , , , , .
2. Select **Caller ID or No Caller ID**. (The list of preprogrammed ringers is displayed.)
3. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign the desired ringer.

2.2.2 Messages

Allows you to assign ringers for messages.

1. Press , , , , .
2. Select **VoiceMail Alerts, Text Message or Pic/Video Msg Alerts**. (The list of preprogrammed ringers is displayed.)
3. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign the desired ringer.






2.3 Alerts

Allows you to select the alert type just in cases of Minute Beep, Service Change, Call Connect, Signal Fade.

- Select a font size.
Small/ Medium/ Large



 



1.4 Keypad Light

The keypad light setting lets you select how long the keypad is backlit after any keypress is made.

- Press , , , .
- Choose a setting, then press .
 - Always Off/ 8 seconds/ 15 seconds/ 30 seconds

1.5 Language

Allows you to set the bilingual feature according to your preference. Choose between English and French.

- Press , , , .
- Use  to select **English** or **French**, then press .

1.6 Phone Interface

Allows you to select the phone interface out of Bell or LG and apply it.







- Press , , , .
- Select **Bell** or **LG**.

2. Sounds


Provides options to customize the phone's sounds.

2.1 Volume

Allows you to set various volume settings.

- Press , , , .
- Select **Ringer/ Earpiece/ Speakerphone/ Power On/Off/ Applications**.
- Use  to adjust the volume of the ringer, then press .








Settings

4. Among the choices, select your favorite and press .

1.2 Outer Screen








1.2.1 Screen Saver

Allows you to choose the kind of screen savers to be displayed on your phone while not in use.

1. Press , , , , .
2. Select **Preloaded/ Photo Album/ Assigned Media/ Downloads/ Get New/ Take New Picture**.
3. Use the navigation key to select an image and press  to view the image. (Once an image is displayed, you can use your navigation key to scroll through and view the other default images.)
4. Press  to assign the desired image.





1.2.2 Clock

Allows you to choose the kind of clock to be displayed on the LCD screen.

1. Press , , , , .
2. Select **Normal Clock, Analog Clock, Digital Clock, or Dual Clock** and press .
3. Press  to apply the clock display setting.







1.3 Font Size

Allows you to set the size of the font for Message, Browser and Memo Pad.

1. Press , , , .
2. Select the menu to set the font size.
Message/ Browser/ Memo Pad






1.1.2 Backlight

The backlight setting lets you select how long the display screen is backlit after any keypress is made.

1. Press , , , , .
2. Choose a setting, then press .
 - Dim Only/ 8 seconds/ 15 seconds/ Flip Open

1.1.3 Time Format

Allows you to customize time format.







1. Press , , , , .
2. Select AM/PM or 24Hr.

Note

24Hr time format is only displayed on LG interface mode. You can access to LG interface by pressing OK@, *, 1, , 6 and selecting LG.






1.1.4 Skins

You can customize your phone's display theme.

1. Press , , , , .
2. Choose a setting, then press .
 - Black/ Bubble Gum/ Glacial/ Tropical

1.1.5 Incoming Calls

Allows you to set a specific screen for incoming calls.



1. Press , , , , .
2. Select Caller ID/ No Caller ID.
3. For each selection, choose a setting.
 - Preloaded/ Photo Album/ Assigned Media/ Downloads/ Get New/ Take New Picture

Settings

Settings

The Settings Menu has options to customize your phone.

Access and Options

1. Press .
2. Press  **Settings**.
3. Select a sub-menu.
 1. Display
 2. Sounds
 3. Messages
 4. Bluetooth
 5. Side Key Guard
 6. Text Entry
 7. More...








1. Display

Provides you with options to customize the phone's display screen.

1.1 Main Screen





1.1.1 Screen Saver

Allows you to choose the kind of screen savers to be displayed on your phone while not in use.

1. Press , , , , .
2. Select **Preloaded/ Photo Album/ Assigned Media/ Downloads/ Get New/ Take New Picture**.
3. Use the navigation key to select an image and press  to view the image. (Once an image is displayed, you can use your navigation key to scroll through and view the other default images.)
4. Press  to assign the desired image.

7. Send All Contacts

This allows you to send all contacts information in your phone to other party via Bluetooth.

1. Press , , .
2. If Bluetooth is not set to on, select **Yes** to the pop-up question.
3. Highlight a device to send the contacts information to and press  to send.





Contacts

3. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a part of group except No Group.

1. Press , , .

2. Options from here:

- Use  to highlight a group to view, then press .
- Select **<Add Group>** to add a new group to the list.
- Use  to highlight a group, then press  to change the name of the group or delete the group.
<Add Members>/ <Edit Group>/ <Delete Group>

4. Backup

1. Press , , .

2. Select **Backup Manager/ Learn More.**

5. My Name Card

You can view your phone number, edit entry and send a Contact via Bluetooth.


1. Press , , .

6. Services






Your Contacts list is preprogrammed with contact numbers for various PCS Services.


1. Press , , .

2. Select **Customer Service/ Dir Assistance.**

7. Press Left Soft Key  Done.









To Find Contacts Entries by Name:

1. Press , , .
2. Scroll through all the entries using your navigation key.
Or enter the full letter of a name.
3. To display an entry, highlight it and press .
4. To dial the entry's default phone number, press .

Or to display additional Contacts entries, press .

2. Speed Dial #'s

Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.

1. Press , , .
 2. Use  to highlight the Speed Dial position (or enter the Speed Dial digit), then press .
 3. Highlight Set Speed Dial and press .
 4. Use  to highlight the entry, then press .
A confirmation message is displayed.
- Options to choose one:
Set Speed Dial/ Next Empty/
Delete Speed Dial/ Delete all

Note

Speed Dial #1 is predetermined for Voicemail.



Contacts



Contacts








The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory. When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 500).

Access and Options

1. Press .
2. Press  **Contacts**.
3. Select a sub-menu.
 1. Find/Add Entry
 2. Speed Dial #'s
 3. Groups
 4. Backup
 5. My Name Card
 6. Services
 7. Send All Contacts





1. Find/Add Entry

Your phone can store up to 500 Contacts entries. Contacts entries can store up to a total of five phone numbers, and each entry's name can contain 32 characters.

1. Press , , .
2. Scroll to <New Entry> and press .
3. Enter a name for the new entry and press .
4. Scroll to [Add Number], enter the phone number, and then press .
5. Select a label field (Mobile, Home, Office, Pager, Fax, or None) and press .
6. Scroll down to additional fields and enter or edit information as desired.

7.6 Quick Messages


 



Your phone is loaded with 20 quick messages to help make sending text messages faster and easier. Also you can add your own quick messages up to 20.

1. Press , , , . The list of quick messages is displayed.

Note

The 20 quick messages are preloaded. You cannot edit nor delete them. You can add your own quick messages up to 20, which are able to be edited and deleted.


 




To add a new preset message:

1. Press , , , .
2. To add a new preset message, select <Add New>.
3. Enter your message and press . Your new message will be

added to the beginning of the list.

7.7 Edit Voicemail






You can edit your voicemail # and there are following options as well.

1. Press , , , .
2. Use  to select a setting, then press .

Save/ Hard Pause/ 2-sec
Pause/ Cancel

7.8 Web Alerts






Automatically connects you to WebAlerts when available.

1. Press , , , .
2. Select On or Off and press .

Messaging




 


7.2 Message Reminder

When new messages arrive, you can choose to have your phone notify you by playing an audible alert.

1. Press , , , .
2. Select **On** or **Off** and press .






7.3 Callback Number

You can set a callback number in your messages so that the recipient of the message can contact you.

1. Press , , , .
2. Select **None, My Phone Number**, or **Other** and press .
(If you select **Other**, enter a number and press .)







7.4 Auto-Delete

You can delete text messages that you have already read whenever you like, or you can have your phone delete them automatically for you.

1. Press , , , .
2. Select **On** or **Off** and press .

7.5 Signature


Each message you send can have a customized signature to reflect your personality.

1. Press , , , .
2. Select **Custom** and press .
(If you do not wish to attach a signature to your outgoing messages, select **None**.)
3. Enter your signature and press .





6. Voicemail

Allows you to view new voice messages recorded in the voicemail box. Your phone will alert you when you receive a new voice message.


 
Shortcut

1  is a quick access to Voicemail.

Checking Your Voicemail Box

1. Press , **8** , **6** .
2. Options from here:
 - Press **1**  **Call Voice Mail** to listen to the message(s) and the possible choices are as follow while checking your voicemails.

Mute/ Speaker On/ 3-Way Call/ Contacts/ Recent Calls/ Send Message/ Record Voice Memo/ Memo pad







- Press **2**  to view the voicemail details.
- Press **3**  to clear icon. This option is available when there are one or more voicemail(s).

7. Settings

Allows you to configure 9 settings for messages.

7.1 Notification

When you receive a text message, your phone notifies you by displaying an icon on your display screen. You can also choose to be notified with a larger pop-up message on your display screen.


1. Press , **8** , **7** , **1** .
2. Use  to select a setting, then press .

Message & Icon/ Icon Only

Messaging

1. Press , , , .

Creating a Folder

Enter a Folder Name, Sort By fields and alert tones that you want and press Left Soft Key  Save.

Deleting a Folder

Select  Delete Folder and choose a folder to delete. There should be saved folders if you want to delete one.

2.6 Send Message

Allows you to create and send your messages.

1. Press , , , .

Note

For more detailed information, see page 42.

3. IM & Email

Allows you to log on in your email accounts on the Web. You are asked to choose yours out of several domains, enter your email address and password, and agree to the terms of use.

1. Press , , .

4. Pic/Video Message

Allows you to store the received picture messages in a separate folder.

1. Press , , .

5. Web Alerts

Allows you to store the received web messages in a separate folder.

1. Press , , .

evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical

instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by spills of food or liquids.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) If the carrier's or manufacturer's Customer Service Centre was not notified by the end user of the alleged defect or malfunction of the product, during the warranty period.
- (5) Products which have had their serial numbers removed or made illegible.
- (6) Damage resulting from use of non-LG approved accessories.
- (7) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (8) Products serviced by non-authorized persons or companies.

Notes:

- (1) This limited warranty is in lieu of all other warranties, express or

Warranty Information

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for ONE (1) year beginning on the date of purchase of the product by the original end user.
- (2) The limited warranty extends only to the original end user of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original end user of the product during the warranty period as long as it is in Canada.
- (4) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (5) During the applicable warranty period, LG will repair or replace at LG's sole option, without charge to the original end user, any defective component part of the phone or accessory.
- (6) LG may, use rebuilt, reconditioned, or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned or new product.

Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.



Chargers



Battery



Holster



microSD™
Memory Card



Stereo Headset

Safety

account for any variations in measurements.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. The highest SAR value for this model phone when tested for use at the ear is 0.791 W/kg and when worn on the body, as described in this user's manual, is 1.08 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID

number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to

Safety

positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and

worn on the body) as required by the FCC for each model. This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party beltclips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Consumer Information on SAR

(Specific Absorption Rate)
This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Counsel on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and

engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy. The exposure Limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating

Safety

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

World Health Organization
(WHO) International EMF Project
(<http://www.who.int/emf>)

National Radiological Protection
Board (UK)
(<http://www.nrpb.org.uk/>)

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cdrh/phones/index.html>)

Federal Communications
Commission (FCC) RF Safety
Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on
Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)

Warranty Information

implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of merchantability or fitness for a particular purpose.

- (2) Shipping damage is the sole responsibility of the shipping company.

3. EXCLUSION OF LIABILITY:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS CANADA, INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES,

DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF Merchantability APPLICABLE TO THIS PRODUCT.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following telephone number from anywhere in Canada:

LG Electronics Canada, Inc.

Tel. 1-888-542-2623