
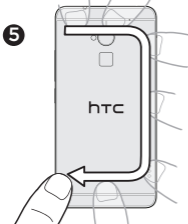
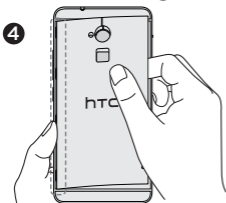
 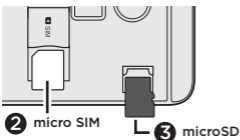


Your HTC One® max

Inserting your micro SIM and microSD cards


IMPORTANT: USE A STANDARD MICRO SIM ONLY.

Inserting a smaller size SIM (such as nano SIM with an adapter or a modified SIM) may damage the card slot or cause the card to not fit properly.



1. Slide the back cover lock, and then lift the back cover from the side.
2. With your micro SIM card's gold contacts facing down and cut-off corner facing in, insert the micro SIM into the micro SIM slot and push it in until it clicks into place.
3. With your microSD™ card's gold contacts facing down, insert the microSD card into the storage card slot and push it all the way in.
4. Align the back cover to the left side of the card slot compartment, and then insert the tabs into the slots on the left.
5. Close the back cover and press starting from the top to the bottom. Make sure that there are no gaps on any side.


(Turn to the next page.)

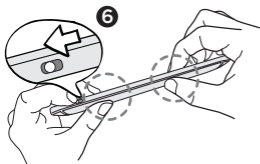

6. Press again on the right side to secure the cover into place, and then slide the lock all the way to the closed position.

Turning on your phone for the first time

NOTE: Before you turn on and start using your phone, it is recommended that you charge the battery. Use only the adapter and the USB cable that came with your phone to charge the battery.

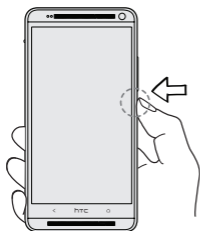

Press the POWER button on the right side until the display turns on.

When you turn on your phone for the first time, you'll be asked to set it up.

Want some guidance on using your phone?

Go to www.htc.com/support/ to find tutorials, the user guide, FAQs, latest news, and more.

© 2013 HTC Corporation. All rights reserved.

HTC, the HTC logo, and HTC One are trademarks of HTC Corporation. microSD is a trademark of SD-3C, LLC. All other company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners.

htc.com



91H0xxxx-xxM Rev.A