

Motorola V600

Getting Started and Accessories Guide



KNOW YOUR MOTOROLA V600


Turn on/off phone:

- Press and hold 

Answering a call:

- Open phone or press 

Making a call:

- Dial a number and press 

End a call:

- Close phone or press 



QUICK TIPS

- To return to the 'idle display' press 'End' Key

GETTING ACCESSORIZED²



Wireless Car Kit with Bluetooth® Technology




Wireless Headset HS810 with Bluetooth® Technology




Wireless PC USB Adapter with Bluetooth® Technology

TAKE A PICTURE

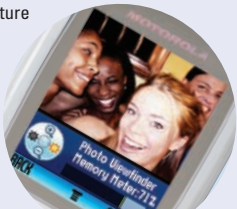


- Open phone and press **CAMERA**
- Point camera lens at the photo subject
- Press  to zoom and adjust brightness (optional)
- Press **CAPTURE** to take picture
- Press **STORE**  to save the photo or apply as any of the following: wallpaper, screensaver, phonebook entry, or send in a message




CONNECT WITH BLUETOOTH

- Press **MENU > Settings > Connection > Bluetooth Link**
- Press **SELECT**
- Using 5 way navigation,  scroll to setup
- Press **SELECT**
- Scroll to Power to make sure it is on
- Select **BACK**
- Scroll to handsfree and press **SELECT**
- Scroll to "Look For Devices" and press **SELECT**
- Device to be linked must be in pair mode, Consult device instructions


PLAYBACK A VIDEO CLIP

- To locate the Video Menu press **MENU > Multimedia > Videos**
- Press  and scroll to the video desired
- Press **PLAY**  to select the video and begin playback
- Press  up or down to pause or play the video clip

STORE A PHONE NUMBER

- Enter a number as if making a call and select **STORE** 
- Change name and number
- Press **DONE**


PERSONALIZE YOUR FEATURES

- From the idle display press  in any direction and the following four menu features will appear:



- These menu icons remain hidden on the idle display but can be programmed to appear at all times.
- Menu icons appearing on the idle screen can be changed to suit your needs and feature preferences. Press **Menu > Settings > Personalize > Home Screen > Home Keys**
- Press **EDIT/ADD** to make your choice.

CHANGE YOUR RING TONE AND RING LIGHTS

- Press **Menu > Ring Styles**
- Select **Loud Detail**
- Select **EDIT/ADD** using right soft key  to change volume, ring details etc.




To change Ring Lights

- Press **Menu > Ring Styles**
- **SELECT** Ring Lights
- Scroll to preferred ring lights
- Press **SELECT**

SEND A MESSAGE AND PICTURE USING MMS¹

- Press **MENU > Messages > Create Message > New Multimedia Message**
- Use the keypad keys to enter text
- When ready to insert a picture press the **MENU** key
- **SELECT** Add Media
- **SELECT** Picture
- Scroll to the desired file and press **SELECT** to insert picture. Press **OK**
- Scroll to select recipient
- Press **ADD > DONE > SEND**

SETTING UP PICTURE CALLER ID¹

- This option is not available for entries stored on the SIM Card. The desired picture must be previously stored in the phone.
- Create or Edit a phonebook entry
- Press  > **Phonebook**
- Scroll  to highlight phonebook entry
- Select **VIEW > EDIT**
- Scroll to Picture and press **EDIT/ADD**
- Press  to choose picture
- Use the right soft key to **SELECT** the picture
- Press **DONE**

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license.

¹ Network and subscription dependent feature. Not available in all areas.
² Optional accessories are sold separately.