








LX5550

Cellular Phone

-  **WARNING!** To reduce the possibility of electric shock, do not expose your phone to high humidity areas, such as a bathroom, swimming area, etc.
-  **Caution:** Use only LG-approved batteries and desktop chargers to avoid damage to the phone. Using other batteries or chargers voids your warranty and may cause an explosion.
-  **Caution:** Do not use batteries and desktop chargers for other than the intended purposes.
-  Never store your phone in temperatures less than -4° F or greater than 122° F, such as outside during a snowstorm or in your car on a hot day. Exposure to excessive cold or heat may result in phone malfunction, damage and/or failure.
-  Use caution when using your phone near other electronic devices. RF emissions from your mobile phone may affect nearby inadequately shielded electronic equipment. Consult manufacturers of any personal medical devices such as pacemakers and hearing aides to determine if they are susceptible to interference from your mobile phone. Turn off your phone in a medical facility or at a gas station.

IMPORTANT! Please read the TIA Safety Information (see page 118) before using your phone.

Welcome	9
Important Information	10
FCC RF Exposure Information	12
Phone Overview	14
Menus Overview	16
Getting Your Phone Started	18
The Battery	18
Turning the Phone On and Off	20
Screen Icons	21
Basic Phone Operation	22
Making Calls	22
Receiving Calls	23
Quick Access to Convenient Features ..	24
Manner Mode	24
Silence All Mode	24
Lock Mode	25
Mute Function	25
Volume Quick Adjustment	26
Call Waiting	26
Caller ID	26
Speed Dialing	27
Voice Command	27
Entering and Editing Information	28
Text Input	28
Text Input Examples	30
Contacts in Your Phone's Memory	34
The Basics of Storing Contacts Entries	34
Options to Customize Your Contacts	36
Adding or Changing the Group	36
Changing the Call Ringer	37
Changing the Message Ringer	37
Adding or Changing the Memo	38
Adding or Changing the Picture ID	38

Changing the Secret Setting	39	Erase Calls	62
Adding or Changing the URL	39	Call Timer	63
Adding Speed Dial	40	1x Packet Counter	63
Editing Contacts Entries	41	Messages	64
Adding Another Phone Number	41	Voice Mail	66
Default Numbers	42	New Message	67
Editing Stored Phone Numbers	43	The Basics of Sending a Message	67
Editing Stored Names	43	Customizing the Message Using Options ..	68
Editing Customized Options	44	Using Contacts to Send a Message	69
Deleting	45	Text Options	70
Deleting a Phone Number from a Contact	45	Message Icon Reference	71
Deleting a Contact Entry	45	Inbox	72
Deleting a Speed Dial	46	Out of Memory Warning	72
Phone Numbers With Pauses	47	Viewing Your Inbox	72
Searching Your Phone's Memory	49	Outbox	74
Making a Call From Your Phone's Memory	51	Saved	74
From Contacts	51	Msg Settings	75
From Recent Calls	51	Auto Save	76
Speed Dialing	52	Auto Delete	76
Prepending a Stored Number	53	Callback #	76
Using Phone Menus	54	Msg Alerts	76
Menu Access	54	Signature	76
Contacts	55	Direct View	76
List Contacts	56	Entry Mode	77
New Number	57	Edit Voice Mailbox #	77
New E-mail	57	Quick-Text	77
Groups	58	Font Size	77
Speed Dials	59	Erase All	78
My Contact Info	59	Voice	79
Recent Calls	60	Start Commands	80
Dialed Calls	61	Voice Scheduler	82
Received Calls	61	Voice Memos	83
Missed Calls	62	Voice Settings	84

Voice Commands	84	Backlight	100
Announce Alerts	84	Screens	102
Best Match	85	Menu Style	102
Train Commands	85	Clocks	103
Train Digits	86	Theme Colors	103
Driving Mode	86	Status LED Colors	104
Help	86	Contrast	104
easyedgeSM	87	Fonts	105
Apps	89	Language	105
Help	89	System	106
My Media	90	Select System	106
Graphics	90	Set NAM	106
Music	91	Auto NAM	107
Message Objects	91	Serving System	107
Tools	92	Security	108
Alarm Clock	93	Lock Phone	108
Notepad	94	Restrict	109
Ez Tip Calc	94	Emergency #s	109
Calculator	95	Change Code	110
World Clock	95	Erase Contacts	110
Settings	96	Reset Default	110
Sounds	96	Call Setup	111
Ringers	96	Auto Retry	111
Key Tone	97	Answer Call	111
Volume	97	Auto Answer	112
Alerts	98	One-Touch Dial	113
Service Change	98	Auto Volume	113
Minute Beep	98	TTY Mode	114
Call Connected	98	Location	115
Back To Top	98	Phone Info	116
Power On/Off Tone	99	My Phone Number	116
Display	100	S/W Version	117
Banner	100	Icon Glossary	117

Shortcut Help	117
Safety	118
TIA Safety Information	118
Exposure to Radio Frequency Signal	118
Antenna Care	118
Phone Operation	118
Driving	119
Electronic Devices	119
Health Care Facilities	120
Vehicles	120
Posted Facilities	120
Aircraft	120
Blasting Areas	121
Potentially Explosive Atmosphere	121
For Vehicles Equipped with an Air Bag	121
Battery Safety	122
Charger and Adapter Safety	122
Battery Information and Care	122
Safety Information	123
Consumer Information on SAR	135
Accessories	137
Warranty Information	138
Index	141

Welcome

Congratulations for choosing the advanced and compact LX5550 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this phone offers:

- Large, easy-to-read, 8-line backlight LCD with status icons.
- Paging, messaging, voice mail, and caller ID.
- 18-key keypad.
- Long battery standby and talk time.
- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and Spanish) capabilities.

Check Accessories

Your mobile phone comes with a rechargeable battery, standard charger, holster and headset. Please verify that these accessories are included.

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Technical Details

The LX5550 is a dual-band phone that operates on both Code Division Multiple Access (CDMA) frequencies: cellular services at 800 MHz and Personal Communication Services (PCS) at 1.9 Ghz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard Handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base station Transmission System), and MS (Mobile Station). The following table lists some major CDMA standards.

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74	CDMA Dual-Mode Air Interface 14.4kbps radio link protocol and inter-band operations
	ANSI J-STD-008 TIA/EIA-IS2000	IS-95 adapted for PCS frequency band cdma2000 1xRTT Air Interface
Network	TIA/EIA/IS-634	MAS-BS
	TIA/EIA/IS/651	PCSC-RS
	TIA/EIA/IS-41-C	Intersystem operations
	TIA/EIA/IS-124	Nom-signaling data comm.
Service	TIA/EIA/IS-96-B	Speech CODEC
	TIA/EIA/IS-99	Async Data and Fax
	TIA/EIA/IS-637	Short message service
	TIA/EIA/IS-657	Packet Data
	IS-801	Position Determination Service (gpsOne)
	TIA/EIA/IS-707-A	High Speed Packet Data
Performance	TIA/EIA/IS-97	Cellular base station
	TIA/EIA/IS-98	Cellular mobile station
	ANSI J-STD-018	PCS personal station
	ANSI J-STD-019	PCS base station
	TIA/EIA/IS-125	Speech CODEC

* TSB -74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 3/4 inches (2 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 3/4 inches (2 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 3/4 inches (2 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

A minimum distance of 8 inches (20 cm) must be maintained between the user / bystander and the vehicle-mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov.

Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement of antenna.

Phone Overview



1. **Earpiece**
2. **Flip** Flip open the case to answer an incoming call and close to end the call.
3. **LCD Screen** Displays messages and indicator icons.
4. **Headset Jack**
5. **Left Soft Key** Use to display the function setting menu.
6. **Side Keys** Use to adjust the ringer volume in standby mode and the earpiece volume during a call.
7. **TALK Key** Use to place or answer calls.
8. **Voice Command Key** Use for quick access to Voice Commands and Driving Mode.
9. **Manner/Silence All Mode Key** Use to set the mode (from standby mode press and hold ***☰** for about 3 seconds).
10. **Right Soft Key** Use to select an action within a menu.
11. **Navigation Key** Use for quick access to Messages, Recent Calls, **easyedgeSM**.
12. **Message Key** Use to retrieve or send voice and text messages.
13. **BACK Key** Press to delete a single space or character. Press and hold to delete entire words. Press this key once in a menu to go back one level. Use for quick access to Shortcut Help.
14. **END Key** Use to turn the power on/off and to end a call. Also return to the main menu display screen.
15. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
16. **Lock Mode Key** Use in standby mode to set the lock function by pressing and holding the **#☰** key for about 3 seconds.
17. **Microphone**

Menus Overview

Press Left Soft Key  Menu. Press to  Scroll.



1 Contacts

1. List Contacts
2. New Number
3. New E-mail
4. Groups
5. Speed Dials
6. My Contact Info



2 Recent Calls

1. Dialed Calls
2. Received Calls
3. Missed Calls
4. Erase Calls
 1. Dialed Calls
 2. Received Calls
 3. Missed Calls
 4. All Calls
5. Call Timer
 1. Last Call
 2. Home Calls
 3. Roam Calls
 4. All Calls
6. 1x Packet Counter
 1. Received
 2. Transmitted
 3. Total



3 Messages

1. Voice Mail
2. New Message
3. Inbox
4. Outbox
5. Saved

6. Msg Settings

1. Auto Save
 2. Auto Delete
 3. Callback #
 4. Msg Alerts
 5. Signature
 6. Direct View
 7. Entry Mode
 8. Edit Voice Mailbox #
 9. Quick-Text
 0. Font Size
7. Erase All
 1. Inbox
 2. Outbox
 3. Saved
 4. All



4 Voice

1. Start Commands
2. Voice Scheduler
3. Voice Memos
4. Voice Settings
 1. Voice Commands
 2. Announce Alerts
 3. Best Match
 4. Train Commands
 5. Train Digits
5. Driving Mode
6. Help



5 easyedgeSM

1. Apps
2. Help



6 My Media

1. Graphics
2. Music
3. Message Objects
 1. Small Pictures
 2. Large Pictures
 3. Sounds
 4. Animations



7 Tools

1. Alarm Clock
2. Notepad
3. Ez Tip Calc
4. Calculator
5. World Clock



8 Settings

1. Sounds
 1. Ringers
 2. Key Tone
 3. Volume
 4. Alerts
 5. Power On/Off Tone
2. Display
 1. Banner
 2. Backlight
 3. Screens
 4. Menu Style
 5. Clocks
 6. Theme Colors
 7. Status LED Colors
 8. Contrast
 9. Fonts
 0. Language

3. System

1. Select System
 2. Set NAM
 3. Auto NAM
 4. Serving System
4. Security
 1. Lock Phone
 2. Restrict
 3. Emergency #s
 4. Change Code
 5. Erase Contacts
 6. Reset Default
5. Call Setup
 1. Auto Retry
 2. Answer Call
 3. Auto-Answer
 4. One-Touch Dial
 5. Auto Volume
 6. TTY Mode
 6. Location



9 Phone Info

1. My Phone Number
2. S/W Version
3. Icon Glossary
4. Shortcut Help

Getting Your Phone Started

The Battery

NOTE: It is important to fully charge the battery before initial use of the phone.

 
The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

Installing the Battery

To install the battery, insert the bottom of the battery into the opening on the back of the phone. Push the battery down until the latch clicks.

Removing the Battery

Turn the power off. Lift the release latch to detach the battery.

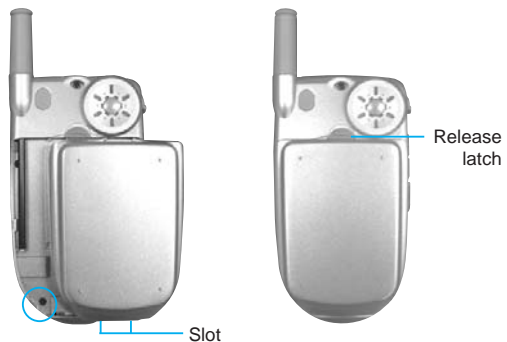


Charging the Battery

Warning! Use only the standard charger provided with the phone. Using any charger other than the one included with the LX5550 may damage your phone or battery.

1. Plug the standard charger into a wall outlet. The phone must be charged from a 120V AC power source.
2. Plug the standard charger into the phone. The red light indicates the battery is charging and the green light indicates the battery is fully charged. The charge time varies depending upon the battery level. The maximum charge time for a fully discharged battery is 3 hours.

Battery Charge Level

 
The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying **LOW BATTERY WARNING!** If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

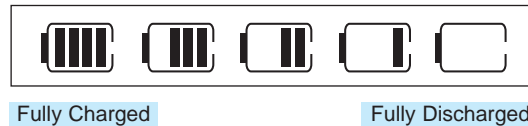

Getting Your Phone Started

Turning the Phone On and Off

Turning the Phone On

1. Install a charged battery or connect the phone to an external power source such as a cigarette lighter charger or hands-free car kit.
2. Press  for a few seconds until the LCD screen lights up.

NOTE: Like any other radio device, avoid any unnecessary contact with the antenna while your phone is on.

Turning the Phone Off











 








1. Press and hold  until the display turns off.

Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon: The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

Screen Icons

When the phone is powered on, the top line of the LCD screen displays icons indicating the status of the phone.

Icon	Description	
	Signal strength indicator. The strength of the signal received by the phone is indicated by the number of bars displayed.	
	Battery indicator. Indicates battery charge level.	
	In use indicator. A call is in progress. * No icon indicates the phone is in standby mode.	
	No service indicator. The phone is not receiving a system signal.	
	New text message indicator or Browser message.	
	New voice mail indicator.	
	New text and voice message indicator.	
	Vibration mode.	 Silence All mode.
	Driving Mode.	 Announce Alerts.
	Roaming indicator. The phone is outside of the home service area.	
	IS-2000	 Digital indicator.
	Analog	
	SSL	 TTY.
	Location on	 E911 only

Basic Phone Operation

Making Calls

1. Make sure the phone is turned on. If not, press **END**.
2. Enter the phone number (include the area code if needed).
3. Press **TALK**.

If the phone is locked, enter the lock code.

Call Failed - indicates the call did not go through.

Restricted - indicates outgoing calls are in restricted mode.

NOTE: If the phone is restricted, you can only dial phone numbers saved in the Emergency Numbers or your Contacts.

To turn off this function:

Menu -> **8** Settings -> **4** Security -> Enter Lock Code -> **2** Restrict -> Off -> OK

4. Press **END** or Side Key () twice to end the call.

Correcting Dialing Mistakes

If you make a mistake while dialing a number, press **BACK** once to erase the last digit entered or hold down **BACK** for at least 2 seconds to delete all digits.

Redialing Calls

1. Press **TALK** twice to redial the last number you dialed. The last 30 numbers are stored in the call history list and you can also select one of these to redial.

Receiving Calls

1. When the phone rings or vibrates press **TALK** to answer.


NOTE: If you press **END** or the side keys while the phone is ringing, the ringing or vibration is muted for that call.

2. Press **END** or Side Key () twice to end the call.

Quick Access to Convenient Features

Manner Mode

Use Manner Mode in public places.


When Manner Mode is set,  is displayed on the screen, the key tones are silent, and the phone is set to vibrate.


Manner Mode Quick Activation

1. From standby mode press  for 3 seconds.

NOTE: The phone remains in Manner Mode even if you turn it off and back on.


Manner Mode Quick Cancellation

1. Press  to switch to Silence All Mode or Normal Mode.


NOTE: When folder is closed, you can press lower side key () for three seconds to set Manner mode.

Silence All Mode


Use Silence All Mode in public places.

When Silence All Mode is set,  is displayed on the screen, the key tones are silent, and the lamp blinks instead of the phone ringing or vibrating.

Silence All Mode Quick Activation

1. From Manner Mode press  for 3 seconds.

Silence All Mode Quick Cancellation

1. Press  to switch to Silence Normal Mode or Manner Mode.

Lock Mode

Use Lock Mode to prevent others from using your phone. When Lock Mode is set, your 4-digit password is required to use the phone.

NOTE: The lock code/password is 0000 by default.

Lock Mode Quick Activation

1. From standby mode, press  for 3 seconds.

Lock Mode Quick Cancellation

1. Press Ringt Soft Key  **Unlock** then enter your 4-digit password.

Mute Function

The Mute function prevents the other party from hearing your voice, but allows you to hear the other party.

Mute Quick Activation

1. Press Left Soft Key  **Mute** during a call.

Mute Quick Cancellation

1. Press Left Soft Key  again.

Quick Access to Convenient Features

Volume Quick Adjustment



Use the side keys to adjust the earpiece and ringer volumes. The upper key increases the volume and the lower key decreases the volume.

- Earpiece volume can be adjusted during a call.
- Ringer volume can be adjusted while the phone is ringing.

NOTE: Key beep volume is adjusted through the Menu.

Call Waiting

Your cellular service may offer call waiting. While a call is in progress, two beeps indicate another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.

1. Press  to receive a waiting call.
2. Press  again to switch between calls.

Caller ID

Caller ID displays the number of the person calling when your phone rings. If the caller's identity is stored in Contacts, the name appears with the number.

Check with your service provider to ensure they offer this feature.


Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly and easily with a few keystrokes. Your phone recalls the number from your Contacts, displays it briefly, and then dials it. Speed Dial number 1 is always for Voice mail.

Dialing Speed Dials from 2 to 9

1. Press and hold the Speed Dial number.

OR

Enter the speed dial number and press .

Dialing Speed Dials from 10 to 99

Press the first digit and then press and hold the key of the last digit.


OR

Enter the first and second digits and press

.

Voice Command

Voice command is a convenient feature that allows you to make phone calls quickly and easily by verbal command. Your phone recalls the number from your Contacts, displays it briefly, and then dials it.

1. Press the Voice Command key().
2. Save the recorded voice command.

Entering and Editing Information

Text Input

You can input and edit your Banner, Schedule, Contacts, and messages.

Key Functions



Right Soft Key: Press to scroll through the following text input modes:
T9Word -> **Abc** -> **123** -> **Symbols** -> **Smiley**.



Shift: Press to change case.
T9 text: **T9Word** -> **T9WORD** -> **T9word**
Abc text: **Abc** -> **ABC** -> **abc**



Next: In T9 mode, press to display other matching words.



Space: Press to complete a word and insert a space.





Back: Press to delete a single space or character. Hold to delete words.



Punctuation: In T9 mode, press to insert punctuation in a word and complete a sentence.

Text Input Modes

There are five modes for entering text, numbers, special characters, and punctuation. In a text entry field, pressing Right Soft Key  (or Left Soft Key ) displays a pop-up list of text modes.

T9Word (T9) Mode

Use to type text using one keystroke per letter. The phone translates keystrokes into common words by using the letters on each key and a compressed database.

Abc (Multi-tap) Mode

Use to add words to the T9 database.

123 (Numbers) Mode

Use to type numbers using one keystroke per number.

Symbols Mode


Use to insert special characters or punctuation. There are 39 special characters including "SP" which inserts a space and "LF" which forces the text to the next line.

Smiley Mode

Use to insert smiley graphics. There are 40 smiley characters.

Entering and Editing Information

Changing Letter Case

Using T9 and Abc text input modes you can set the capitalization. Press  to cycle through the following:

Initial Cap (T9Word / Abc)

Only the first letter is capitalized. All subsequent letters are lower case.

Caps Lock (T9WORD / ABC)





All letters are capitalized.

Lower Case (T9word / abc)








All letters are in lower case.

Text Input Examples










Display the text modes and select a text mode:

1. In a text entry field, press Right Soft Key  (or Left Soft Key ) to display text modes.
2. Press  to highlight the text input mode you want to use.
3. Press  to select the highlighted text input mode.









Using Abc (Multi-tap) Text Input

1. Press Right Soft Key  (or Left Soft Key ) to change to Abc mode.
2. Press  to change to ABC Caps Lock.
3. Press     .
LG is displayed.









Using 123 (Numbers) Text Input

1. Press Right Soft Key  (or Left Soft Key ) to change to 123 mode.
2. Press        .
555-1212 is displayed.

Using Symbol Text Input

1. Press Right Soft Key  (or Left Soft Key ) to change to Symbols mode.
2. Press Right Soft Key  **Next** to view the next 12 symbols or Left Soft Key  **Prev** to view the previous 12 symbols.
3. Use  to highlight the special character you want to insert and press  to select it.
Press Right Soft Key  (or Left Soft Key ) to change to another text mode.


















Using Smiley Text Input

1. Press Right Soft Key  (or Left Soft Key ) to change to Smiley mode.
2. Press Right Soft Key  **Next** to view the next 12 smileys or Left Soft Key  **Prev** to view the previous 12 smileys.
3. Use  to highlight the smiley you want to insert and press  to select it.
4. Press Right Soft Key  (or Left Soft Key ) to change to another text mode.


Entering and Editing Information






Using T9 Mode Text Input

To type the message "Call the office" follow these steps:

1. Press Right Soft Key  (or Left Soft Key ) to change to T9Word mode.
 2. Press    .
 3. Press  to complete the word and add a space.
 4. Press          .
- Call the office* is displayed.

















Using the NEXT Key

After you have finished entering a word, if the word displayed is not the one you want, press  to display additional choices of words from the database.

1. Press    .
- Good* is displayed.
2. Press .
- The display gives you additional choices such as: *Home*, *Gone*, *Hood*, etc.

Adding Words to the T9 Database

If a word is not in the T9 database, add it using Abc (Multi-tap) mode text entry. The word is automatically added to the T9 database.

 
1. Press Right Soft Key  (or Left Soft Key ) to change to Abc (multi-tap) mode.
 2. Press      .
- Bop* is displayed.
3. Press Right Soft Key  (or Left Soft Key ) to change to T9 mode to add the word *Bop* to the T9 database.
 4. Press  to erase the existing word.
 5. Press   .
- Cop* is displayed.
6. Press  .
- Bop* is displayed.

Contacts in Your Phone's Memory

Contacts Entries

This allows you to have easy access to your most frequently dialed phone numbers. You may store up to 499 entries with up to 5 phone numbers each. Each entry may be up to 22 characters. Each phone number may be up to 48 digits.

The Basics of Storing Contacts Entries



1. From standby mode enter the phone number you want to save (up to 48 digits).
2. Press Left Soft Key Save.
3. Use to select a Label and press . Home / Home2 / Office / Office2 / Mobile / Mobile2 / Pager / Fax / Fax2 / None
4. Use to select New Name or Existing and press .

NOTE: Use Existing to add another phone number to a contact already stored in memory.

5. Enter a name for the phone number (up to 22 characters) and press . A confirmation message is displayed briefly.

NOTE: To skip name entry, press to go to the next step.

NOTE: If the information is complete, press to return to the Main Menu screen.




NOTE: To further customize the Contact entry, press Left Soft Key Done.

6. Continue saving the entry as a Speed Dial, press to select Speed Dial.
7. Enter a Speed Dial digit (e.g., 2) Use the keypad and press or Use to highlight the Speed Dial location and press .
8. Press to select OK.

Contacts in Your Phone's Memory








Options to Customize Your Contacts

Once basic phone number and name information is stored in your Contacts, you can edit and/or customize the entries.

1. Enter the phone number and name as described on the previous page.
2. Press Left Soft Key  **Done** to access the Edit Entry screen.
3. Use  to highlight the information you want to customize and press .

Adding or Changing the Group









Allows you to manage your Contacts entries by organizing them into groups.

1. Access your Contacts and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight **No Group** and press .
4. Use  to select the Group and press . No Group / Family / Friends / Colleagues / Business / School
5. Press Left Soft Key  **Done** to continue editing the Contact entry.

NOTE: You can change the name of the group, add groups, and delete groups.









Changing the Call Ringer

Allows you to identify who is calling by setting different ringers for different phone numbers in your Contacts. It is automatically set to the default ringer when the Contact is saved.

1. Access your Contacts and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight **Default Ringer** and press .
4. Use  to select the Ring Type and press .
5. Press Left Soft Key  **Done** to continue editing the Contact entry.

Changing the Message Ringer








Allows you to identify who is sending you a message by setting different ringers for different phone numbers in your Contacts. It is automatically set to the default ringer when the Contact is saved.

1. Access your Contacts and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight **Default Text Msg Ringer** and press .
4. Use  to select the Ring Type and press .
5. Press Left Soft Key  **Done** to continue editing the Contact entry.

Contacts in Your Phone's Memory









Adding or Changing the Memo

Allows you to enter up to 32 characters as a memo to the Contact entry.

1. Access your Contacts and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight **Memo** and press .
4. Enter text and press .
5. Press Left Soft Key  **Done** to continue editing the Contact entry.









Adding or Changing the Picture ID

Allows the phone to display a picture to identify the caller.

1. Access your Contacts and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight **Default** and press .
4. Use  to select a graphic and press .
5. Press Left Soft Key  **Done** to continue editing the Contact entry.








Changing the Secret Setting

Allows you to hide certain entries from being displayed when the Contacts are searched.

1. Access your Contacts and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight **Not Secret** and press .
4. Use  to select the Secret setting and press .
5. Press Left Soft Key  **Done** to continue editing the Contact entry.












Adding or Changing the URL

Allows you to enter a Web address associated with the Contact entry.

1. Access your Contacts and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight **URL** and press .
4. Enter a Web address and press .
5. Press Left Soft Key  **Done** to continue editing the Contact entry.

Contacts in Your Phone's Memory








Adding Speed Dial

1. Access your Contacts and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight the phone number you want to set with a Speed Dial and press .
4. Press  to select **Speed Dial**.
5. Enter a Speed Dial digit.
Use the Keypad and press , or Use  to highlight the Speed Dial digit and press .
6. Press Left Soft Key  **Done** to continue editing the Contact entry, or Press  to return to the Main Menu.










Editing Contacts Entries

Adding Another Phone Number

From the Main Menu Screen

1. From standby mode, enter the phone number you want to save (up to 48 digits).
2. Press Left Soft Key  **Save**.
3. Use  to highlight a Label and press .
Home / Home2 / Office / Office2 / Mobile / Mobile2 /
Pager / Fax / Fax2 / None
4. Use  to highlight Existing and press .
5. Use  to highlight the existing Contact entry and press .
A confirmation message is displayed.

Through Contacts

1. From standby mode, press Right Soft Key  **Contacts**.
Your Contacts display alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight Add Number, then press .
5. Enter the number and press .
6. Use  to highlight a Label, then press .
A confirmation message is displayed.





Contacts in Your Phone's Memory

Default Numbers








The phone number saved when a Contact is created is the Default Number. If more than one number is saved in a Contact entry, another number can be saved as the Default Number.

NOTE: The Default Number cannot be deleted by itself. The entire Contact entry can be deleted or another number can be set as the Default Number allowing you to delete the original saved number and keep the Contact entry.

Changing the Default Number

1. From standby mode, press Right Soft Key **Contacts**.
Your Contacts display alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key **Edit**.
4. Use  to highlight the phone number you want to set as the Default Number and press Right Soft Key **Options**.
5. Press  Set as Default #.
A confirmation message is displayed.

Editing Stored Phone Numbers

1. From standby mode, press Right Soft Key **Contacts**.
Your Contacts display alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key **Edit**.
4. Use  to highlight the phone number and press .
5. Use  to highlight the phone number and press .
6. Edit the phone number as necessary and press .








Editing Stored Names

1. From standby mode, press Right Soft Key **Contacts**.
Your Contacts display alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key **Edit**.
4. Use  to highlight the name and press .
5. Edit the name as necessary and press .

Contacts in Your Phone's Memory









Editing Customized Options

Edit any of the Contacts options in the same manner as when the Contact is created.







1. From standby mode, press Right Soft Key  **Contacts**.
Your Contacts display alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight the information you want to customize and press .
5. Edit the information as necessary and press .

Deleting


Deleting a Phone Number from a Contact

1. Press Right Soft Key  **Contacts**.
2. Use  to highlight the Contact entry, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight the phone number to be deleted.
5. Press Right Soft Key  **Options**.
6. Press  Erase Number.
7. Press  Erase Number.
A confirmation message is displayed.

Deleting a Contact Entry














1. Press Right Soft Key  **Contacts**.
2. Use  to highlight the Contact entry to be deleted, then press .
3. Press Right Soft Key  **Options**.
4. Press  Erase Entry.
5. Press  Erase.
A confirmation message is displayed.

Additional Ways to Delete a Contact

Once you have accessed your Contacts, pressing Right Soft Key  **Options**. at any point provides the option to erase the entry.

Contacts in Your Phone's Memory


Deleting a Speed Dial

1. Press Right Soft Key  **Contacts**.
2. Use  to highlight the Contact entry, then press .
3. Use  to highlight the Speed Dial number.
4. Press Left Soft Key  **Edit**.
5. Use  to highlight the Speed Dial number and press .
6. Use  to highlight the Speed Dial entry and press .
7. Use  to highlight the Speed Dial location.
8. Press Right Soft Key  **Options**.
9. Press  **Remove**.
10. Press  **Remove**.
A confirmation message is displayed.

Phone Numbers With Pauses

When you call automated systems such as voice mail or credit billing numbers, you often have to enter a series of numbers. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (P, T). There are two different types of pauses you can use when storing a number:

Hard pause (P)










The phone stops dialing until you press Left Soft Key  **Release** to advance to the next number.

2-sec pause (T)















The phone waits 2 seconds before sending the next string of digits.

Contacts in Your Phone's Memory

Storing a Number With Pauses

1. Press Left Soft Key  **Menu**.
2. Press  **Contacts**.
3. Press  **New Number**.
4. Enter the number.
5. Press Right Soft Key  **Pause**.
6. Use  to select pause type and press . Hard Pause / 2-sec pause
7. Enter additional number(s) (e.g., pin number or credit card number) and press .
8. Use  to select a Label and press .
9. Enter a name (up to 22 characters). A confirmation message is displayed.

Adding a Pause to an Existing Number


1. Press Right Soft Key  **Contacts**.
2. Use  to highlight the Contact entry to edit, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight the number then press .
5. Use  to highlight the number then press .
6. Press Right Soft Key  **Pause**.
7. Press  **Hard Pause** or  **2-sec Pause**.
8. Enter additional number(s) and press .
9. Use  to select the label type and press . A confirmation message is displayed.

Searching Your Phone's Memory


The LX5550 phone is able to perform a dynamic search of the contents in your phone's memory. A dynamic search compares entered letters or numbers against the entries in your Contacts. A matching list is displayed in descending order. You can then select a number from the list to call or edit. There are several ways to search:

- Scrolling Alphabetically
- Searching by Letter
- Searching by Options
 - Find Name
 - Find Number
 - Find Speed Dial
 - Find Group
 - Find E-mail
 - Send Message
 - Erase

Scrolling Through Your Contacts




1. Press Right Soft Key  **Contacts**. Contacts list is displayed alphabetically.
2. Use  to scroll through the list.


Searching by Letter


1. Press Right Soft Key  **Contacts**. Contacts list is displayed alphabetically.
2. Press (or press repeatedly) the key on the keypad that corresponds with the search letter.


Contacts in Your Phone's Memory

Searching Options


1. Press Right Soft Key  **Contacts**.
2. Press Right Soft Key  **Options**.
3. Select the search criteria using  (or press the corresponding number on the keypad):

 **Find Name** - Enter the character(s) to search for (such as the first letters of the name).

 **Find Number** - Enter the number(s) to search.




 **Find Speed Dial** - Enter the speed dial number(s) to search.

 **Find Group** - Use  to highlight the group to search for and press .

 **Find E-mail** - Enter the email address to search.


 **Send Message** - Enter the text and press .

 **Erase** - Press  **Erase** to erase the entry.







4. A list of matches is displayed.
Use  to highlight a matched entry.
5. Press  to see more information or press  to place a call.

Making a Call From Your Phone's Memory







Once you have stored phone numbers into your Contacts, you can place calls to those numbers quickly and easily.

- Pressing  after you've searched for a phone number in Contacts or Recent Calls.
- Using Speed Dialing (see page 52)

From Contacts

1. Press Right Soft Key  **Contacts**.
2. Use  to select the Contact entry and press .
3. Use  to select the phone number and press .
4. Press  to place the call.

From Recent Calls


1. Press Left Soft Key  **Menu**.
2. Press  **Recent Calls**.
3. Use  to select the type of recent call and press .
Dialed Calls / Received Calls / Missed Calls / Erase Calls / Call Timer / 1x Packet Counter
4. Use  to highlight the phone number.
5. Press  to place the call.

Contacts in Your Phone's Memory


Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly and easily (Speed Dial 1 is for Voice mail). Designate Speed Dials in your Contacts to use this calling feature.

For Speed Dials From 2 to 9




1. Press and hold the Speed Dial digit.
OR
Press the Speed Dial digit, and then press .
2. Your phone recalls the phone number from your Contacts, displays it briefly, and then dials it.

For Speed Dials From 10 to 99

1. Press the first digit then press and hold the key of the last digit.
OR
Press the first Speed Dial digit, press the second Speed Dial digit, and then press .
2. Your phone recalls the phone number from your Contacts, displays it briefly, and then dials it.

Prepending a Stored Number

Prepend can be used if you are out of your home system area and need to add the area code to an existing number. When a Contacts entry or message callback number shows up on the display, you can add to the beginning of the original number. However, you cannot edit the original number.

1. Recall a number in your Recent Calls.
2. Press Right Soft Key  Options.
3. Press  Prepend.
4. Enter the prepend digits to the phone number.
5. Press  to place the call.

Using Phone Menus

Menu Access

Press Left Soft Key **Menu** to have access to nine phone menus. There are two methods to access menus and submenus:

- Use the navigation key to highlight and select, or
- Press the number key that corresponds to the menu or submenu.

For example:

1. Press Left Soft Key **Menu**.
Nine menu items are displayed.
Use **Up** to scroll through the list of menus.
2. Press the appropriate number key corresponding to the menu item you want to select.
The sub-menu list will be displayed.
3. Press the appropriate number key corresponding to the sub-menu you want to access.
4. Use **Up** to highlight your preferred setting and press **OK** to select it.

NOTE: Press **BACK** to go back one step while accessing the menu or selecting a setting.

NOTE: Press **BACK** to cancel without saving.

Contacts (Menu **1**)

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory. When you access your Contacts, the number in parenthesis represents the number of entries you have stored (up to 499).

Accessing the Options









1. Press Left Soft Key **Menu**.
2. Press **1** Contacts.
3. Select a sub-menu.
 - **1** List Contacts
 - **2** New Number
 - **3** New E-mail
 - **4** Groups
 - **5** Speed Dials
 - **6** My Contact Info

Using Phone Menus

List Contacts (Menu)










Allows you to view your Contacts list.

1. Press Left Soft Key  **Menu**.
2. Press  **Contacts**.
3. Press  **List Contacts**.
4. Options from here:
 - Press  to scroll through your Contacts alphabetically.
 - Press Right Soft Key  **Options** to select one of the following:
Find Name / Find Number / Find Speed Dial
Find Group / Find E-mail / Send Message / Erase
 - Press Left Soft Key  **New** to store a new phone number or new e-mail.

New Number (Menu)

Allows you to add a new number.









NOTE: Using this sub-menu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.

1. Press Left Soft Key  **Menu**.
2. Press  **Contacts**.
3. Press  **New Number**.
4. Enter the number and press  .
5. Select the label you want and press  .
6. Enter the name and press  .
7. Continue saving the entry as necessary.

New E-mail (Menu)

Allows you to save a new e-mail address.









NOTE: Using this sub-menu, the e-mail is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.

1. Press Left Soft Key  **Menu**.
2. Press  **Contacts**.
3. Press   **New E-mail**.
4. Enter the e-mail address and press  .
5. Enter the name and press  .
6. Continue saving the entry as necessary.

Using Phone Menus










Groups (Menu 4.call)

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a whole group.

1. Press Left Soft Key  **Menu**.
2. Press  **Contacts**.
3. Press  **Groups**.
4. Options from here:
 - Use  to highlight a group to view and press .
 - Press Left Soft Key  **Add** to add a new group to the list.
 - Use  to highlight a group and press Right Soft Key  **Options** to change the name of the group or delete the group.





Speed Dials (Menu 5.in)

Allows you to view your list of Speed Dials or designate Speed Dial for numbers entered in your Contacts.

1. Press Left Soft Key  **Menu**.
2. Press  **Contacts**.
3. Press  **Speed Dials**.
4. Use  to highlight the Speed Dial position, or enter the Speed Dial digit and press .
5. Use  to highlight the Contact and press .
6. Use  to highlight the number and press . A confirmation message is displayed.

My Contact Info (Menu 6.MNO)

Allows you to enter your own virtual business card to be used in e-mails or SMS messages.




1. Press Left Soft Key  **Menu**.
2. Press  **Contacts**.
3. Press  **My Contact Info**.
4. Select the feature you want to edit by highlight it and pressing .

Using Phone Menus

Recent Calls (Menu **2^{ABC}**)

The Recent Calls Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

NOTE: To view a quick list of all your recent calls, press **TALK** from the Main Menu.

-  indicates a dialed call.
-  indicates a received call.
-  indicates a missed call.

Accessing the Options



1. Press Left Soft Key **Menu**.
2. Press **2^{ABC}** Recent Calls.
3. Select a sub-menu.
 - **1^{CALL}** Dialed Calls
 - **2^{ABC}** Received Calls
 - **3^{DEF}** Missed Calls
 - **4^{GHI}** Erase Calls
 - **5^{JKL}** Call Timer
 - **6^{MNO}** 1x Packet Counter

Dialed Calls (Menu **2^{ABC} 1^{CALL}**)

Allows you to view the list of outgoing calls; up to 30 entries.

1. Press Left Soft Key **Menu**.
2. Press **2^{ABC}** Recent Calls.
3. Press **1^{CALL}** Dialed Calls.
4. Use **Up** to highlight an entry, then
 - Press **OK/Call** to view the entry.
 - Press **TALK** to place a call to the number.
 - Press Right Soft Key **Options** to select: Save / Send Msg. / Prepend / Erase / Erase all

Received Calls (Menu **2^{ABC} 2^{ABC}**)

Allows you to view the list of incoming calls; up to 30 entries.

1. Press Left Soft Key **Menu**.
2. Press **2^{ABC}** Recent Calls.
3. Press **2^{ABC}** Received Calls.
4. Use **Up** to highlight an entry, then
 - Press **OK/Call** to view the entry.
 - Press **TALK** to place a call to the number.
 - Press Right Soft Key **Options** to select: Save / Send Msg. / Prepend / Erase / Erase all

Using Phone Menus

Missed Calls (Menu **2^{ABC}** **3^{DEF}**)

Allows you to view the list of missed calls; up to 30 entries.

1. Press Left Soft Key **Menu**.
2. Press **2^{ABC}** Recent Calls.
3. Press **3^{DEF}** Missed Calls.
4. Use **↕** to highlight an entry, then
 - Press **OK** to view the entry.
 - Press **TALK** to place a call to the number.
 - Press Right Soft Key **Options** to select: Save / Send Msg. / Prepend / Erase / Erase all

Erase Calls (Menu **2^{ABC}** **4^{GHI}**)

Allows you to erase selected call list(s).

1. Press Left Soft Key **Menu**.
2. Press **2^{ABC}** Recent Calls.
3. Press **4^{GHI}** Erase Calls.
4. Use **↕** to highlight the list of calls to erase and press **OK**.
Dialed Calls / Received Calls / Missed Calls / All Calls
5. Press **1^{END}** Erase or **2^{ABC}** Cancel.

Call Timer (Menu **2^{ABC}** **5^{JKL}**)

Allows you to view the duration of selected calls.

1. Press Left Soft Key **Menu**.
2. Press **2^{ABC}** Recent Calls.
3. Press **5^{JKL}** Call Timer.
4. Use **↕** to highlight a call list and press **OK**.
Last Call / Home Calls / Roam Calls / All Calls

1x Packet Counter (Menu **2^{ABC}** **6^{MNO}**)



Allows you to view the list of received and transmitted data calls.

1. Press Left Soft Key **Menu**.
2. Press **2^{ABC}** Recent Calls.
3. Press **6^{MNO}** 1x Packet Counter.
4. Use **↕** to highlight a data call list and press **OK**.
Received / Transmitted / Total

Using Phone Menus

Messages (Menu)

Text messages, pages, and the voice mail box become available as soon as the phone is powered on.


- Check types of messages by pressing the message key .
- Make a call to the callback number by pressing  during a message check.
- Read and edit messages saved in the outbox during transmission and send them.

The phone can store up to 116 messages (for example, 1 voice message, 50 inbox text messages, 50 outbox text messages, 15 saved text messages). The LX5550 supports up to 160 characters per message including header information. The information stored in the message is determined by phone mode and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

New Message Alert

There are three ways your phone alerts you to new messages.










1. The phone displays the message on the screen.
2. One of five ring types is heard, if selected.

3. The message icon () is displayed on the display screen. In the case of an urgent message, the icon will flash and *Urgent message* is displayed.

NOTE: If you receive the same message twice, your phone deletes the older one and the new one is stored as a DUPLICATE.

Accessing the Options








1. Press Left Soft Key  **Menu**.
2. Press  **Messages**.
3. Select a sub-menu.
 -  **Voice Mail:** Shows the number of messages in voice mail box.
 -  **New Message:** Sends a message.
 -  **Inbox:** Shows the list of received messages.
 -  **Outbox:** Shows the list of sent messages.
 -  **Saved:** Shows the list of saved and draft messages.
 -  **Msg Settings:** Selects alert type for new messages.
 -  **Erase All:** Deletes all stored messages.

Using Phone Menus

Voice Mail (Menu)

Allows you to view new voice messages recorded in the voice mail box. Once you exceed the storage limit, old messages are overwritten. When you have a new voice message, your phone alerts you.









Checking Your Voice Mail Box

1. Press Left Soft Key  **Menu**.
2. Press  Messages.
3. Select  Voice Mail.
4. Options from here:
 - Press Left Soft Key  **Clear** to delete information, and then select Clear.
 - Press  to listen to the message(s).

New Message (Menu)

Allows you to send text messages, pages, and e-mail transmissions. Each message has a destination (Address 1) and information (Message). These are dependent upon the type of message you want to send.


The Basics of Sending a Message

1. Press Left Soft Key  **Menu**.
 2. Press  Messages.
 3. Press  New Message.
 4. Enter the message destination in Address 1.
 - SMS phone number for a text message.
 - SMS phone number for a page.
 - E-mail address for an e-mail message.
 5. Press  .
- NOTE:** To send a page, press Left Soft Key  **Send now**.
6. Press  to access the message screen.
 7. Type your message (text or e-mail) then press  .
 8. Press Left Soft Key  **Send**.
A confirmation message is displayed.

NOTE: If you send an SMS message to a phone without SMS, you will still be notified that the message was sent, however the message will not be received.

Using Phone Menus

Customizing the Message Using Options

1. Create a new message.
2. Press Right Soft Key  **Options**.
3. Select the option(s) to customize.

Send	Sends the message.
Priority	Gives priority to the message. Normal / Urgent.
Callback #	Inserts a pre-programmed callback number with your message. On / Off / Edit
Deferred	Delays sending the message until the programmed time frame. Immediate / After 3 days / After 2 days / After 1 day / After 12 hours / After 2 hours / After 1 hour / After 30 minutes
Validity	Validates delivery to the Short Message Center (SMC) without being transmitted to the destination address for certain periods of time. Those messages will be deleted within the programmed time frame. Default / 3 days / 2 days / 1 day / 12 hours / 2 hours / 1 hour / 30 minutes
Delivery Notice Enhanced	Enhanced / On
Save	Saves the message into the saved folder.
Erase Field	Deletes address or contents of message field.
4. Complete and send the message.

Using Contacts to Send a Message

You can designate an entry saved in your Contacts as Address 1 instead of manually entering the destination.

1. Press Left Soft Key  **Menu**.
2. Press  Message.
3. Select  New Message.
4. Press Left Soft Key  **Contacts**.
5. Use  to highlight the Contact entry containing the destination and press .
6. Use  to highlight the SMS phone number or e-mail address and press .




NOTE: The Address 1 feature allows multi-sending of up to 10 total addresses.

7. Complete the message as necessary.

Using Phone Menus

Text Options

While you are composing the text of a message you can insert customized text.

1. Create a new message.
2. Use  to highlight Message then press .
3. Press Right Soft Key  **Options**.
4. Select the option(s) to customize.

Insert Quick-Text Inserts predefined phrases.








Yes / No / Call Me / Need Directions /
Where Are You? / Will Call Later / Busy /
On My Way / Will Arrive 15 Minutes /
Thank You / Love You

Save Quick-text Allows you to define phrases to insert as Insert Quick Text.

Insert Signature Inserts a predefined signature.

5. Complete and send or save the message.


Message Icon Reference

Icons		Descriptions
	Sent	Messages saved in Short Message Center (SMC) have been transmitted.
	Fail	Indicates a failed message transmission.
	Delivery	Message has been delivered.
	Cancel	After transmission to message center has occurred, messages that have not been delivered may be canceled by transmitting cancel message.
	Lock	Indicates that messages are locked.
	Multi-sending	Indicates more than one designated recipient.
	Pending	Transmission is unavailable in a no service area. Messages are pending transmission. Pending messages are transmitted automatically when digital mode becomes available.

Using Phone Menus

Inbox (Menu)

The phone alerts you in 3 ways when you receive a new message:



- By displaying a message notification on the screen.
- By sounding a beep or vibrating, if set.
- By blinking .

Received text messages, page messages, and e-mail lists may be searched and the contents viewed. Received messages are displayed from newest to oldest.

Out of Memory Warning

If the memory is full, no more messages can be received until enough memory space becomes available. The message *NOT ENOUGH MEMORY* is displayed and new messages are not accepted.

Viewing Your Inbox





1. Press Left Soft Key  **Menu**.
2. Press  **Message**.
3. Press  **Inbox**.
4. Options from here:
 - Left Soft Key  **Reply**.
 - Right Soft Key  **Options**.

- | | |
|------------------|---|
| Reply w Copy | Replies to the SMS with the original message attached. |
| Forward | Forwards a received message to others destination address(es). |
| Erase | Deletes the selected message from the Inbox. |
| Save Address | Stores the callback number, e-mail address, and numbers in user data included in the received message into your Contacts. |
| Save Quick- text | Saves the message into the Canned message list. |
| Save Message | Saves Inbox message into the Saved Folder. |
| Lock/Unlock | Locks or unlocks the selected message. Locked messages can not be deleted by the Erase Inbox and Erase All functions. |

Using Phone Menus

Outbox (Menu)

Up to 50 sent messages can be stored in the Outbox. View lists and contents of sent messages and verify whether the transmission was successful or not.





1. Press Left Soft Key  **Menu**.
2. Press  Message.
3. Press  Outbox.
4. Press Left Soft Key  **Resend**.


Press Right Soft Key  **Options**.

- | | |
|-------------|--|
| Erase | Deletes the selected message from the Outbox. |
| Lock/Unlock | Locks a message so that it is not erased if the Erase Outbox or Erase All feature is used. |

Saved (Menu)

Displays saved messages and draft messages.






1. Press Left Soft Key  **Menu**.
2. Press  Message.
3. Press  Saved.
4. Press Left Soft Key  **Reply**.

Press Right Soft Key  **Options**.

- | | |
|-------------|---|
| Erase | Deletes the selected message. |
| Lock/Unlock | Locks a message so that it is not erased if the Erase Saved or Erase All feature is used. |

Msg Settings (Menu)

Allows you to configure ten settings for received messages.

1. Press Left Soft Key  **Menu**.
2. Press  Message.
3. Press  Msg Settings.
4. Use  to highlight one of the settings and press  to select it.

- | | |
|----------------------|--|
| Auto Save | Auto Save / Prompt / Do not Save |
| Auto Delete | On / Off |
| Callback # | On / Off |
| Msg Alerts | Voice Mail Alert / Text Msg Alert / Email Alert / Page Alert / 2 MIN Alert |
| Signature | None / Custom |
| Direct View | On / Off |
| Entry Mode | T9 Word / Abc / 123 |
| Edit Voice Mailbox # | |
| Quick-Text | |
| Font Size | Small / Normal |

Using Phone Menus

Message Settings Sub-Menu Descriptions

Auto Save (Menu **3^{DEF} 6^{MNO} 1^{END}**)

With this feature on, messages are automatically saved in the Outbox when transmitted.

Auto Delete (Menu **3^{DEF} 6^{MNO} 2^{ABC}**)

With this feature on, read messages are automatically deleted when you exceed the storage limit.

Callback # (Menu **3^{DEF} 6^{MNO} 7^{DEF}**)

Allows you to automatically send a designated callback number when you send a message.

Msg Alerts (Menu **3^{DEF} 6^{MNO} 4^{GHI}**)

Allows you to select the alert type for a new message. Alert types are Voice Mail Alert, Text Msg Alert, E-mail Alert, Page Alert, and 2 MIN Alert.

Signature (Menu **3^{DEF} 6^{MNO} 5^{JKL}**)

Allows you make/edit a signature to automatically send with your messages.

Direct View (Menu **3^{DEF} 6^{MNO} 6^{MNO}**)

Allows you to directly display the content when receiving a message.

Entry Mode (Menu **3^{DEF} 6^{MNO} 7^{PORS}**)

Allows you to select the default input method including T9 Word, Abc, 123.

Edit Voice Mailbox # (Menu **3^{DEF} 6^{MNO} 8^{UVW}**)

Allows you to manually enter the access number for Voice Mail Service. This number should be only used when VMS access number is not provided from the network.

Quick-Text (Menu **3^{DEF} 6^{MNO} 9^{WXYZ}**)

Display, edit, and add Canned Messages.

Font Size (Menu **3^{DEF} 6^{MNO} 0^{EXIT}**)

Allows you to determine the font to use when entering message content or reading text Inbox, Outbox, and Saved Msgs folders.

Using Phone Menus

Erase All (Menu **3^{DEF}** **7^{ERAS}**)

 
Allows you to erase all text messages stored in your Inbox, Outbox, or Saved Messages. You can also erase all messages at the same time.

1. Press Left Soft Key **Menu**.
2. Press **3^{DEF}** Message.
3. Press **7^{ERAS}** Erase All.
 - Press **1^{IN}** Inbox to erase all messages stored in the Inbox.
 - Press **2^{OUT}** Outbox to erase all messages stored in the Outbox.
 - Press **3^{DEF}** Saved to erase all messages stored in the Saved Items folder.
 - Press **4^{CHH}** All to erase all messages stored in the Inbox, Outbox, and Saved Items folder.
4. Press **1^{IN}** Erase all.
Confirmation message is displayed.

Voice (Menu **4^{CHH}**)

Voice menu allows you to activate main functions by recording your voice into the phone as well as schedule and memo.

Accessing the Options

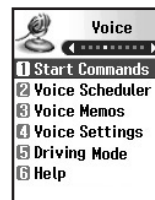

1. Press Left Soft Key **Menu**.
2. Press **4^{CHH}** Voice.
3. Select a sub-menu.
 - **1^{IN}** Start Commands
 - **2^{OUT}** Voice Scheduler
 - **3^{DEF}** Voice Memos
 - **4^{CHH}** Voice Settings
 - **5^{PH}** Driving Mode
 - **6^{MNO}** Help

NOTE: For voice recognition, keep surrounding area quiet and speak clearly.

NOTE: When entering names in your Contacts list, avoid symbols other than letters (such as digits and punctuation marks).




NOTE: Pronounce phone numbers digit by digit. Do not say "1-800" as "one eight hundred." Instead, say "One, eight, zero, zero."

NOTE: Voice feature does not work while in Analog mode.

Using Phone Menus

Start Commands (Menu)

Allows you to use your voice to activate certain features of your phone.

1. Press Left Soft Key  **Menu**.
2. Press  **Voice**.
3. Press  **Start Commands**.
 - **Contacts**: Phone call is made by saying the name, saved on the Contacts, based on List Contacts search.
 - **Digit Dial**: Phone call is made by saying the telephone number of 4, 7, 10 and 11 digits.
 - **Redial**: Calls recently dialed number again.
 - **Voice Mail**: Connects to * 86(Voice mail).
 - **Driving**: Switches the hands-free driving mode on and off.
 - **Schedule**: Reads out the events that you have scheduled and enables you to add new events.
 - **Time**: Announces the time and displays it on the phone.

To voice-dial a name from your Contacts list:

1. Flip open the phone, and press the Voice Dial Key.
2. When prompted, say "Contacts."
3. When prompted again, say a name from your Contacts list.
4. When asked to confirm, say "Yes." The phone dials the person's number.

To voice-dial a number:

1. Flip open the phone, and press the Voice Dial key.
2. When prompted, say "Digit Dial."
3. When prompted again, say a phone number.
4. When asked to confirm, say "Yes." The phone dials the number.





Using Phone Menus

Voice Scheduler (Menu)

Scheduler keeps your agenda convenient and easy to access. Simply store your appointments and your phone alerts you with a reminder of your appointment. You can also take advantage of the Alarm Clock feature.

NOTE: Scheduler will not alert you during a call, when transmitting SMS, or when connecting up. After exiting, it will sound the reminder.






Allows you to input your schedule. If you input the time and memo, an alarm rings at the set time.

1. Press Left Soft Key  **Menu**.
2. Press  **Voice**.
3. Press  **Voice Scheduler**.
4. Press Right Soft Key  **Options**.
 - **Go to today:** Moves to tdday
 - **Go to date:** Allows you to set the date
 - **Search:** Shows you the saved events
 - **Erase old:** Allows you to erase events that are older than: One Week / One month..
 - **Erase all:** Allows you to erase all events

NOTE: You could make up to 30 individual voice recordings, and each recording lasts for 10 seconds at most.

Voice Memos (Menu)

Allows you to listen to, add, and erase short verbal reminders.

1. Press Left Soft Key  **Menu**.
2. Press  **Voice**.
3. Press  **Voice Memos**.
3. Press Left Soft Key  **New** to record a new voice memo.
 - 4. Use  to highlight your desired Voice Memo and press Right Soft Key **Options**.
Edit title / Memory info / Erase / Erase all
5. Press Left Soft Key **New** to record a new voice memo.
6. Follow the Voice Memo prompts. A confirmation message is displayed.






Using Phone Menus

Voice Settings (Menu

Allows you to select options for voice activation, driving mode, announce alerts and recognition results; and enables you to adapt the phone to recognize your way of saying numbers.






Voice Commands (Menu


Allows you to set how you activate voice recognition.

1. Press Left Soft Key  **Menu**.
2. Press  Voice.
3. Press  Voice Settings.
4. Press  Voice Commands.
5. Select either of the following then press  .
 - **Flip open:** Activates voice recognition whenever you flip open the phone. (When the phone is already open, you activate voice recognition by pressing the voice dial key.)
 - **Side key only:** Activates voice recognition when you flip open the phone and press the voice dial key.

Announce Alerts (Menu






Allows you to notify caller ID and sender of message by voice.

1. Press Left Soft Key  **Menu**.
2. Press  Voice.
3. Press  Voice Settings.
4. Press  Announce Alerts.
5. Select On/Off and press  .






NOTE: When Announce Alerts is set,  is displayed on the screen.

Best Match (Menu

After you say a name or a number, your phone displays the recognition results—the name or number that best matches the one you said—and asks you to confirm. Select the number of results that you want your phone to display.






1. Press Left Soft Key  **Menu**.
2. Press  Voice.
3. Press  Voice Settings.
4. Press  Best Match.
5. Select an option and press  .
 - **1 Result:** Displays the name or number that best matches the one you said.
 - **4 Results:** Displays the four names or numbers that best match the one you said and asks you if the first one is correct. If you say "Yes," the phone makes the call. If you say "No," the phone suggests the second one in the list, and so on, up to the fourth result.

Train Commands (Menu

1. Press Left Soft Key  **Menu**.
2. Press  Voice.
3. Press  Voice Settings.
4. Press  Train Commands.
5. Select Training On/Training Off and press  .





Using Phone Menus


Train Digits (Menu)

1. Press Left Soft Key  Menu.
2. Press  Voice.
3. Press  Voice Settings.
4. Press  Train Digits.
5. Select Training On/Training Off and press  .




Driving Mode (Menu)

Allows you to switch the hands-free calling on and off during driving without the need for Car Kit.

1. Press Left Soft Key  Menu.
2. Press  Voice.
3. Press  Driving Mode.
4. Select Activate/Deactivate and press  .

NOTE: Immediate setting into Driving Mode when  is pressed for three seconds after closing the folder.

Help (Menu)

1. Press Left Soft Key  Menu.
2. Press  Voice.
3. Press  Help.

easyedgeSM (Menu)

easyedgeSM allows you to do more than just talk on your phone. easyedgeSM is a technology and service that allows you to download and use applications on your phone. With easyedgeSM, it is quick and easy to personalize your phone to your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of software available, from Ring Tones to games productivity tools, you can be assured that you can find something useful, practical, or down right entertaining. Plus, there are constantly new applications being created for your use.

You can download applications and use easyedgeSM anywhere on the your carrier's network, as long as your handset has a digital signal available.

Most applications do not use a network connection while in use. While downloading an application, any incoming calls will automatically be sent to your voicemail, if available. If you do not have voicemail, downloading will not be interrupted by an incoming call, however the caller will receive a busy signal.

When using an application an incoming call will automatically pause the application and allow you to answer the call. When you complete your call, you can resume using the application.

You can personalize your phone by adding new applications and by removing old ones, at any time.

If you need more memory, but still want to be able to access the application later, try using Disable. Disabling keeps the application usage and purchase information, but removes it from memory. To restore an application, go to Options, select the application and click on Restore.

Using Phone Menus

Only removing an application deletes it completely from the memory of the phone. To restore an application once it has been removed will require that you pay and download it again.

Start: allows you to download selected applications while displaying the **easyedgeSM** application list relayed from the **easyedgeSM** server in connection. Gives you information about the **easyedgeSM** selection key.

Accessing the Options



1. Press Left Soft Key **Menu**.
2. Press **5 JKL** **easyedgeSM**
3. Options from here:
 - **1** **Apps**: To add, delete, or disable **easyedgeSM** applications.
 - **2 ABC** **Help**: To view information about **easyedgeSM** applications.

Apps (Menu **5 JKL** **1**)

1. Press Left Soft Key **Menu**.
2. Press **5 JKL** **easyedgeSM**
3. Select **1** **Apps**.
4. Press **OK**.
5. Select the Icon you want and press **OK**.
 - **easyedgeSM shop**
 - **Settings**
 - **Help**

Start: allows you to download selected applications while displaying the **easyedgeSM** application list relayed from the **easyedgeSM** server in connection.

Help (Menu **5 JKL** **2 ABC**)

Gives you information about the **easyedgeSM** selection key.

1. Press Left Soft Key **Menu**.
2. Press **5 JKL** **easyedgeSM**
3. Select **2 ABC** **Help**.
4. Press **OK**.

NOTE: Pressing the left arrow key **←** will start **easyedgeSM**.

Using Phone Menus

My Media (Menu **6^{MNO}**)

This menu allows you to download and use a wide variety of graphics, sounds, and more.

Accessing the Options



1. Press Left Soft Key **Menu**.
2. Press **6^{MNO}** My Media.
3. Select a sub-menu.
 - **1** Graphics
 - **2^{ABC}** Music
 - **3^{DEF}** Message Objects

Graphics (Menu **6^{MNO}** **1**)

Allows you to choose the background displayed on the phone.

1. Press Left Soft Key **Menu**.
2. Press **6^{MNO}** My Media.
3. Press **1** Graphics.
4. Use **Up** to highlight your selection then press **OK** to select.

Music (Menu **6^{MNO}** **2^{ABC}**)

Allows you to choose the ring tones heard for incoming calls.

1. Press Left Soft Key **Menu**.
2. Press **6^{MNO}** My Media.
3. Press **2^{ABC}** Music.
4. Use **Up** to highlight your selection then press **OK** to select.

Message Objects (Menu **6^{MNO}** **3^{DEF}**)

Allows you to set objects to correspond with your messages.

1. Press Left Soft Key **Menu**.
2. Press **6^{MNO}** My Media.
3. Press **3^{DEF}** Message Objects.
4. Press the corresponding number key to select one of the following:
 - [1] Small Pictures / [2] Large Pictures / [3] Sounds / [4] Animations
5. Use **Up** to highlight your selection then press **OK**.








Using Phone Menus

Tools (Menu)

Your phone tools include a Scheduler, Alarm Clock, Voice Memo, My Shortcut, Notepad, EZ Tip Calculator, Calculator, and World Clock.














Accessing the Options



1. Press Left Soft Key  **Menu.**
2. Press  Tools.
3. Select a sub-menu.
 -  Alarm Clock
 -  Notepad
 -  Ez Tip Calc
 -  Calculator
 -  World Clock

Alarm Clock (Menu)

Allows you to set one of four alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time, **Alarm 1** (or 2 or 3, as applicable) will be displayed on the LCD screen and the alarm will sound.

1. Press Left Soft Key  **Menu.**
2. Press  Tools.
3. Press  Alarm Clock.
4. Select the alarm you want to edit.
[1] Alarm 1 / [2] Alarm 2 / [3] Alarm 3 / [4] Quick Alarm
5. Use  to highlight the alarm time then press .
6. Set the time for alarm and press .
7. Use  to highlight Once (recurring setting).
8. Press  to select one of the following:
Once / Daily / Mon-Fri / Weekends
9. Use  to highlight Ring (ring type setting) and press .
10. Use  to select one of the available alarm ring types and press .
11. Press Left Soft Key  **Save.**

Using Phone Menus

Notepad (Menu **7** **FOOS** **2** **ABC**)

Allows you to read, add, edit, and erase notes to yourself.

1. Press Left Soft Key **Menu**.
2. Press **7** **FOOS** Tools.
3. Press **2** **ABC** Notepad.
4. Press Left Soft Key **Add** to write a new note.

Ez Tip Calc (Menu **7** **FOOS** **3** **DEF**)

Allows you to quickly and easily calculate the amounts for a bill with the amount of the bill, the amount of the tip and the number of people as variables.

1. Press Left Soft Key **Menu**.
2. Press **8** **UV** Tools.
3. Press **3** **DEF** Ez Tip Calc.

Calculator (Menu **7** **FOOS** **4** **GHI**)

Allows you to calculate simple mathematical computations. You can enter numbers up to the second decimal place.

1. Press Left Soft Key **Menu**.
2. Press **7** **FOOS** Tools.
3. Press **4** **GHI** Calculator.

NOTE: Calculations can be made with up to 32 characters at one time (e.g., 63+78-21 would be 8 characters).

World Clock (Menu **7** **FOOS** **5** **JKL**)

Allows you to determine the current time in another time zone or country.

1. Press Left Soft Key **Menu**.
2. Press **7** **FOOS** Tools.
3. Press **5** **JKL** World Clock.

Using Phone Menus

Settings (Menu **8**)

The Setup menu has options to customize your phone.

Accessing the Options



1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Select a sub-menu.

- **1** Sounds
- **2** Display
- **3** System
- **4** Security
- **5** Call Setup
- **6** Location



Sounds (Menu **8** **1**)

Options to customize the phone's sounds.

Ringers (Menu **8** **1** **1**)

Sets ring tones for types of incoming calls.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **1** Sounds then press **1** Ringers.
4. Select Caller ID / No Caller ID / Restrict.
5. Use **Up** to select a ringer then press **OK** to save the sound.

Key Tone (Menu **8** **1** **2**)

Allows you to set the Key Tone length and touch tone playback speed.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **1** Sounds then press **2** Key Tone.
4. Select either of the following then press **OK**.
 - Normal Sends out a tone for a fixed period of time even if you keep the key pressed.
 - Long Sends out a continuous tone for as long as you keep the key pressed.

NOTE: Dual-Tone Multi Frequency (DTMF) Signaling by the simultaneous transmission of two tones, one from a group of low frequencies and another from a group of high frequencies. Each group of frequencies consists of four frequencies. Setting the Key Beep length to Long will extend the DTMF tone.

Volume (Menu **8** **1** **3**)





Allows you to set various volume settings.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **1** Sounds then press **3** Volume.
4. Select Ringer / Earpiece / Key Beep / Speaker Phone.
5. Adjust the volume of the ringer with **Up** then press **OK** to save the setting.

Using Phone Menus

Alerts (Menu)

Allows you to set any of the four Alert options to either On or Off.

1. Press Left Soft Key  Menu.
2. Press  Settings.
3. Press  Sounds then press  Alerts.
4. Select an alert option.

Service Change (Menu)

Alerts you when service changes. When you enter a service area, the phone displays *Entering Service Area* message. When you leave a service area, the phone displays *Leaving Service Area* message.

Minute Beep (Menu)




Alerts you 10 seconds before the end of every minute during a call.

Call Connected (Menu)

Alerts you when the call is connected.







Back To Top (Menu)

Alerts you when you scroll through the end of a menu list.

5. Select an option and press .
6. Set Off / On with  then press .

Power On/Off Tone (Menu)

Allows you to set the phone to sound a tone when the phone is powered on, powered off, or both.

1. Press Left Soft Key  Menu.
2. Press  Settings.
3. Press  Sounds.
4. Press  Power On / Off Tone.
5. Set your selection with .
6. Press  to save the setting.

Using Phone Menus

Display (Menu **8** **2**)

Options to customize the phone's display screen.

Banner (Menu **8** **2** **1**)

Allows you to enter a string of up to 16 characters which display on the LCD screen.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **2** Display.
4. Press **1** Banner.
5. Enter you banner text then press **OK**.

Backlight (Menu **8** **2** **2**)

Allows you to set the duration for illuminating the backlight. Main LCD, front LCD, and Key Light are set separately.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **2** Display.
4. Press **2** Backlight.
5. Choose a Backlight sub-menu and press **OK**.
[1] Main LCD / [2] KeyLight Timer
6. Choose a setting and press **OK**.
1 Timer / **2** Brightness

If an amount of time is set for the timer option, the time starts after the last key was pressed.

Main LCD (Menu **8** **2** **2** **1**)

Timer Options

- 7 seconds
- 15 seconds
- 30 seconds
- **Always off** means that the backlight is never on.
- **Always on** means that the backlight is always on.

Brightness

Sets the brightness level of the backlight.

Key Light Timer (Menu **8** **2** **2** **2**)

- 7 seconds
- 15 seconds
- **Always off** means that the key light is never on.
- **Always on** means that the key light is always on.

Using Phone Menus

Screens (Menu **8** **2** **5**)

Allows you to choose the kind of background to be displayed on the phone.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **2** Display.
4. Press **5** Screens.
5. Select Wallpaper / Power On / Power Off.
6. Select from different screens then press Left Soft Key **Save**.

Menu Style (Menu **8** **2** **4**)

Allows you to choose whether you want the menu to show as a list or as icons.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **2** Display.
4. Press **4** Menu Style.
5. Select Icon or List and press **OK**.

Clocks (Menu **8** **2** **5**)

Allows you to choose the kind of clock to be displayed on the LCD screen.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **2** Display.
4. Press **5** Clocks.
5. Select Normal / Analog / Digital then press Left Soft Key **Save**.

Theme Colors (Menu **8** **2** **6**)

Allows you to choose the color of the background screen.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **2** Display.
4. Press **6** Theme Colors.
5. Select Default / Green / Violet / Orange then press **OK**.

Using Phone Menus

Status LED Colors (Menu **8** **2** **7**)

Allows you to choose the color of the background screen.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **2** Display.
4. Press **7** Status LED Colors.
5. Select the color which you want to assign.
 - Incoming Calls / New SMS Alerts / Reminders / Roaming Calls / Battery Low

Contrast (Menu **8** **2** **8**)

Allows you to set the level of contrast for your LCD screen.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **2** Display.
4. Press **8** Contrast.
5. Use **←** to adjust the contrast level.

Fonts (Menu **8** **2** **9**)

Allows you to set the size and color of the font.

1. Press Left Soft Key **Menu**.
2. Press **9** Settings.
3. Press **2** Display.
4. Press **9** Fonts.

Calling Digits (Menu **8** **2** **9** **1**)

1. Select Size / Color.
2. Press **↕** until you find the size or color you desire then press **OK** to save.

Text Editor (Menu **8** **2** **9** **2**)

1. Select Size / Color.
2. Press **↕** until you find the size or color you desire then press **OK** to save.

Language (Menu **8** **2** **0**)

Allows you to set the bilingual feature according to your preference. Choose between English and Spanish.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **2** Display.
4. Press **0** Language.
5. Set English / Spanish with **↕** then press **OK**.

Using Phone Menus

System (Menu **8^{TUV}** **3^{DEF}**)

The System menu allows you to designate specific system network settings.

Select System (Menu **8^{TUV}** **3^{DEF}** **1[☰]**)

Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Press Left Soft Key **Menu**.
2. Press **8^{TUV}** Settings.
3. Press **3^{DEF}** System.
4. Press **1[☰]** Select System.
5. Select Home Only / Automatic A / Automatic B then press **OK**.

Set NAM (Menu **8^{TUV}** **3^{DEF}** **2^{ABC}**)

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Press Left Soft Key **Menu**.
2. Press **8^{TUV}** Settings.
3. Press **3^{DEF}** System.
4. Press **2^{ABC}** Set NAM.
5. Select NAM1 / NAM2 then press **OK**.

Auto NAM (Menu **8^{TUV}** **3^{DEF}** **3^{DEF}**)

Allows the phone to automatically switch between programmed telephone numbers corresponding to the service provider area.

1. Press Left Soft Key **Menu**.
2. Press **8^{TUV}** Settings.
3. Press **3^{DEF}** System.
4. Press **3^{DEF}** Auto NAM.
5. Select On / Off then press **OK**.

Serving System (Menu **8^{TUV}** **3^{DEF}** **4^{Call}**)

Identifies the channel number of a system that is served and a SID Number. This information is only for technical support.

1. Press Left Soft Key **Menu**.
2. Press **8^{TUV}** Settings.
3. Press **3^{DEF}** System.
4. Press **4^{Call}** Serving System.

Using Phone Menus



Security (Menu **8^{UV}** **4^{CH}**)

The Security menu allows you to secure the phone electronically.

Lock Phone (Menu **8^{UV}** **4^{CH}** **1^{ES}**)

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls.



You can modify the lock code using the New Lock code within the Security menu.

1. Press Left Soft Key  **Menu**.
2. Press **8^{UV}** Settings.
3. Press **4^{CH}** Security.
4. Enter the four-digit lock code.
The lock code is commonly the last 4 digits of your phone number.
5. Press **1^{ES}** Lock Phone.
6. Select an option then press .

Unlock	The phone is never locked (Lock mode can be used).
Lock	The phone is always locked. When locked, you can receive incoming calls or make only emergency calls.
On Power Up	The phone is locked when it is turned on.




Restrict (Menu **8^{UV}** **4^{CH}** **2^{ABC}**)

Allows you to restrict outgoing calls. If you set this feature to On, you can only place calls to emergency numbers and phone numbers stored in your Contacts. You can still receive calls in the restrict mode.

1. Press Left Soft Key  **Menu**.
2. Press **8^{UV}** Settings.
3. Press **4^{CH}** Security.
4. Enter the four-digit lock code.
5. Press **2^{ABC}** Restrict.
6. Select On / Off then press .

Emergency #s (Menu **8^{UV}** **4^{CH}** **3^{DEF}**)

Allows you to enter 3 emergency numbers. You can call these emergency numbers and 911, even when the phone is locked or restricted.

1. Press Left Soft Key  **Menu**.
2. Press **8^{UV}** Settings.
3. Press **4^{CH}** Security.
4. Enter the four-digit lock code.
5. Press **3^{DEF}** Emergency #s.
6. Select emergency number using .
7. Enter an emergency phone number then press .

Using Phone Menus

Change Code (Menu **8** **4** **4**)

Allows you to enter a new four-digit lock code.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **4** Security.
4. Enter the four-digit lock code.
5. Press **4** Change Code.
6. For confirmation, it will ask you to enter the new lock code again.

Erase Contacts (Menu **8** **4** **5**)

Allows you to erase all of your Contacts at once.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **4** Security.
4. Enter the four-digit lock code.
5. Press **5** Erase Contacts.
6. Select Erase all #s then press **OK**.

Reset Default (Menu **8** **4** **6**)

Allows you to reset your phone to the factory default settings.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **4** Security.
4. Enter the four-digit lock code.
5. Press **6** Reset Default.
6. Press **OK**, select Revert then press **OK**.

Call Setup (Menu **8** **5**)

The Call Setup menu allows you to designate how the phone handles both incoming and outgoing calls.

Auto Retry (Menu **8** **5** **1**)

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **5** Call Setup.
4. Press **1** Auto Retry.
5. Select Off / Every 10 seconds / Every 30 seconds / Every 60 seconds then press **OK**.

Answer Call (Menu **8** **5** **2**)

Allows you to determine how to initiate an answered call.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **5** Call Setup.
4. Press **2** Answer Call.
5. Select Flip Open / Any Key / TALK Only then press **OK**.

Using Phone Menus

Auto-Answer (Menu **8** **5** **3**)

Allows you to select the number of rings before the phone automatically answers a call. This feature is intended for use with hands free devices, but is an independent feature of the phone and must be manually turned on/off when connected or disconnected from the device.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **5** Call Setup.
4. Press **3** Auto-Answer.
5. Select an option then press **OK**.
 - **Off**
 - **After 1 ring** When you have an incoming call, the phone automatically responds after 1 ring with the clamshell either opened or closed.
 - **After 3 rings** When you have an incoming call, the phone automatically responds after 3 rings with the clamshell either opened or closed.
 - **Ans. Machine Speaker On/Off** The phone automatically responds with the answering machine.

One-Touch Dial (Menu **8** **5** **4**)

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Disable, Speed Dial numbers designated in your Contacts will not function.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **5** Call Setup.
4. Press **4** One-Touch Dial.
4. Select Enable / Disable then press **OK**.

Auto Volume (Menu **8** **5** **5**)

Provides a better audio experience by enabling the Auto Volume feature to control the dynamic range and volume of the sending and receiving voice across different levels of speaker and environments.

1. Press Left Soft Key **Menu**.
2. Press **8** Settings.
3. Press **5** Call Setup.
4. Press **5** Auto Volume.
5. Select On / Off then press **OK**.

Using Phone Menus

TTY Mode (Menu **8**^{LEV} **5**^{IKL} **6**^{MNO})

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Press Left Soft Key **Menu**.
2. Press **8**^{LEV} Settings.
3. Press **5**^{IKL} Call Setup.
4. Press **6**^{MNO} TTY Mode.
5. Select TTY Full / TTY+TALK / TTY+HEAR / TTY Off then press **OK**.

Location (Menu **8**^{LEV} **6**^{MNO})

Menu for GPS (Global Positioning System: Satellite assisted location information system) mode.

1. Press Left Soft Key **Menu**.
2. Press **8**^{LEV} Settings.
3. Press **6**^{MNO} Location.
4. Select Location On / E911 Only then press **OK**.

 
NOTE: GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors or otherwise.

Using Phone Menus

Phone Info (Menu **9^{MWZ}**)

The Phone Info menu provides you with specific information pertaining to your phone model.

Accessing the Options

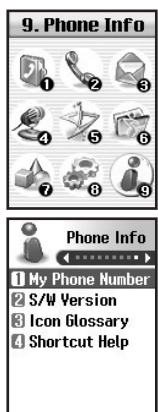

1. Press Left Soft Key **Menu**.
2. Press **9^{MWZ}** Phone Info.
3. Select a sub-menu.
 - **1^{ES}** My Phone Number
 - **2^{ABC}** S/W Version
 - **3^{DEF}** Icon Glossary
 - **4^{GHI}** Shortcut Help

My Phone Number (Menu **9^{MWZ}** **1^{ES}**)

Allows you to view your phone number.

1. Press Left Soft Key **Menu**.
2. Press **9^{MWZ}** Phone Info.
3. Press **1^{ES}** My Phone Number.

S/W Version (Menu **9^{MWZ}** **2^{ABC}**)

Allows you to view the software, PRL, ERI, and browser version.

1. Press Left Soft Key **Menu**.
2. Press **9^{MWZ}** Phone Info.
4. Press **2^{ABC}** S/W Version.

Icon Glossary (Menu **9^{MWZ}** **3^{DEF}**)

Allows you to view all the icons and their meanings.

1. Press Left Soft Key **Menu**.
2. Press **9^{MWZ}** Phone Info.
3. Press **3^{DEF}** Icon Glossary.

Shortcut Help (Menu **9^{MWZ}** **4^{GHI}**)

Allows you to view condensed information about using the phone.

1. Press Left Soft Key **Menu**.
2. Press **9^{MWZ}** Phone Info.
3. Press **4^{GHI}** Shortcut Help.
 - From the Standby screen, press **BACK**.

Safety

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *
NCRP Report 86 (1986)
ICNIRP (1996)

American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Safety

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives.) Optional for each phone manufacturer.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety

Battery Safety

- Do not disassemble.
- Do not short-circuit.
- Do not expose to high temperatures: 60 °C (140 °F).
- Do not incinerate.

Battery Disposal

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- Do not dispose of your battery in fire or with hazardous or flammable materials.

Charger and Adapter Safety

- Using the wrong battery charger could damage your phone and void your warranty.
- The charger and adapter are intended for indoor use only.
- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.

Battery Information and Care

- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.
- The battery does not need to be fully discharged before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.

- Recharge the battery after long periods of non-use to maximize battery life.
- Do not expose the battery charger to direct sunlight or use it in areas of high humidity, such as a bathroom.
- Battery life will decrease if exposed to extreme hot or cold temperatures.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, MiniBrowser, and data connectivity kits affect battery life and talk/standby times.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user's guide in an accessible place at all the times after reading it.

Explosion, Shock, and Fire Hazards

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- Do not use your phone in high explosive areas as the phone may generate sparks.
- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.
- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.

Safety

- Do not disassemble the phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Do not disassemble the battery as it may cause electric shock, short-circuit, or fire.
- Do not expose the phone to excessive vibration or sharp impact.
- Never place your phone in a microwave oven as it will cause the battery to explode.

General Warnings and Cautions

- Store the battery in a place out of reach of children.
- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Do not hold or let the antenna come in contact with your body during a call.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.

- Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- Use only the antenna provided or approved by LG. Unauthorized antennas, modifications or attachments may affect the quality of phone call, damage the phone, or result in violation of FCC regulations.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not use the phone in areas where its use is prohibited. (For example: aircraft).
- Do not expose the phone to high temperatures or high humidity.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.

Safety

FDA Consumer Update

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

Safety

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don’t know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since

December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones.

Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

Safety

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF). The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radio frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radio frequency energy (RF) exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety

standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

Safety

9. What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects.

Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

Safety

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones

(<http://www.fda.gov/cdrh/phones/index.html>)

Federal Communications Commission (FCC) RF Safety Program

(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection

(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project

(<http://www.who.int/emf>)

National Radiological Protection Board (UK)

(<http://www.nrpb.org.uk/>)

Consumer Information on SAR (Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.21 W/kg and when worn on the body, as described in this user guide, is 0.99 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJLX5550. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability.



Battery

Two batteries are available. The standard battery, and the extended battery.



Cigarette Lighter Charger

The cigarette lighter charger, model CLC-42W, allows you to operate the phone and trickle charge the phone's battery from your vehicle. It takes 5 hours to charge a completely discharged battery.



Headset

The headset, model 1000, connects to your phone allowing hands-free operation. It includes earpiece, microphone, and integrated call answer / termination button.



Standard Charger

The standard charger, model AC-100 or 8102, allows you to power your phone using.

Input Voltage: AC100~240V 50/60Hz
0.2A~

Output Voltage: DC 5V, 1A



Holster

Warranty Information

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the unit and enclosed accessories shall be a period of one (1) year from the date of original purchase. The remaining warranty period for the unit being repaired or replaced shall be determined by presentation of the original sales receipt for the purchase of the unit.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser / end user.
- (3) The limited warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories, and all Canadian Provinces.
- (4) The external housing and cosmetic parts shall be free of major defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information satisfactory to LG to prove the date of purchase or exchange.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the product in other than its normal and customary manner.
- (2) Defect or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG,

including damage caused by shipping, blown fuses, or spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) Alleged defects or malfunctions of the product if the Customer Service Department at LG was not notified by the consumer during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including but not limited to any implied warranty of marketability merchantability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG INFOCOMM U.S.A., INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

Warranty Information

Some states do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following telephone number from anywhere in the continental United States:

Tel. 1-800-793-8896 or visit www.lgeservice.com. Please call or write for the location of the LGE authorized service center nearest you and the procedures for obtaining warranty claims.

MMBB0111001(1.0) Date: 2004. [2.27](#)

Index

1x Packet Counter 63
2-sec pause 47

A

Abc 29, 30, 33
Alarm Clock 93
Alert(s) 84, 98
Alphanumeric Keypad 15
Announce Alerts 84
Answer Call 111
Auto Answer 112
Auto Delete 76
Auto NAM 107
Auto Retry 111
Auto Save 76
Auto Volume 113

B

Back To Top 98
BACK Key 15
Backlight 100
Banner 100
Battery 18, 19
Best Match 101
Bilingual 9
Brightness 101

C

Calculator 95
Call Connected 98
Call Ringer 37
Call Setup 111
Call Timer 63
Call Waiting 26
Callback # 76
Caution(s) 13
CDMA 9, 10
Clocks 103
Code Division Multiple Access (CDMA) 9, 10

Contacts 16, 34, 36, 41, 43, 44, 45, 49, 51, 55, 56
Contrast 104

D

Default Numbers 42
Deleting 45
Dialed Calls 61
Direct Sequence Spread Spectrum (DSSS) 10
Direct View 76
Display 100

E

E-mail 57
Earpiece 15
[easyedgeSM](#) 87
Edit Voice Mail box # 77
Emergency #s 109
END/PWR 15
Entry Mode 77
Erase All 78
Erase Calls 62
Erase Contacts 110
Ez Tip Calc 94

F

FDA 126
Flip 15
Font Size 77
Fonts 105

G

Graphics 90
Group 36

H

Hard pause 47
Headset Jack 15

Index

I

Icon Glossary 117
Inbox 72

K

Key Functions 28
Key Light Timer 101
Key Tone 97

L

Language 105
LCD 21
LCD Screen 15
Left Soft Key 15
Location 115
Lock Mode 25
Lock Mode Key 15
Lock Phone 108

M

Main LCD 101
Making Calls 22
Manner Mode 15, 24
Memo 38
Memory 49
Menu(s) 54
Message Key 15
Message Objects 91
Message Ringer 37
Messages 16, 64
Microphone 15
Missed Calls 62
Msg Alerts 76
Msg Settings 75
Multi-tap 29, 30, 33
Music 91
Mute Function 25
My Media 17, 90
My Phone Number 116

N

Navigation Key 15
New Message 67
New Number 57
NEXT Key 32
Notepad 94
Numbers 29, 31

O

On / Off 20
One-Touch Dial 113
Outbox 74

P

Pauses 47, 48
Phone Info 17, 116
Picture ID 38

Q

Quick-Text 77

R

Radio Frequency Signal 118
Received Calls 61
Receiving Calls 23
Recent Calls 16, 60
Redialing Calls 23
Reset Default 110
Restrict 109
Right Soft Key 15
Ringers 96

S

S/W Version 117
Safety 118
SAR 133
Saved 74
Scheduler 82
Screen Icons 21
Screens 102

Searching 49, 50
Secret Setting 39
Security 108
Select System 106
SEND 15
Service Change 98
Serving System 107
Set NAM 106
Settings 17, 96
Shortcut Help 117
Side Keys 15
Signal Strength 20
Signature 76
Silence All 15
Silence All Mode 24
Smiley 29, 31
Soft Keys 88
Sounds 96
Specific Absorption Rate 133
Speed Dial 40, 46, 59
Speed Dialing 27, 52
Symbol 29, 31
System 106

T

T9 29, 30, 32, 33
T9Word 29, 30, 32
Text Editor 105
Text Input 28
Theme Colors 103
TIA 118
Timer 101
Tools 17, 92
TTY Mode 114

U

URL 39

V

Voice 79
Voice Commands 84
Voice Mail 66
Voice Memos 83
Voice Scheduler 82
Voice Settings 84
Volume 26, 97

W

WARNING 12
Warnings 124
WARRANTY 138
World Clock 95

