




MOTOMANUAL

V360
GSM

motorola.com

HELLOMOTO

Introducing your new Motorola V360 GSM wireless phone. Here's a quick anatomy lesson.

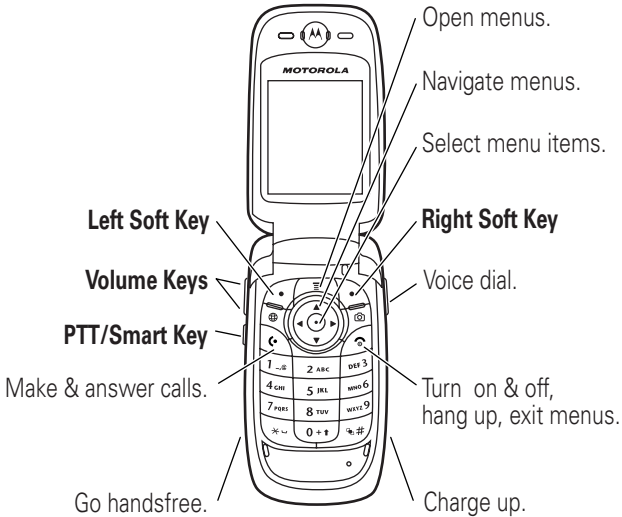

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2005.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 6809495A79-0

feature locator

main menu



Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times *
- Call Cost *
- Data Times *
- Data Volumes *



Phonebook



Games & Apps



Tools

- SIM Tool Kit Apps *
- Calculator
- Datebook
- Shortcuts
- Alarm Clock
- Dialing Services
 - Fixed Dial



Messages

- Create Message
- Email Msgs
- Message Inbox
- Voicemail
- Browser Msgs
- Info Services *
- Quick Notes
- Outbox
- Drafts
- Media Templates



Internet

- Internet
- Browser Setup



Multimedia/Sounds

- Camera
- Video Camera
- Sounds
- Pictures
- Videos



Bluetooth Link

- Handsfree
- Device History
- Setup



Settings

- (see next page)

* optional features

This is the standard main menu layout. Your phone's menu may be a little different.

settings menu



Personalize

- Home Screen
- Main Menu
- Skin
- Greeting
- Wallpaper
- Screen Saver



Ring Styles

- Style
- style Detail



Connection

- Sync
- USB Settings



Call Forward *

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Forward Status



In-Call Setup

- In-Call Timer
- My Caller ID
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- TTY Setup *
- Scroll
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Active Line *
- Battery Meter
- Storage Devices
- Other Information



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Network

- New Network
- Network Setup
- Available Networks
- My Network List *
- Call Drop Tone



Security

- Phone Lock
- Lock Application
- Fixed Dial
- Restrict Calls *
- Call Barring *
- SIM PIN
- New Passwords
- Certificate Mgmt *



Java Settings

- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Backlight

* optional features

contents

feature locator	3	customize	38
essentials	7	ring style	38
about this guide	7	time & date	39
SIM card	8	wallpaper	39
battery	9	screen saver	40
turn it on & off	11	display appearance	40
make a call	12	answer options	41
answer a call	12	calls	42
your phone number	12	turn off a call alert	42
main attractions	13	recent calls	42
take & send a photo	13	redial	43
record & send a video	15	return a call	44
digital audio player	16	notepad	44
cable connections	18	hold or mute a call	44
memory card	18	call waiting	45
Bluetooth® wireless	21	caller ID	45
basics	25	emergency calls	46
display	25	international calls	46
menus	28	1-touch dial	46
text entry	30	voicemail	47
volume	34		
navigation key	35		
external display	35		
handsfree speaker	36		
codes & passwords	36		
lock & unlock phone	37		

other features	48
advanced calling	48
phonebook	50
messages	55
personalizing	58
call times & costs	60
handsfree	61
network	62
personal organizer	62
security	64
fun & games	64
service and repairs	67
SAR Data	68
index	70



essentials



CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

about this guide

This guide shows how to locate a menu feature as follows:

Find it: Press  > **Recent Calls** > **Dialed Calls**

This example shows that, from the home screen, you press  to open the menu. Highlight and select  **Recent Calls**, then highlight and select **Dialed Calls**.

Press the *navigation key*  to highlight a menu feature. Press the *center key*  to select the highlighted menu feature.

symbols



This means a feature is network/subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.


SIM card

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries.


To insert and use a memory card, see page 18.

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.


1

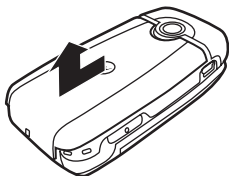


2

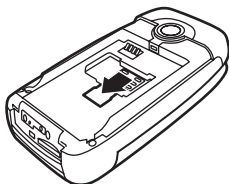

3

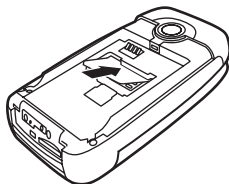


4

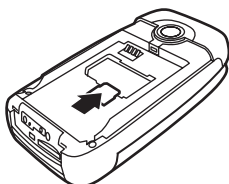


battery

battery installation


1

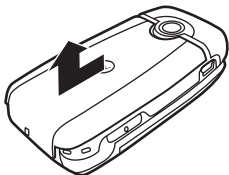

2

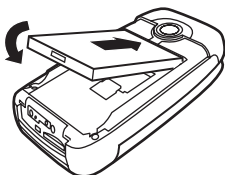


3

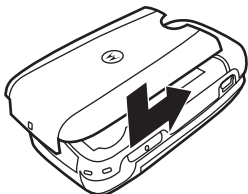

battery charging


New batteries are not fully charged. Plug the travel charger into your phone and an electrical outlet. Your display shows **Charge Complete** when finished.

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

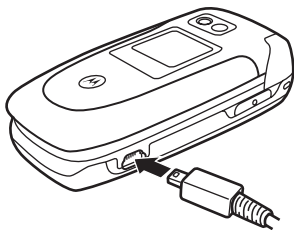

You can charge your battery by connecting a cable from your phone's mini-USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct software drivers installed. Cables and software drivers are available in Motorola Original data kits, sold separately.



If you set **Memory Card** as your phone's default USB connection, you need to return to the standard setting before you can charge your phone battery. To return to the standard setting: Press the  key, then select the following options: **Settings** > **Connectivity** > **USB Settings** > **Default Connection** > **Data/Fax Connection**.

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.



- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.




Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.


Before using your phone, read the battery safety information in the “Safety and General Information” section included in the gray-edged pages at the back of this guide.

turn it on & off


To turn on your phone, press and hold  for a few seconds or until the display turns on. If prompted, enter your 6-digit SIM card PIN code and/or 4-digit unlock code.




Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your display shows **SIM Blocked**. Contact your service provider.


To turn off your phone, press and hold  for 2 seconds.


make a call


Enter a phone number and press  to make a call.

To “hang up,” close the flip or press .



answer a call


Note: Your phone cannot receive data over an EDGE network while it is playing videos or some sound files. The EDGE  status indicator appears at the top of your display when you can receive data over an EDGE network.




When your phone rings and/or vibrates, just open the flip or press  to answer.

To “hang up,” close the flip or press .

your phone number

From the home screen, press   to see your number.


Tip: Want to see your phone number while you’re on a call? Press  > **My Tel. Numbers**.


You can edit the name and phone number stored on your SIM card. From the home screen, press  , select an entry, and press the **Edit/Add** key.  If you don’t know your phone number, contact your service provider.

main attractions


You can do much more with your phone than make and receive calls!

take & send a photo


Press  to see the camera viewfinder:

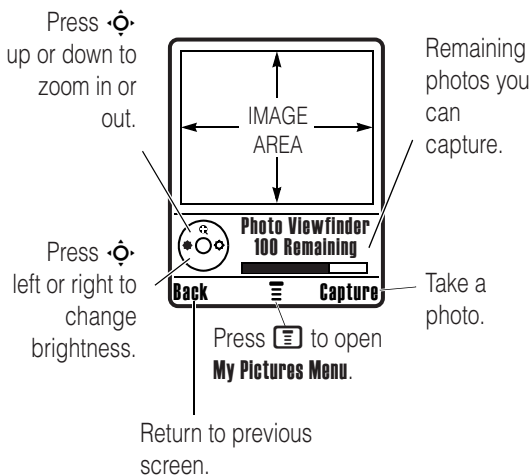


- 1 Point the camera lens at the photo subject.

You can press  to open the **Pictures Menu**. See the table after this procedure.

- 2 Press the **Capture** key to take a photo.
- To delete the photo and return to the active viewfinder, press the **Discard** key.
 - To store or send the photo, press the **Store** key.

When the viewfinder is active, press  to open the **Pictures Menu**:


options	
Go To Pictures	See stored pictures and photos.
Phone Memory / Memory Card	Choose to see pictures stored on your phone or memory card.  Note: Your phone stores pictures on your memory card unless you select Phone Memory . High resolution photos can be stored only on your memory card.
Auto-Timed Capture	Set a timer for the camera to take a photo.
Pictures Setup	Open the setup menu to adjust photo settings.
View Free Space	See how much memory remains. Note: Your phone stores any content that you add, like ring tones or games, in <i>user memory</i> . Your service provider may store some content in user memory before you receive the phone.

send a stored photo in a message

To send a picture stored on your phone:


Find it: [Menu] > Messages > Create Message > New Multimedia Msg



- 1 Scroll to the picture you want and press **Insert Media**.
- 2 Enter the message text and press **Send To**.
- 3 Scroll to a recipient address and press the *center key* .
- 4 Press the **Send** key to send the message.

record & send a video

Press [Menu] > Multimedia/Sounds > Video Camera to see the video viewfinder.

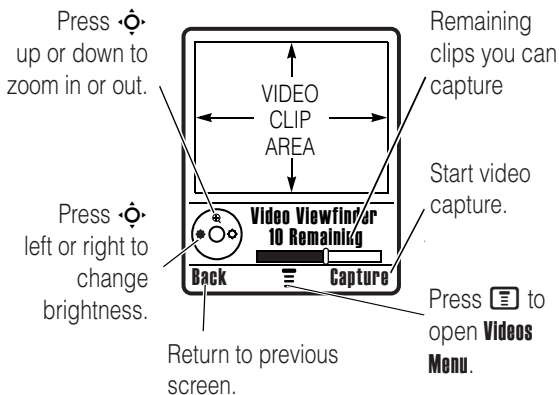

Note: You can zoom only before you start recording. The number of clips remaining is an estimate.


If you want to send your video in a message, the video length must be set to MMS. To set length, press

 > **Videos Setup** > **Video Length**.

Point the camera lens at the video subject, then:

- 1 Press the **Capture** key to start the video.
- 2 Press the **Stop** key to stop the video.
- 3 To store the video, press the **Store** key.

or

To send the video in a text message, press the **Store** > **Send in Message**. Enter text and press **Store**, then scroll to a recipient address and press the *center key*  to select it. To send the message, press the **Send** key.

or


 







Press the **Discard** key to delete the video and return to the active viewfinder.


digital audio player

Note: You cannot use the audio player with a USB cable connected to your phone.



Your phone has an audio player in its **Games & Apps**:

Find it: Press  > **Games & Apps** > **Digital Audio Player**

Press  left or right to highlight a button at the top of the audio player: play , pause , stop , previous , next , repeat , shuffle , and visualizer on/off 

Press  up or down to highlight an option:


options	
Playlists	Create or play a playlist of songs.
Artists	Select an artist to show or play their songs.
Albums	Select an album to show or play its songs.
Songs	Show and play individual songs. Note: All of your phone's songs appear in the Songs list. Some songs do not have any Artist , Album , or Genre information stored, so they don't appear in those lists.
Genres	Select a type of music to show or play songs.
Help	Show instructions on how to use the audio player
About	Show audio player version information


Tip: If you want music in a hurry, you can create a shortcut to the audio player. Highlight **Digital Audio Player** in the **Games & Apps** list, then press and hold . To use the shortcut from the home screen, press  and the shortcut key number.

To download songs to your phone, see page 65. To copy files between your phone and a computer, see page 20.

Note: Your phone cannot play MP3 files that have a bit rate higher than 192 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.

cable connections


 Your phone has a mini-USB port so you can connect it to a computer to transfer data.

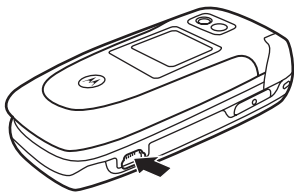

Note: Motorola Original USB data cables and supporting software are sold separately. Check your computer or hand-held device to determine the type of cable you need. To **transfer data** between your phone and computer, you must install the software included with the Motorola Original data kit. See the data kit user's guide for more information.



memory card


You can use a removable memory card with your phone to store and retrieve multimedia objects (such as photos and sounds). 

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

install a memory card


- 1 Remove the battery door, if necessary.
- 2 Press the card in until it clicks into place.
- 3 Replace the battery door.

Do not remove your memory card while your phone is using it or writing files on it.

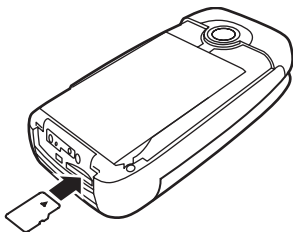

see and change memory card information

Find it: Press  > **Settings** > **Phone Status** > **Storage Devices**

- 1 Press  to highlight the memory card.
- 2 Press the **Details** key to see the memory card information. Your phone stores any content that you add, like ring tones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

or

Press  to see the **Storage Device** menu, which lets you **Format** or **Rename** the memory card.

To see memory card files, select **Memory Card** in any file list (such as **Pictures**). To see files stored on your phone, select **Phone Memory** instead.

connect the memory card to a computer

You can access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Press  > **Settings** > **Connection** > **USB Settings** > **Memory Card**.

This directs the USB connection to your memory card. Attach the Motorola Original USB cable to the accessory port on your phone and to an available USB port on your computer. Then follow these steps:



On your computer:

- 1 Open your "My Computer" window, where your phone's memory card shows as a "Removable Disk" icon.
- 2 Click on the "Removable Disk" icon to access the files on your phone's memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows: **MP3 files:** > mobile > audio
screen savers: > mobile > picture
wallpapers: > mobile > picture
video clips: > mobile > video
- 4 When you finish, remove the device by selecting the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen. Then select "USB Mass Storage Devices" and "Stop".
- 5 Select "USB Mass Storage Device" then "OK".

On your phone:

To return to **Data Fax** as your USB default connection, press  > **Settings** > **Connection** > **USB Settings** > **Data/Fax Connection**.

Bluetooth® wireless

Your phone supports Bluetooth wireless *pairing* (also called *linking* or *bonding*). You can pair your phone with a Bluetooth headset or car kit, or pair your phone with a computer to exchange and synchronize files.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

turn Bluetooth power on or off

Find it: Press  > **Bluetooth Link** > **Setup** > **Power** > **On**


If Bluetooth **Power** is **On**, your phone can automatically pair with the handsfree device you have used before. Just turn on the device or move it near the phone.

Note: To extend battery life, use the above procedure and set Bluetooth **Power** to **Off** when not in use. Your phone will not pair with devices until you set Bluetooth **Power** back to **On** and pair your phone with the devices again.

pair with a headset or handsfree device


Before you try to pair your phone with a device, make sure your phone's Bluetooth power is **on** and the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's

guide for the device). You can pair your phone with only one device at a time.

Find it: Press  > **Bluetooth Link** > **Handsfree** > **[Look For Devices]** 


Your phone lists the devices it finds within range.

- 1 Highlight a device in the list and press the **Select** key.
- 2 Press the **Yes** or **OK** key to pair with the device.
- 3 If necessary, enter the device passkey (such as 0000) and press the **OK** key.


When your phone is paired, the Bluetooth indicator  shows in the home screen.

Tip: We can't see the device you're holding. For specific information about a device, refer to the instructions that came with it.


copy objects to another device

You can use Bluetooth pairing to copy a media object, phonebook entry, datebook event, or bookmark from your phone to a computer or other device. 

Note: You cannot copy a copyrighted object.








- 1 Highlight the object on your phone that you want to copy to the other device.
- 2 Press  and select **Copy** (for media objects), **Send** (for datebook events), or **Share Phonebook Entry** (for phonebook entries).






- 3 Select a recognized device name, or **[Look For Devices]** to search for the device where you want to copy the object.

Note: Once you connect your phone to a Bluetooth device, that device can start a similar Bluetooth connection with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection. To change a device's **Access** setting, see page 24.

advanced Bluetooth features

A device is *recognized* after you pair with it once (see page 21).


features		
make phone visible to other device	Allow a Bluetooth device to discover your phone:  > Bluetooth Link > Setup > Find Me	
pair with recognized device	Pair your phone with a recognized handsfree device:  > Bluetooth Link > Handsfree > <i>device name</i>	
drop pairing with device	Highlight the device name and press the Drop key.	
switch to recognized device during call	During a call, press  > Use Bluetooth to switch to a recognized headset or car kit.	

features	
move multimedia object to device	<p>Move a multimedia object to another device: </p> <p>Highlight the object, press  > Move, select the device name.</p> <p>Caution: Moving an object deletes the original object from your phone.</p>
edit device properties	<p>Edit the properties of a recognized device: </p> <p>Highlight the device name, press the Edit/Add key.</p>
set Bluetooth options	<p>Highlight the device name, press  > Bluetooth Link > Setup </p>


basics


 
See page 1 for a basic phone diagram.


display

The *home screen* shows when you turn on the phone. To dial a number from the home screen, press number keys and .

Note: Your home screen may look different from the one below, depending on your service provider.

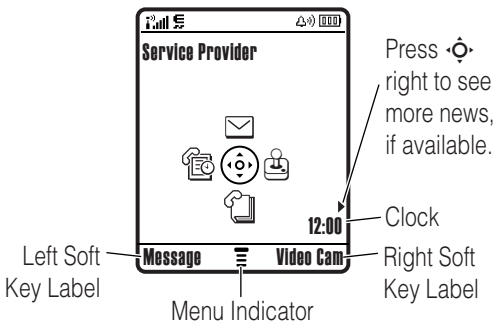

The *Menu Indicator*  shows that you can press  to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.

Your home screen might show news from your service provider at the bottom. To change this news view, press  > **Settings** > **Personalize** > **Home Screen**.



